BLOCK 1063.84 LOT 1 QUALIFICATION CODE _____ ADDRESS (SITE) _____ PERMIT NO. 3925-97

RECEIVED
DEC 18 1997
DIV. OF CONSTRUCTION

CONSTRUCTION PERMIT APPLICATION

NEW JERSEY UNIFORM CONSTRUCTION CODE

Application Completes: Sections I, II, III (optional), IV, VI, and VII

I. IDENTIFICATION

1. Propsed Work Site at: 250 Prospect Dr Brick Twp NJ
2. Name of Owner in Fee: Richard Thoenick Tel. [redacted]
   Address 50 N. Gateway (street) Toms River (municipality) NJ (zip code)
3. Ownership in Fee: Public _____ Private ✓
4. Principal Contractor: AR Mechanical Tel. (732) 774-0165
   Address 85 Laurel Ave Neptune City NJ 07753
   License No. OR, if new home, Builder Reg. No. _____ Exp. Date _____
   Federal Employee No. _____ FAX: (732) 502-0028
5. Architect or Engineer _____ Tel. ( ) _____
   Address _____
6. Responsible Person in Charge of Work Anthony Fiorillo Jr
   Tel. (732) 774-0165 FAX (732) 502-0028

Fiorillo - Direct Line

V. FEE SUMMARY (for office use only)

			Update	Update
1.	Building	$		
2.	Electrical			
3.	Plumbing		75	
4.	Fire Protection		46	
5.	Elevator Devices			
6.	Subtotal	$	121	
7.	Less 20% for State Plan Review			
8.	Subtotal	$		
9.	DCA Training Fee			
10.	Subtotal			
11.	Cert. of Occupancy			
12.	Other			
13.	TOTAL	$	121	

VI. BUILDING/SITE CHARACTERISTICS

		(office use only)
1.	Number of Stories 1	
2.	Height of Structure _____ ft.	
3.	Area — Largest Floor 900 sq. ft.	
4.	New Building Area _____ sq. ft.	
5.	Volume of New Structure _____ cu. ft.	
6.	Construction Classification _____	
7.	Total Land Area Disturbed _____ sq. ft.	
8.	Flood Hazard Zone _____	
9.	Base Flood Elevation _____ ft.	
10.	Wetlands yes _____	
	no _____	
11.	Max. Live Load _____	
12.	Max. Occupancy Load _____	

II. PROPOSED WORK

		Est. Cost	Plans Rec'd by	Date Rec'd	Rejection Date	Approval Date	Re-viewer	Resubmission Dates Approval	Resubmission Dates Rejection	Re-viewer
1.	☐ Minor Work									
2.	☐ New Building									
3.	☐ Addition									
4.	☐ Alteration									
5.	☑ Fire Protection					12/18/97		1/4/98		
6.	☑ Plumbing					12/18/97		12/26/97		
7.	☐ Electrical									
8.	☐ Elevator Devices									
9.	☐ Asbestos Abat. Subch. 8									
10.	☐ Lead Hazard Abatement									
11.	☐ Demolition									
	TOTAL COSTS	500								

OPTIONAL (for office use only)

III. DO YOU WANT: (optional)

1. ☐ Partial Releases
2. ☐ Prototype Processing

IV. DOES OR WILL YOUR BUILDING CONTAIN ANY OF THE FOLLOWING?

1. ☐ Elevators/Escalators/Lifts/ Dumbwaiters/Moving Walks
2. ☐ High Pressure Boilers
3. ☐ Pressure Vessels
4. ☐ Refrigeration Systems
5. ☐ Cross-Connections/Backflow Preventers
6. ☐ Hazardous Uses/Places of Assembly
7. ☐ Sprinklers
8. ☐ Smoke Control Systems in Open Wells
9. ☐ Underground Storage Tanks

VII. DESCRIPTION OF BUILDING USE

A. RESIDENTIAL

1. ☐ Hotels (R-1)
2. ☐ Multi-Family (R-2)
3. ☐ Two-Family (R-3) BOCA
4. ☐ Two-Family (R-4) CABO
5. ☐ One-Family (R-3) BOCA
6. ☒ One-Family (R-4) CABO

No. of dwelling units:
Before Construction _____
After Construction _____
Net Gain or Loss _____

B. NON-RESIDENTIAL

1. State Specific Use:
2. Use Group:
3. Change in Use Group, Indicate Former:

LDS BR 10100028

CERTIFICATION IN LIEU OF OATH

I. OWNER SECTION (to be completed if the applicant is the owner in fee)

I hereby certify that I am the owner in fee of the property listed on Page 1.

Mark the following applicable boxes:

A. ( ) I further certify that a new home (private residence) will be constructed on this property for my own use and occupancy. This dwelling is to be occupied by myself and is not to be used for any purpose other than single family residential use. I attest that all construction, plumbing, or electrical work will be done, in whole or in part, by me or by subcontractors under my supervision, in accordance with all applicable laws; and, I further acknowledge that said new home is not covered under the New Home Warranty and Builders Registration Act (N.J.S.A. 46:3B-1 et seq.) and that such fact shall be disclosed to any person purchasing this property within ten years of the date of issuance of a certificate of occupancy.

I UNDERSTAND THAT IN MARKING BOX A, I ACKNOWLEDGE THAT I AM ASSUMING RESPONSIBILITY FOR THE WORK DONE ON SAID PROPERTY, THE CONDITION OF THE PROPERTY PRIOR TO, DURING, AND AFTER ANY WORK PERFORMED, AND FOR THE PERFORMANCE OF THE SUBCONTRACTORS I HIRE, EMPLOY, OR OTHERWISE CONTRACT OR WITH WHOM I MAKE AGREEMENTS TO PERFORM WORK. I AM VOLUNTARILY AND KNOWINGLY ASSUMING THIS RESPONSIBILITY.

B. ( ) I further certify the following as required by the New Jersey Uniform Construction Code, N.J.A.C. 5:23-2.15(e)1.vii:

I personally prepared the plans submitted for: 1) the new home referred to in A.; or, 2) an addition, alteration, renovation, or repair to an existing single family residence owned and occupied by myself and located on the property listed on Page 1; or, 3) a new structure that will be physically separate from, but that will be deemed part of, an existing single family residence that is owned and occupied by myself and located on the property listed on Page 1.

C. ( ) I further certify that I will perform or supervise the following work:
C.1. ( ) Building C.2. ( ) Fire Protection

I further certify that I will perform the following work:
C.3. ( ) Electrical C.4. ( ) Plumbing

D. ( ) I agree to advise all contractors on this project that they are required to be registered with the New Jersey Division of Taxation and to comply with all New Jersey tax laws.

I further certify the following as required by the Uniform Construction Code, N.J.A.C. 5:23-2.15(a)5: All required State, county, and local prior approvals have been given, including such certification as the construction official may require.

I understand that if any of the above statements are willfully false, I am subject to punishment.

Signature _____ Date _____

II. AGENT SECTION (to be completed if the applicant is not the owner in fee)

I hereby certify the following as required by the Uniform Construction Code, N.J.A.C. 5:32-2.15(d): the proposed work is authorized by the owner in fee; and I have been authorized by the owner in fee to make this application as his agent.

I further certify the following as required by the Uniform Construction Code, N.J.A.C. 5:23-2.15(a)5: All required State, county, and local prior approvals have been given, including such certification as the construction official may require.

I agree to advise all contractors on this project that they are required to be registered with the New Jersey Division of Taxation and to comply with all New Jersey tax laws.

I understand that if any of the above statements are willfully false, I am subject to punishment.

(✓ Check if contractor.

Agent Name AP Mechanical Anthony Stamulis, Jr

Address 85 Laurel Ave

Neptune City, NJ 07753

Telephone (732) 774-0165

Signature A Stamulis

III. ( ) LEAD HAZARD ABATEMENT: Include Homeowner or Building Owner Affidavit as per N.J.A.C. 5:17.

OFFICE DATE RECEIVED: _____

VIII. PRIOR APPROVALS CHECKLIST (office use only)	LOCAL APPROVAL		COUNTY APPROVAL		REGIONAL APPROVAL		STATE APPROVAL		COMMENTS
	Prelimin. Initial	Final Date	Prelimin. Initial	Final Date	Prelimin. Initial	Final Date	Prelimin. Initial	Final Date	
☐ Zoning Officer									
☐ Planning Board									
☐ Zoning Board									
☐ Sewer Authority									
☐ Water Authority									
☐ Police Department									
☐ Health Department									
☐ Soil Conservation									
☐ N.J. Department of Community Affairs									
☐ N.J. Department of Transportation									
☐ N.J. Department of Environmental Protection									
☐ Utility Dig No.									
☐									
☐									

IX. SUBCODES AND SPECIAL REGULATIONS APPLICABLE (office use only—optional)

Name of Code & Edition		**Name of Code & Edition**		
Building	_____	Energy	_____	Other _____
Electrical	_____	Barrier Free	_____	_____
Plumbing	_____	Flood Hazard	_____	_____
Fire Protection	_____	As Built Elevation Cert.	_____	_____
Mechanical	_____	Other	_____	_____

X. CERTIFICATES ISSUED (office use only)

		DATE ISSUED	DATE EXPIRED	DATE REISSUED	DATE EXPIRED
☐ Temporary Certificate of Occupancy	No. _____	_____	_____	_____	_____
☐ Temporary Certificate of Compliance	No. _____	_____	_____	_____	_____
☐ Continued Certificate of Occupancy	No. _____	_____	_____	_____	_____
☐ Certificate of Compliance	No. _____	_____	_____	_____	_____
☐ Certificate of Occupancy	No. _____	_____	_____		
☐ Certificate of Approval	No. _____	_____	_____		
☐ Lead Abatement Clearance Certificate	No. _____	_____	_____	_____	_____

CONSTRUCTION PERMIT

Date Issued 12-19-97
Control #
Permit # 3925-97

IDENTIFICATION Block 1083.84 Lot 1

Work Site Location 250 Prospect St Contractor A.P. Mechanical

Address 83 Laurel Ave Neptune City

Owner in Fee Spencer

Address 50 W Harrison Tinton Falls

Tele. ( ) [redacted] Tele. ( ) 774-0165

Lic. No. or Bldrs. Reg. No. _____ Exp. Date _____

Federal Emp. No. _____

or Social Security No. _____

is hereby granted permission to perform the following work:

[ ] BUILDING [X] PLUMBING [ ] OTHER _____

[ ] ELECTRICAL [X] FIRE PROTECTION

[ ] ELEVATOR DEVICES

DESCRIPTION OF WORK:

Furnace

NOTE: If construction does not commence within one (1) year of date of issuance, or if construction ceases for a period of six (6) months, this permit is void.

Estimated Cost of Work $ 500 —

CONSTRUCTION OFFICIAL

PAYMENTS (Office Use Only)	
Building	
Plumbing	25 —
Electrical	
Fire Protection	46 —
Other	
Other	
DCA Training Fee	
Cert. of Occ.	
Other	
Total	71 —
Check No.	X
Cash	
Collected By:	DT

U.C.C. Form F-170C

1 - WHITE - OFFICE 2 - CANARY - TAX ASSESSER 3 - PINK - JACKET 4 - GOLD - APPLICANT

REQUIRED INSPECTIONS

Construction work must be inspected in accordance with the State Uniform Construction Code Regulations N.J.A.C. 5:23-2.18. This agency will carry out such periodic inspections during the progress of work as are necessary to insure that work installed conforms to the approved plans and the requirements of the Uniform Construction Code.

The owner or other responsible person in charge of work must notify this agency when work is ready for any required inspections specified below. Requests for inspections must be made at least 24 hours prior to the time the inspection is desired. Inspections will be performed within three business days of the time for which they are requested. The work must not proceed in a manner which will preclude the inspection until it has been made and approval given.

☐ Required inspections for all subcodes for one and two family dwellings are the following:

1. The bottom of footing trenches before placement of footings, except that in the case of pile foundations, inspections shall be made in accordance with the requirements of the building subcode;
2. Foundations and all walls up to grade level prior to back filling;
3. All structural framing and connections prior to covering with finish or infill material; plumbing underground services, rough piping, water service, sewer, septic services and storm drains; electrical rough wiring, panels and service installations; insulation installations;
4. Installation of all finished materials, sealings of exterior joints; plumbing piping, trim and fixtures; electrical wiring, devices and fixtures; mechanical systems equipment.

☐ Required special inspections. The applicant by accepting the permit will be deemed to have consented to these requirements:

☐ A final inspection is required for each applicable subcode area before a final Certificate of Occupancy or Approval may be issued Any violations of the approved plans and/or permit will be noted and the holder of the permit notified of discrepancies.

☐ A complete copy of approved plans must be kept on the job site.

If you do not understand any of this information, please ask.

PLUMBING SUBCODE TECHNICAL SECTION

NEW JERSEY UNIFORM CONSTRUCTION CODE

Date Received 12-19-97
Date Issued
Control #
Permit # 3925-97

A. IDENTIFICATION—APPLICANT: COMPLETE ALL APPLICABLE INFORMATION. WHEN CHANGING CONTRACTORS, NOTIFY THIS OFFICE. CALL UTILITY DIG NO: 1-800-272-1000.

Block 1083.84 Lot 1
Work Site Location 250 Prospect Dr
Bricktown, NJ.
Owner in Fee Richard Shoenick
Address 50 N. Gateway
[redacted]
Tele. [redacted]
Contractor AR Mechanical
Address 85 Laurel Ave.
Neptune City, NJ. 07753
Tele. (732) 774-0165 Fax (732) 502-0028
Lic. No.
Federal Emp. No. [redacted]

B. PLUMBING CHARACTERISTICS

Use Group Present Proposed
Building Sewer Size Public Sewer Private Septic
Water Service Size Public Water Private Well
Est. Cost of Plumbing Work $ 1200.00

JOB SUMMARY (Office Use Only)

PLAN REVIEW
[ ] No Plans Required
Joint Plan Review Required:
[ ] Building [ ] Electric
[ ] Fire [ ] Elevator
[X] Plumbing Plans Approved
Date: 12-18-97
Approved by: JCN

SUBCODE APPROVAL
[ ] CO [ ] CCO [ ] CA
Date:
Approved by:

INSPECTIONS Type:	Failure	Dates (Month/Day) Failure	Approval	Initial
Slab				
Rough				
Water				
Sewer				
Fixtures				
Gas Equipment				
Gas Piping				
Solar				
TCO				

C. CERTIFICATION IN LIEU OF OATH

I hereby certify that I am the (agent of) owner of record and am authorized to make this application and perform the work listed on this application.

Anthony Stamulis Jr
Signature — Contractor's Seal

[ ] Licensed Plumbing Contractor [X] Exempt Applicant

D. TECHNICAL SITE DATA (List of all fixtures.)

NO.	FIXTURE/EQUIPMENT	FEE (Office Use Only)
	Water Closet	$
	Urinal/Bidet	
	Bath Tub	
	Lavatory	
	Shower	
	Floor Drain	
	Sink	
	Dishwasher	
	Drinking Fountain	
	Washing Machine	
	Hose Bibb	
	Water Heater	
	Fuel Oil Piping	
1	Gas Piping	25
	Steam Boiler	
	Hot Water Boiler	
	Sewer Pump	
	Interceptor/Separator	
	Backflow Preventer	
	Greasetrap	
	Sewer Connection	
	Water Service Connection	
	Stacks	
	Other	
	Other	
	Other	

Administrative Surcharge	$	
Minimum Fee	$	
DCA Training Fee	$	
TOTAL FEE	$	25

PLUMBING SUBCODE TECHNICAL SECTION

NEW JERSEY UNIFORM CONSTRUCTION CODE

Date Received 12-19-97
Date Issued
Control #
Permit # 3925-97

A. IDENTIFICATION—APPLICANT: COMPLETE ALL APPLICABLE INFORMATION. WHEN CHANGING CONTRACTORS, NOTIFY THIS OFFICE. CALL UTILITY DIG NO: 1-800-272-1000.

Block 1083.84 Lot 1
Work Site Location 250 Prospect Dr
Brick town NJ.
Owner in Fee Richard Shoenick
Address 50 N Gateway
[redacted]
Tele.
Contractor AR Mechanical
Address 85 Laurel Ave
Neptune City NJ. 07753
Tele. (732) 774-0465 Fax (732) 502-0078
Lic. No.
Federal Emp. No. [redacted]

B. PLUMBING CHARACTERISTICS

Use Group Present Proposed
Building Sewer Size Public Sewer Private Septic
Water Service Size Public Water Private Well
Est. Cost of Plumbing Work $ 1200.00

JOB SUMMARY (Office Use Only)

PLAN REVIEW
[ ] No Plans Required
Joint Plan Review Required:
[ ] Building [ ] Electric
[ ] Fire [ ] Elevator
[X] Plumbing Plans Approved
Date: 12-18-97
Approved by: DN

SUBCODE APPROVAL
[ ] CO [ ] CCO [X] CA
Date: 12-18-97
Approved by: DN

INSPECTIONS Type:	Failure	Failure	Approval	Initial
		Dates (Month/Day)		
Slab				
Rough				
Water				
Sewer				
Fixtures				
Gas Equipment				
Gas Piping			12-19-97	DN
Solar				
TCO				

C. CERTIFICATION IN LIEU OF OATH

I hereby certify that I am the (agent of) owner of record and am authorized to make this application and perform the work listed on this application.

Anthony Stamulis
Signature — Contractor's Seal

[ ] Licensed Plumbing Contractor [X] Exempt Applicant

D. TECHNICAL SITE DATA (List of all fixtures.)

NO.	FIXTURE/EQUIPMENT	FEE (Office Use Only)
	Water Closet	$
	Urinal/Bidet	
	Bath Tub	
	Lavatory	
	Shower	
	Floor Drain	
	Sink	
	Dishwasher	
	Drinking Fountain	
	Washing Machine	
	Hose Bibb	
	Water Heater	
	Fuel Oil Piping	
1	Gas Piping	25
	Steam Boiler	
	Hot Water Boiler	
	Sewer Pump	
	Interceptor/Separator	
	Backflow Preventer	
	Greasetrap	
	Sewer Connection	
	Water Service Connection	
	Stacks	
	Other	
	Other	
	Other	

Administrative Surcharge	$	
Minimum Fee	$	
DCA Training Fee	$	25
TOTAL FEE	$	

U.C.C. F130 (rev. 3/96)

1 White = Inspector Copy
2 Canary = Office Copy
3 Pink = Office Copy
4 Gold = Applicant Copy

1-P-4

FIRE PROTECTION SUBCODE
TECHNICAL SECTION

Date Received 12-19-97
Date Issued
Control #
Permit # 3925-97

A. IDENTIFICATION—APPLICANT: COMPLETE ALL APPLICABLE INFORMATION. WHEN CHANGING CONTRACTORS, NOTIFY THIS OFFICE. CALL UTILITY DIG NO: 1-800-272-1000.

Block 1083.84 Lot 1
Work Site Location 250 Prospect Dr
Brick town, N.J. 08753
Owner in Fee Richard Spoenick
Address 50 N. Gateway
Tom's River N.J.
Tele [redacted]
Contractor A.A.E. Mechanical
Address 25 Laurel Ave
Neptune City N.J. 07753
Tele. (732) 774-0165
Lic. No. [redacted]
Federal Emp. No. _____ or Social Security No

B. FIRE PROTECTION CHARACTERISTICS

Use Group Present _____ Proposed _____
Constr. Class. Present _____ Proposed _____
Heating Systems [✓] New [ ] Existing
Type: [✓] Gas [ ] Oil [ ] Electrical [ ] Solar
[ ] Other _____
Location: Basement
Total Est. Cost of Fire Prot. Work $ _____ [✓] Other 2" PVC Pipe Flue

JOB SUMMARY (Office Use Only)

PLAN REVIEW:
[ ] No Plans Required
Joint Plan Review Required:
[ ] Bldg. [ ] Plumb.
[ ] Elec. [ ] Elevator
[ ] Fire Plans Approved
Date: 12/18/97
Approved by: _____
SUBCODE APPROVAL:
[ ] CO [ ] CCO [ ] CA
Date: 1/4/98
Approved by: _____

INSPECTIONS:

Type:	Failure	Failure Date (Month/Day)	Approval Date (Month/Day)	Initial
Suppression Test				
Fire Alarm Test				
Smoke Test				
Mechanical				
TCO				
Other				
Other				
Other		12/26/97	12/31/97	

Gas is off Unable to Check operation unable to check specs No manuel Flue vented

C. CERTIFICATION IN LIEU OF OATH

I hereby certify that I am the (agent of) owner of record and am authorized to make this application.

_____
SIGNATURE

No manuel 12/31/97

D. TECHNICAL SITE DATA

Description of Work

Water Supply Source _____
Method of Valve Supervision _____
Local Alarm Supervision _____
Central Supervision _____
Proprietary Supervision _____

Flammable Liquid Storage Tanks ( ) Capacity _____ Fuel _____
Combustible Liquid Storage Tanks ( ) Capacity _____ Fuel _____
L.P.G. Storage Tanks ( ) Capacity _____ Fuel _____
_____ Storage Tanks ( ) Capacity _____ Fuel _____

	Number	FEE (Office Use Only)
Wet Sprinkler Heads		
Dry Sprinkler Heads		
TOTAL		
Smoke Detectors		
Heat Detectors		
TOTAL		
Stand Pipes		
Kitchen Hood Exhaust Systems		
Pre-Engineered Systems		
CO_2 Suppression		
Halon Suppression		
Foam Suppression		
Dry Chemical		
Wet Chemical		
Gas or Oil Fired Appliance		
OTHER 90 # Nat Gas Furnace 1		#0

Administrative Surcharge $ _____
Paid [ ] Check # _____ Minimum Fee $ _____
DCA Training Fee $ _____
Collected by: _____ TOTAL FEE $ _____

U.C.C. Form F-140B
1 White = Inspector Copy
2 Canary = Office Copy
3 Pink = Office Copy
4 Gold = Applicant Copy

1083.84 1

FIRE PROTECTION SUBCODE
TECHNICAL SECTION

Date Received 12-19-97
Date Issued
Control #
Permit # 3925-97

A. IDENTIFICATION—APPLICANT: COMPLETE ALL APPLICABLE INFORMATION. WHEN CHANGING CONTRACTORS, NOTIFY THIS OFFICE. CALL UTILITY DIG NO: 1-800-272-1000.

Block 1083.84 Lot 1
Work Site Location 250 Prospect Dr
Brick Town, N.J. 08753
Owner in Fee Richard Spoenick
Address 50 N. Gateway
[redacted]
Tele. [redacted]
Contractor AR mechanical
Address 15 Laurel Ave
Neptune City N.J. 07753
Tele. (732) 774-0125
Lic. No.
Federal Emp. No. or Social Security No. [redacted]

B. FIRE PROTECTION CHARACTERISTICS

Use Group Present Proposed
Constr. Class. Present Proposed
Heating Systems [✓] New [ ] Existing
Type: [✓] Gas [ ] Oil [ ] Electrical [ ] Solar
[ ] Other
Location: Basement
Total Est. Cost of Fire Prot. Work $ [✓] Other 2" PVC Pipe Flue

JOB SUMMARY (Office Use Only)

PLAN REVIEW:
[ ] No Plans Required
Joint Plan Review Required:
[ ] Bldg. [ ] Plumb.
[ ] Elec. [ ] Elevator
[ ] Fire Plans Approved
Date: 12/18/97
Approved by:
SUBCODE APPROVAL:
[ ] CO [ ] CCO [ ] CA
Date:
Approved by:

INSPECTIONS:

Type	Failure	Failure	Approval	Initial
	Dates (Month/Day)			
Suppression Test				
Fire Alarm Test				
Smoke Test				
Mechanical				
TCO				
Other				
Other				
Other				

C. CERTIFICATION IN LIEU OF OATH

I hereby certify that I am the (agent of) owner of record and am authorized to make this application.

SIGNATURE

D. TECHNICAL SITE DATA

Description of Work 12-19-97
Water Supply Source
Method of Valve Supervision
Local Alarm Supervision
Central Supervision
Proprietary Supervision

Flammable Liquid Storage Tanks ( ) Capacity Fuel
Combustible Liquid Storage Tanks ( ) Capacity Fuel
L.P.G. Storage Tanks ( ) Capacity Fuel
Storage Tanks ( ) Capacity Fuel

	Number	FEE (Office Use Only)
Wet Sprinkler Heads		
Dry Sprinkler Heads		
TOTAL		
Smoke Detectors		
Heat Detectors		
TOTAL		
Stand Pipes		
Kitchen Hood Exhaust Systems		
Pre-Engineered Systems		
CO_2 Suppression		
Halon Suppression		
Foam Suppression		
Dry Chemical		
Wet Chemical		
Gas or Oil Fired Appliance		
OTHER 90+ Nat Gas Furnace	1	44

Administrative Surcharge $
Paid [ ] Check # Minimum Fee $
DCA Training Fee $
Collected by: TOTAL FEE $

U.C.C. Form F-1408
1 White = Inspector Copy
2 Canary = Office Copy
3 Pink = Office Copy
4 Gold = Applicant Copy

MAXIMUM CAPACITY OF PIPE FOR GAS PRESSURE OF 0.5 PSIG OR LESS WITH PRESSURE DROP OF 0.3 INCH WATER COLUMN AND 0.60 SPECIFIC GRAVITY

Pipe size of Schedule 40 standard pipe (inches)	Internal diameter (inches)	Pipe capacity (cubic feet of gas per hour)													
		Length of pipe (feet)													
		10	20	30	40	50	60	70	80	90	100	125	150	175	200
¼	.364	32	22	18	15	14	12	11	11	10	9	8	8	7	6
⅜	.493	72	49	40	34	30	27	25	23	22	21	18	17	15	14
½	.622	132	92	73	63	56	50	46	43	40	38	34	31	28	26
¾	.824	278	190	152	130	115	105	96	90	84	79	72	64	59	55
1	1.049	520	350	285	245	215	195	180	170	160	150	130	120	110	100
1¼	1.380	1,050	730	590	500	440	400	370	350	320	305	275	250	225	210
1½	1.610	1,600	1,100	890	760	670	610	560	530	490	460	410	380	350	320
2	2.067	3,050	2,100	1,650	1,450	1,270	1,150	1,050	990	930	870	780	700	650	610
2½	2.469	4,800	3,300	2,700	2,300	2,000	1,850	1,700	1,600	1,500	1,400	1,250	1,150	1,050	980
3	3.068	8,500	5,900	4,700	4,100	3,600	3,250	3,000	2,800	2,600	2,500	2,200	2,000	1,850	1,700
4	4.026	17,500	12,000	9,700	8,300	7,400	6,800	6,200	5,800	5,400	5,100	4,500	4,100	3,800	3,500

SIZING BASED ON 45' TOTAL RUN FROM POINT OF DELIVERY TO THE REMOTE OUTLET

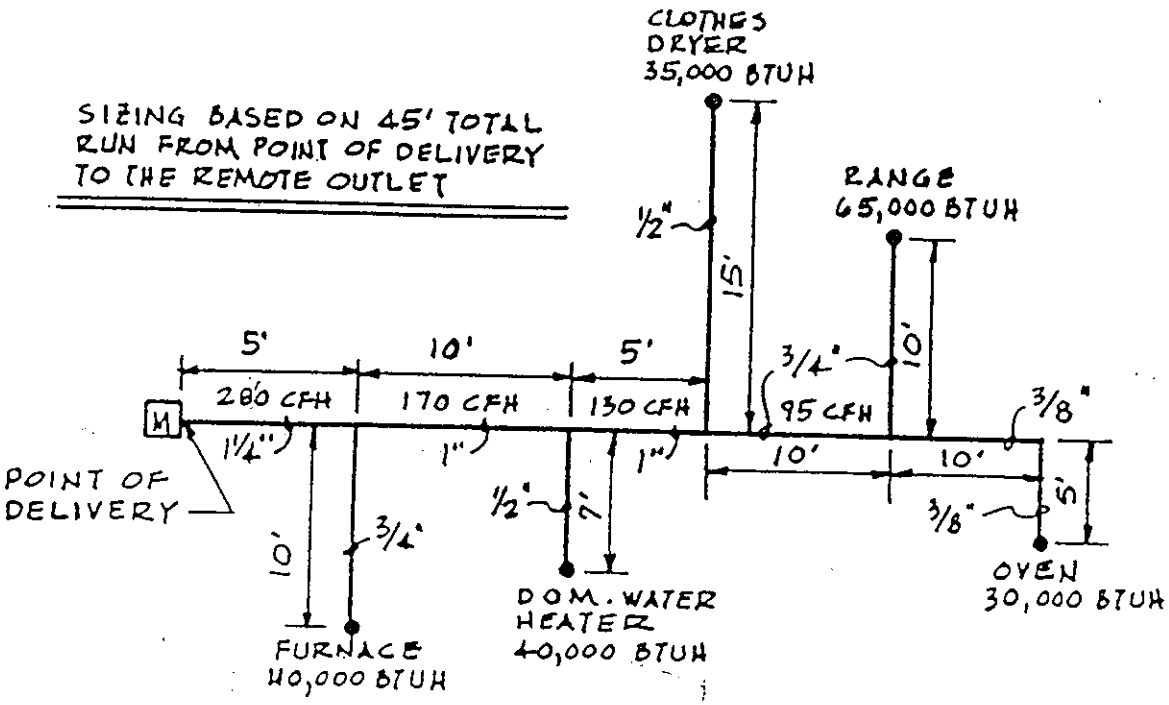

GAS PIPING RISER DIAGRAM

FOR NATURAL GAS, TO CHANGE BTUH TO CFH
1000 BTUH = 1 CFH

$$\frac{\text{BTUH}}{1000} = \text{CFH}$$

Sample

Block 1083.84 Lot 1

Address: 250 Prospect

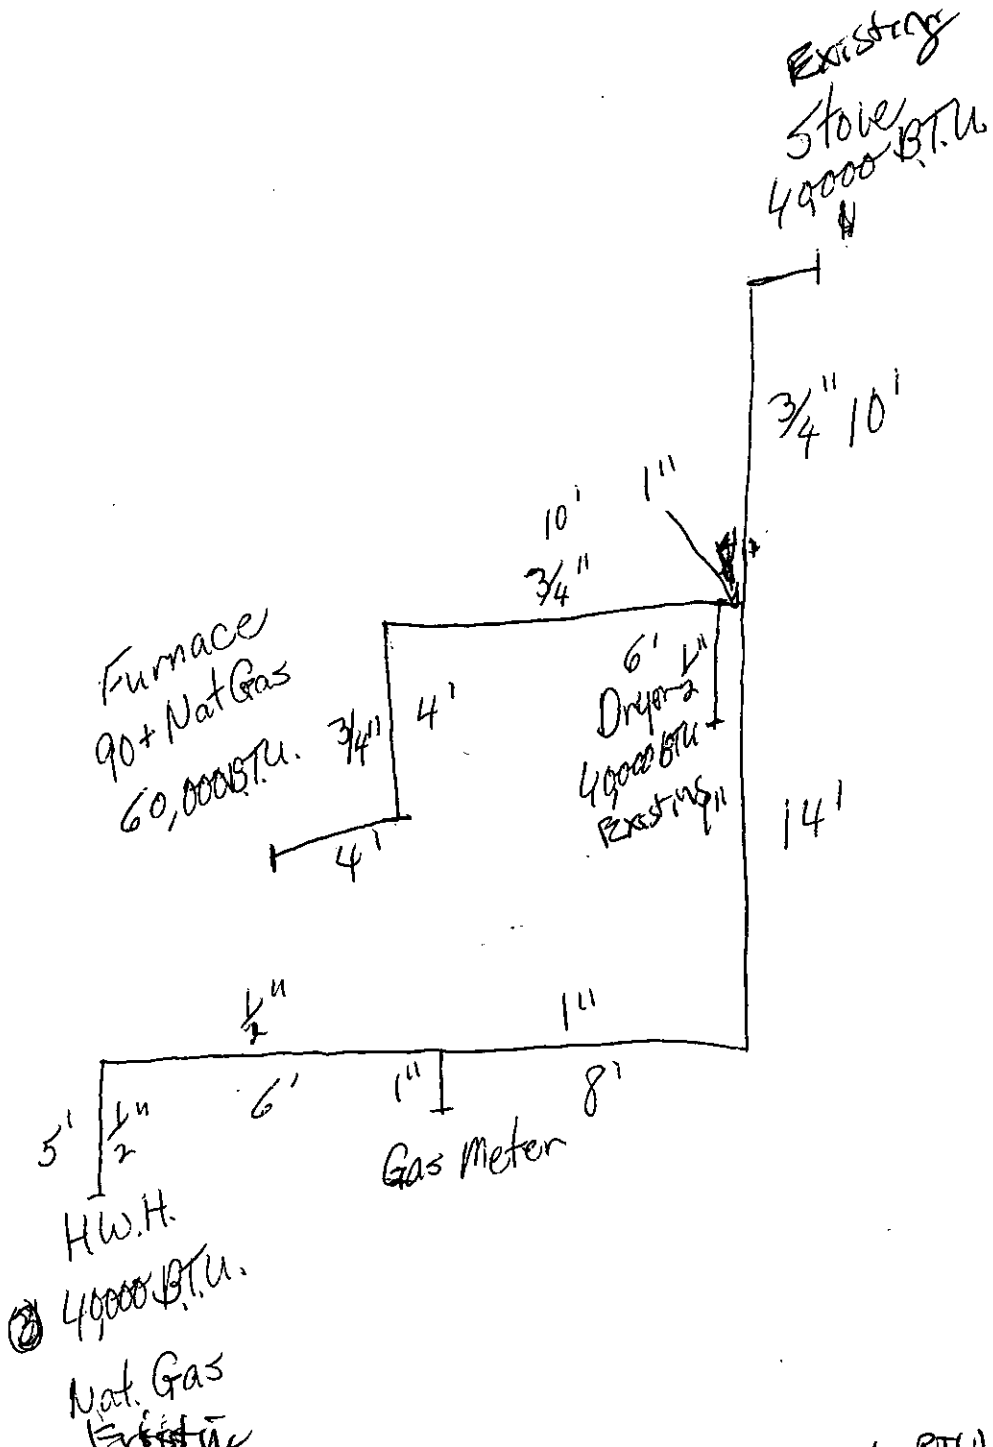

180,000 TOTAL BTU'S

40' TOTAL RUN

12-18-97

INSTALLATION INSTRUCTIONS
FOR UPFLOW & DOWNFLOW/HORIZONTAL HIGH EFFICIENCY CONDENSING GAS FURNACES
UGRA/UGRJ AND UGTA/UGTJ SERIES

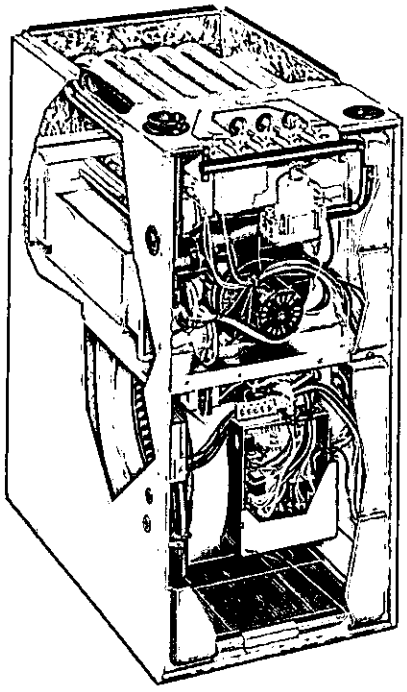

RUUD®

⚠ Recognize this symbol as an indication of Important Safety Information!

⚠ WARNING

If the information in these instructions is not followed exactly, a fire or explosion may result, causing property damage, personal injury or death.

⚠ WARNING

PROPOSITION 65: THIS FURNACE CONTAINS FIBERGLASS INSULATION. RESPIRABLE PARTICLES OF FIBERGLASS ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. EXHAUST GAS FROM THIS FURNACE CONTAINS CHEMICALS, INCLUDING CARBON MONOXIDE, KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

⚠ WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

Do Not Destroy this Manual. Please read carefully and keep in a safe place for future reference by a serviceman.

⚠ FOR YOUR SAFETY

— Do not store or use gasoline or other flammable vapors and liquids, or other combustible materials in the vicinity of this or any other appliance.

— WHAT TO DO IF YOU SMELL GAS
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Do not return to your home until authorized by the gas supplier or fire department.

— DO NOT RELY ON SMELL ALONE TO DETECT LEAKS. DUE TO VARIOUS FACTORS, YOU MAY NOT BE ABLE TO SMELL FUEL GASES.
- U.L. recognized fuel gas and CO detectors are recommended in all applications, and their installation should be in accordance with the manufacturer's recommendations and/or local laws, rules, regulations, or customs

— Improper installation, adjustment, alteration, service or maintenance can cause injury, property damage or death. Refer to this manual. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Accredited by the Dutch Council for Certification

ABS Quality Evaluations, Inc. Quality Assurance Certification

REGISTRAR ACCREDITATION BOARD

ISO 9002

DESIGN AMERICAN GAS ASSOCIATION CERTIFIED

CANADIAN GAS ASSOCIATION ® APPROVED

92-23531-17-08
SUPERSEDES 92-23531-17-07

INSTALLATION CHECK LIST

REFER TO INSTALLATION INSTRUCTIONS

GAS SUPPLY

_____ Adequate pipe size

_____ Correct supply pressure (during furnace operation)

_____ Manifold pressure

_____ No gas leaks

ELECTRICAL

_____ 115 V.A.C. supply (Single Circuit)

_____ Polarity observed

_____ Furnace properly grounded

_____ Adequate wire size

FURNACE INSTALLATION

_____ Adequate clearance to combustibles

_____ Adequate clearance for service (at front)

DUCT STATIC PRESSURE

_____ in. w.c. on heating speed

_____ in. w.c. on cooling speed

_____ Air temperature rise

CONDENSATE LINE

_____ Trap filled with water

_____ Vented

_____ Sloped toward drain

_____ Condensate drain line hoses connected and clamped

_____ Freeze protection (if necessary)

VENTING – DIRECT VENT

_____ in. diameter – intake pipe

_____ in. diameter – exhaust pipe

_____ ft. of pipe – intake air

_____ no. of elbows – intake air

_____ ft. of pipe – exhaust pipe

_____ no. of elbows – exhaust pipe

TERMINATIONS – DIRECT VENT

VERTICAL

_____ Intake – 12" min. above roof/snow level

_____ Correct relationship – exhaust to intake

VERTICAL – CONCENTRIC (RXGY-E02)

_____ Intake – 12" min. above roof/snow level

HORIZONTAL – STANDARD (RXGY-D02, -D03)

_____ Correct relationship – exhaust to intake

_____ 12" min. above grade/snow level

HORIZONTAL – ALTERNATE (RXGY-D02, -D03 OR -D04)

_____ Correct relationship – exhaust to intake

_____ Above anticipated snow level

HORIZONTAL – CONCENTRIC (RXGY-C01)

_____ 12" min. above grade/snow level

_____ Intake "Y" rotated above center

_____ Exhaust sloped toward furnace

VENTING – NON-DIRECT VENT

_____ in. diameter – exhaust pipe

_____ ft. of pipe – exhaust

_____ no. of elbows

TERMINATION – NON-DIRECT VENT

VERTICAL

_____ 12" min. above roof/snow level

HORIZONTAL – STANDARD

_____ 12" min. above grade/snow level

HORIZONTAL – ALTERNATE

_____ Above anticipated snow level

CONTENTS

Safety Precautions 1
Installation Check List 2
Location Requirements and Considerations 5
Venting and Combustion Air Piping 12
Combustion and Ventilation Air 14
Vent Pipe Installation 17
Condensate Drain/Neutralizer 27
Converting Downflow to Horizontal 29
Gas Supply and Piping 31
Electrical Wiring 35
Accessories 37
Start-Up Procedures 44
Air Flow 46
Maintenance 50
Troubleshooting 53
Wiring Diagrams 59

➤ Installation Instructions are updated on a regular basis. This is done as product changes occur or if new information becomes available. In this publication, an arrow (➤) denotes changes from the previous edition or additional new material.

IMPORTANT: *TO INSURE PROPER INSTALLATION AND OPERATION OF THIS PRODUCT, COMPLETELY READ ALL INSTRUCTIONS PRIOR TO ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE, MAINTAIN OR REPAIR THIS PRODUCT. UPON UNPACKING OF THE FURNACE, INSPECT ALL PARTS FOR DAMAGE PRIOR TO INSTALLATION AND START-UP.*

GENERAL INFORMATION

The UGRA/UGRJ and UGTA/UGTJ series furnaces are design-certified by AGA/CGA for use with natural and propane gases as follows:

1. As non-direct vent central forced air furnaces taking combustion air from the installation area or using air ducted from the outside.
2. As direct vent central forced air furnaces with all combustion air supplied directly to the furnace burners through a special air intake system outlined in these instructions.

This furnace should be installed in accordance with the American National Standard Z223.1 – latest edition entitled "National Fuel Gas Code" (NFPA54) and requirements or codes of the local utilities or other authorities having jurisdiction. This is available from the following:

National Fire Protection Association, Inc.
Batterymarch Park
Quincy, MA 02269

American Gas Association
1515 Wilson Blvd.
Arlington, VA 22209

Canadian installations must be installed in accordance with CAN/CGA-B149, local installation codes and authorities having jurisdiction. CAN/CGA-B149 is available from:

Canadian Gas Association
55 Scarsdale Road
Don Mills, Ontario, Canada M3B, 2R3

FIGURE 1
UPFLOW FURNACE

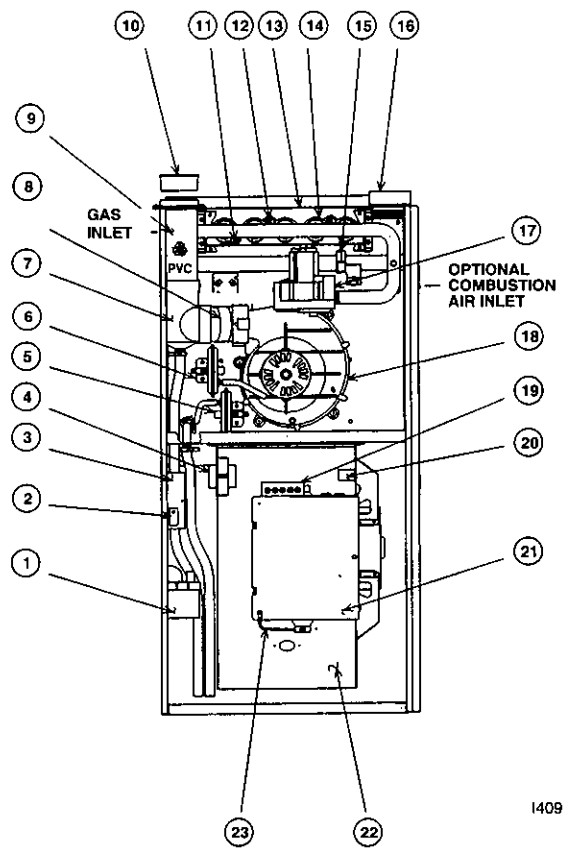

ITEM NO.	PART NAME	ITEM NO.	PART NAME
1	CONDENSATE TRAP	13	TOP PLATE
2	DOOR SWITCH	14	BURNER
3	JUNCTION BOX	15	IGNITER
4	TRANSFORMER	16	COMBUSTION AIR INLET
5	BLOCKED DRAIN PRESSURE SWITCH	17	GAS VALVE
6	MAIN PRESSURE SWITCH	18	INDUCED DRAFT BLOWER
7	EXHAUST TRANSITION	19	LOW VOLTAGE TERMINAL
8	CONNECTOR	20	CAPACITOR
9	OUTLET AIR PIPE	21	ELECTRICAL BOX
10	VENT CAP PLUG	22	BLOWER
11	SENSOR	23	CONTROL BOX COVER GROUND
12	OVERTEMPERATURE SWITCH		

FIGURE 2
DOWNFLOW/HORIZONTAL FURNACE

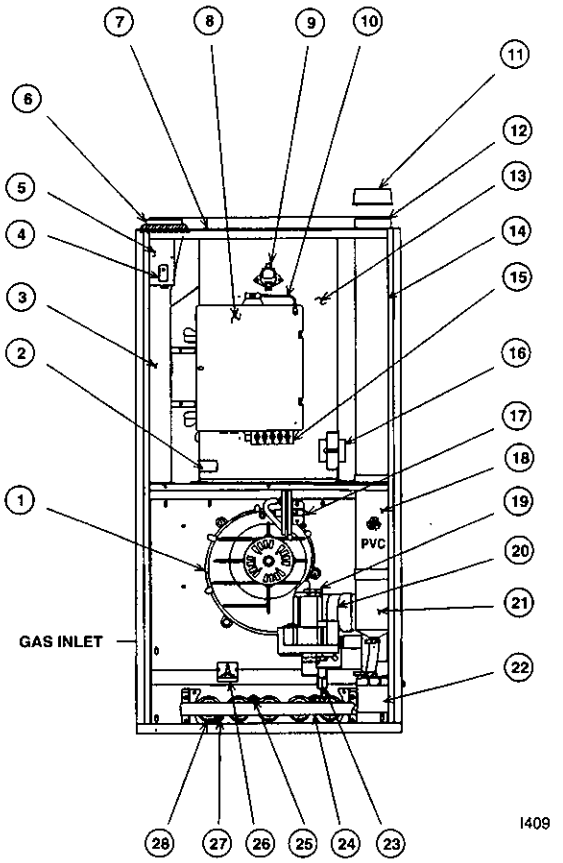

ITEM NO.	PART NAME	ITEM NO.	PART NAME
1	INDUCED DRAFT BLOWER	15	LOW VOLTAGE TERMINAL
2	CAPACITOR	16	TRANSFORMER
3	INLET AIR CHASE	17	PRESSURE SWITCH
4	DOOR SWITCH	18	OUTLET AIR PIPE
5	JUNCTION BOX	19	GAS VALVE
6	INLET PIPE CONNECTOR	20	CONNECTOR
7	TOP PLATE	21	EXHAUST TRANSITION
8	ELECTRICAL BOX	22	CONDENSATE TRAP
9	AUXILLIARY LIMIT	23	IGNITER
10	CONTROL BOX COVER GROUND	24	MANIFOLD
11	VENT CAP PLUG	25	OVERTEMPERATURE SWITCH
12	EXHAUST CONNECTION	26	ROLLOUT SWITCH
13	BLOWER	27	SENSOR
14	EXHAUST PIPE EXTENSION	28	BURNER

LOCATION REQUIREMENTS AND CONSIDERATIONS

GENERAL INFORMATION

1. ***IMPORTANT:*** *If furnace operation is required during construction, and air ladened with corrosive compounds such as chlorine and fluorine are present, provisions must be taken to provide clean outdoor combustion and ventilation air to the furnace. Compounds of chlorine and fluorine, when burned with combustion air, form acids which will cause corrosion of a heat exchanger. Some of these compounds are found in paneling, dry wall, tile adhesives, paints, stains and varnishes, solvents and masonry curing and cleaning materials.*

⚠ WARNING

DO NOT INSTALL THIS FURNACE IN A MOBILE HOME!! This furnace is not approved for installation in a mobile home. Doing so could cause **FIRE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.**

⚠ WARNING

WHEN THIS FURNACE IS INSTALLED IN A RESIDENTIAL GARAGE, IT MUST BE INSTALLED SO THE BURNERS AND IGNITION SOURCE ARE LOCATED NO LESS THAN 18 INCHES ABOVE THE FLOOR. THIS IS TO PREVENT THE RISK OF IGNITING FLAMMABLE VAPORS WHICH MAY BE PRESENT IN A GARAGE. ALSO, THE FURNACE MUST BE LOCATED OR PROTECTED TO AVOID PHYSICAL DAMAGE BY VEHICLES. FAILURE TO FOLLOW THESE WARNINGS CAN CAUSE A FIRE OR EXPLOSION, RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

2. ***IMPORTANT: If installing the unit over a finished ceiling or living area,*** *be certain to install an auxiliary condensate drain pan under the entire unit. This auxiliary drain pan should extend under any evaporator coil installed with the furnace.*
3. ***IMPORTANT: If using a cooling evaporator coil with this furnace:***
   a. *be sure the air passes over the heat exchanger before passing over the cooling coil. The cooled air passing over the warm ambient air inside the heat exchanger tubes can cause condensation inside the tubes resulting in corrosion and eventual failure.*
   b. *install a parallel duct system to divert all the air from the furnace allowing it to pass over the cooling coil only. Use dampers or other means to prevent chilled air from passing over the heat exchanger.*

   If these are manual dampers, they must be equipped to prevent heating or cooling operation unless the damper is in the full heat or cool position.
4. ***IMPORTANT: The furnace must be installed level.*** *If it is not level, condensate cannot drain properly, possibly causing furnace shut down.*

NOTE: These furnaces are approved for installation in attics, as well as alcoves, utility rooms, closets and crawlspaces. Provisions must be made to prevent freezing of condensate.

5. ***IMPORTANT: If this furnace is installed in a garage, attic and/or any unconditioned space, a self-regulating heat tape must be installed around the condensate trap and along the entire length of the condensate drain in the unconditioned space. See Figure 3.***

   When the condensing horizontal gas furnace is installed in an unconditioned space where the temperature would be capable of reaching close to or below 32°F (0°C). A SELF-REGULATING HEAT TAPE IS REQUIRED ON THE CONDENSATE DRAIN, ALONG WITH AN INSULATION WRAP. The heat tape should meet the following requirements:

FIGURE 3
HORIZONTAL FURNACE W/HEAT TAPE ON CONDENSATE TRAP

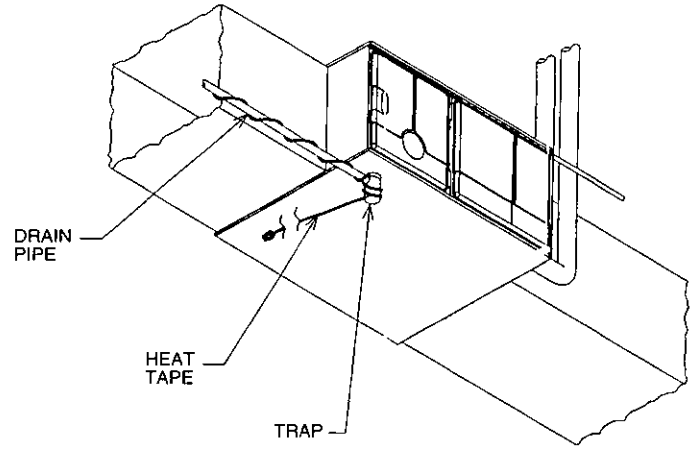

a. *The heat tape must be UL listed.*

b. *The heat tape must be installed per the manufacturer's instructions for the entire length of drain pipe in the unconditioned space.*

c. *The heat tape should be rated at 5 or 6 watts per foot at 120V.*

IMPORTANT: *This unit must be supported when installed. Since this furnace is suitable for attic or crawl space installation, it may be installed on combustible wood flooring or by using support brackets.* ***See Figure 4.***

6. ***IMPORTANT:*** *If installing in a utility room, be sure the door is wide enough to:*

   a. *allow the largest part of the furnace to pass; or*

   b. *allow any other appliance (such as a water heater) to pass.*

7. ***IMPORTANT:*** *This furnace is not approved or recommended for installation on its back, with access doors facing upwards.*

CLEARANCE - ACCESSIBILITY

The design of forced air furnaces with input ratings as listed in the tables under Figures 6, 7 and 8 are certified by the AGA Laboratories and CGA Laboratories for the clearances to combustible materials shown in inches.

FIGURE 4
HORIZONTAL FURNACE INSTALLED W/SUPPORT BRACKETS

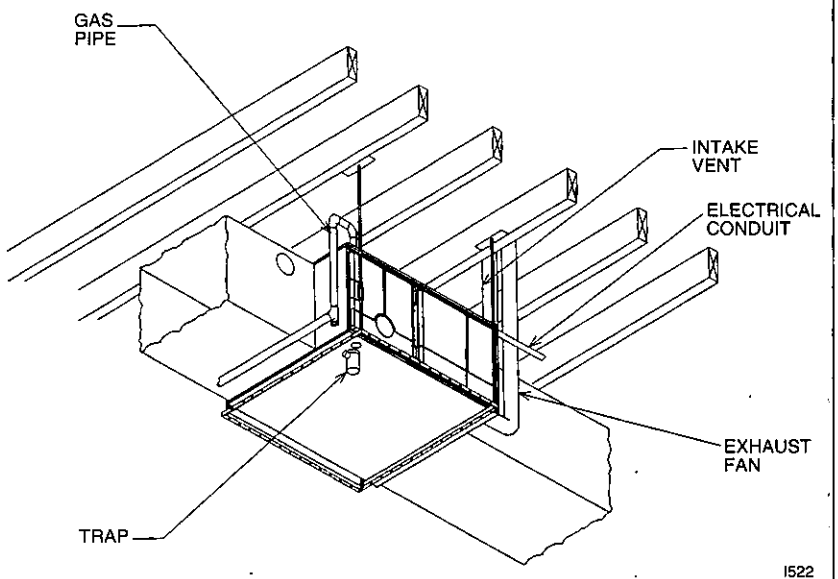

See name/rating plate and clearance label for specific model number and clearance information.

Service clearance of at least 24 inches is recommended in front of all furnaces.

FOR PURPOSES OF SERVICING THIS APPLIANCE, ACCESSIBILITY CLEARANCES, WHERE GREATER, MUST TAKE PRECEDENCE OVER FIRE PROTECTION CLEARANCES.

⚠ WARNING

UPFLOW AND HORIZONTAL FURNACES ARE DESIGN-CERTIFIED FOR INSTALLATION ON COMBUSTIBLE FLOORS. NOTE, HOWEVER, THAT FURNACES MUST NOT BE INSTALLED DIRECTLY ON CARPETING, TILE OR OTHER COMBUSTIBLE MATERIAL OTHER THAN WOOD FLOORING. INSTALLATION ON A COMBUSTIBLE MATERIAL CAN RESULT IN FIRE, CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

Upflow furnaces are shipped with a bottom closure panel installed. When bottom return air is used, remove the panel by removing the two screws attaching the panel to the front base angle. See Figure 5.

SITE SELECTION

1. Select a site in the building near the center of the proposed, or existing, duct system.
2. Give consideration to the vent system piping when selecting the furnace location. Be sure the venting system can get from the furnace to the termination with minimal length and elbows.
3. Locate the furnace near the existing gas piping. Or, if running a new gas line, locate the furnace to minimize the length and elbows in the gas piping.
4. Locate the furnace to maintain proper clearance to combustibles as shown in the following tables.

⚠ WARNING

COMBUSTIBLE MATERIAL MUST NOT BE PLACED ON OR AGAINST THE FURNACE JACKET. THE AREA AROUND THE FURNACE MUST BE KEPT CLEAR AND FREE OF ALL COMBUSTIBLE MATERIALS INCLUDING GASOLINE AND OTHER FLAMMABLE VAPORS AND LIQUIDS. PLACEMENT OF COMBUSTIBLE MATERIALS ON, AGAINST OR AROUND THE FURNACE JACKET CAN CAUSE AN EXPLOSION OR FIRE RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. THE HOMEOWNER SHOULD BE CAUTIONED THAT THE FURNACE AREA MUST NOT BE USED AS A BROOM CLOSET OR FOR ANY OTHER STORAGE PURPOSES.

FIGURE 5
BOTTOM PANEL REMOVAL

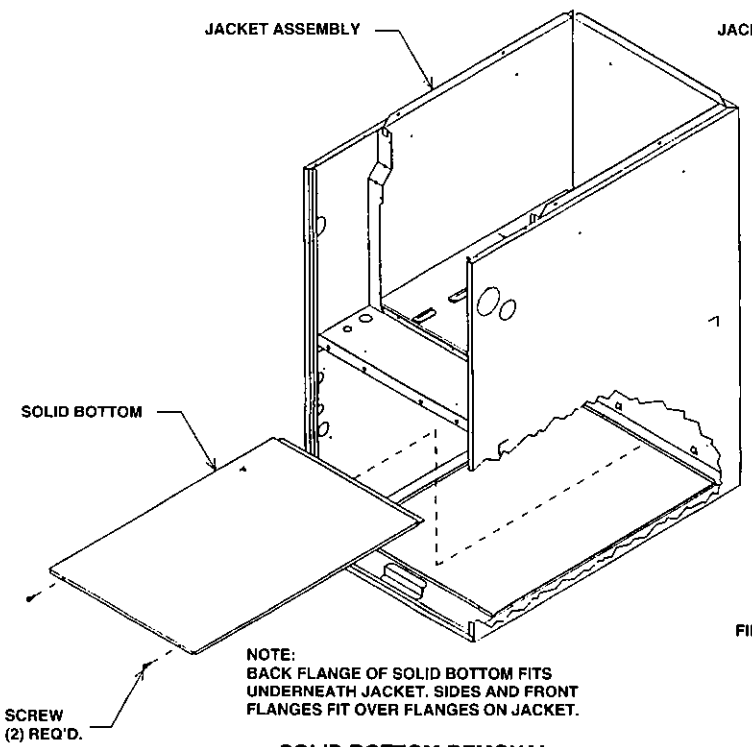

SOLID BOTTOM REMOVAL

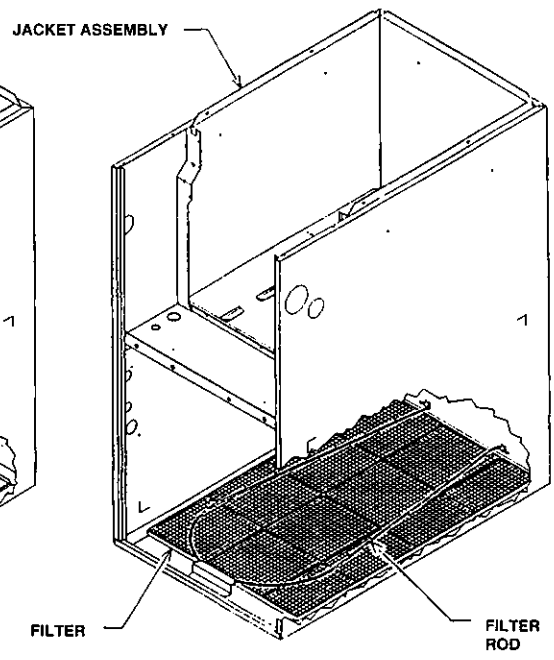

FILTER & ROD LOCATION

FIGURE 6
CLEARANCE TO COMBUSTIBLES, UPFLOW UNITS

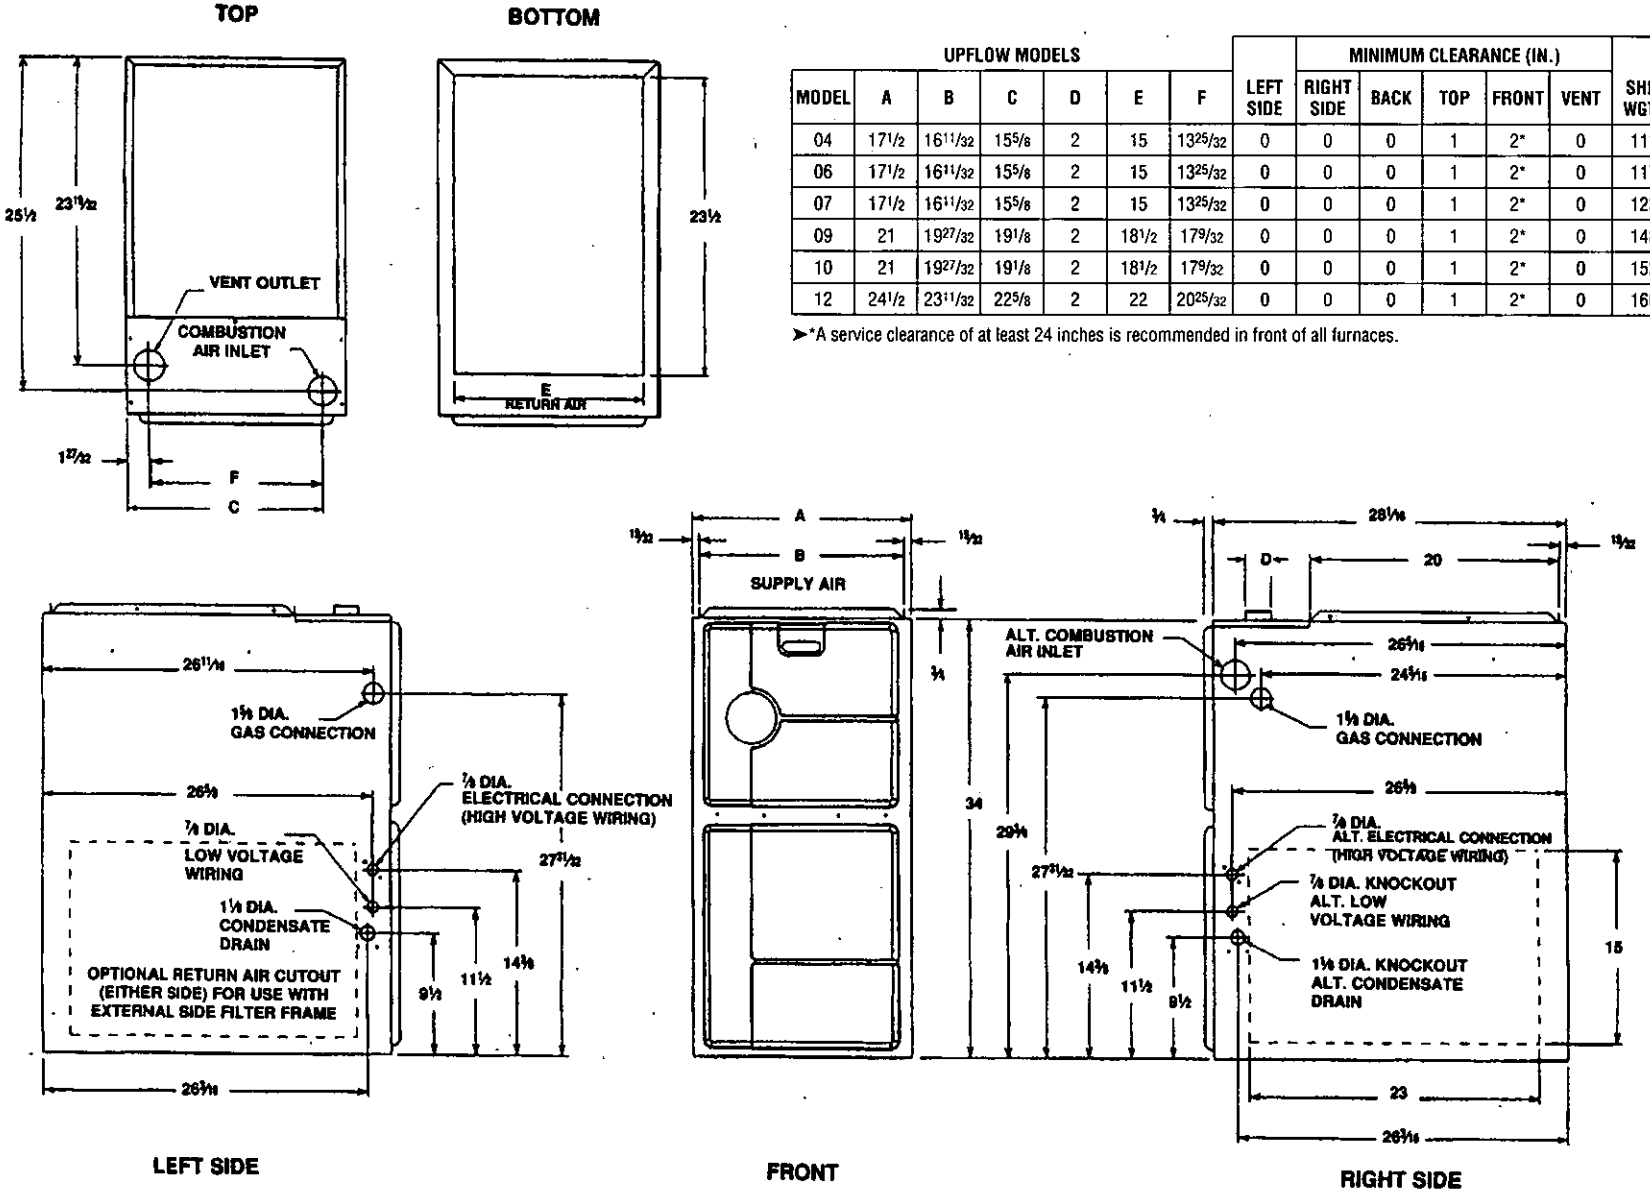

UPFLOW MODELS							LEFT SIDE	MINIMUM CLEARANCE (IN.)					SHIP WGTS
MODEL	A	B	C	D	E	F		RIGHT SIDE	BACK	TOP	FRONT	VENT	
04	17½	16¹¹/₃₂	15⅝	2	15	13²⁵/₃₂	0	0	0	1	2*	0	111
06	17½	16¹¹/₃₂	15⅝	2	15	13²⁵/₃₂	0	0	0	1	2*	0	117
07	17½	16¹¹/₃₂	15⅝	2	15	13²⁵/₃₂	0	0	0	1	2*	0	123
09	21	19²⁷/₃₂	19⅛	2	18½	17⁹/₃₂	0	0	0	1	2*	0	148
10	21	19²⁷/₃₂	19⅛	2	18½	17⁹/₃₂	0	0	0	1	2*	0	152
12	24½	23¹¹/₃₂	22⅝	2	22	20²⁵/₃₂	0	0	0	1	2*	0	160

➤*A service clearance of at least 24 inches is recommended in front of all furnaces.

FIGURE 7
CLEARANCE TO COMBUSTIBLES, DOWNFLOW UNITS

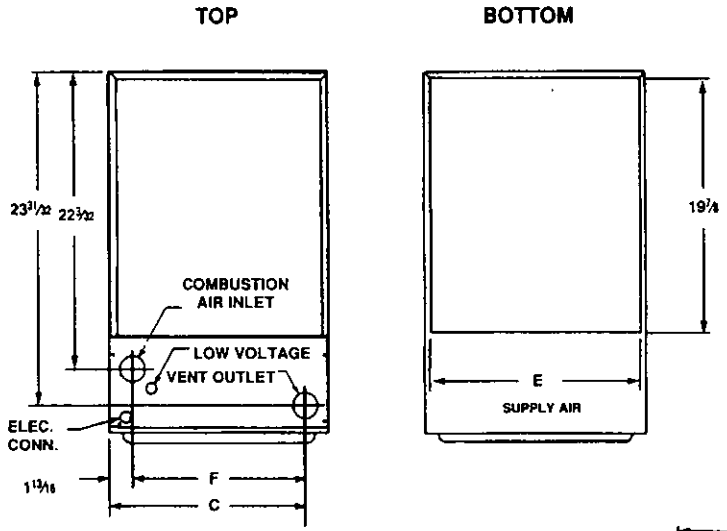

DOWNFLOW MODELS							LEFT SIDE	MINIMUM CLEARANCE (IN.)					SHIP WGTS
MODEL	A	B	C	D	E	F		RIGHT SIDE	BACK	TOP	FRONT	VENT	
04	17 1/2	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	111
06	17 1/2	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	117
07	17 1/2	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	123
09	21	19 27/32	19 3/16	2	20 1/8	17 3/8	0	0	0	1	2*	0	148
10	21	19 27/32	19 3/16	2	20 1/8	17 3/8	0	0	0	1	2*	0	152
12	24 1/2	23 11/32	22 5/8	2	23 5/8	20 7/8	0	0	0	1	2*	0	160

➤*A service clearance of at least 24 inches is recommended in front of all furnaces.

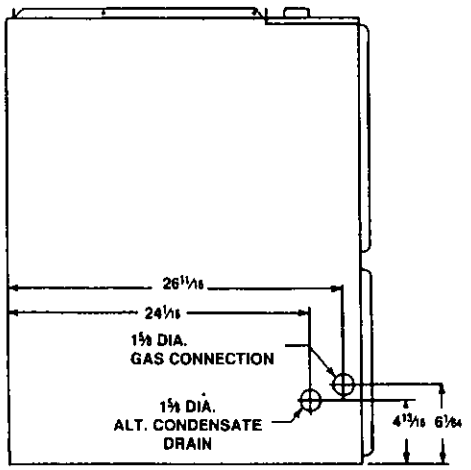

LEFT SIDE

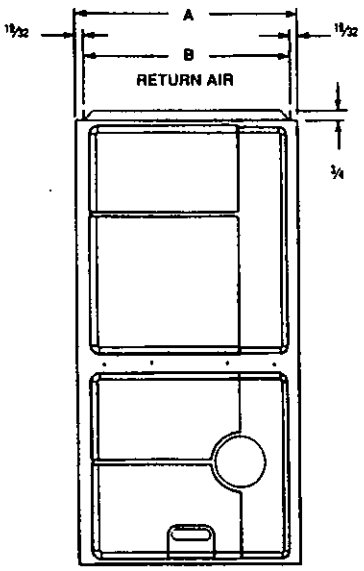

FRONT

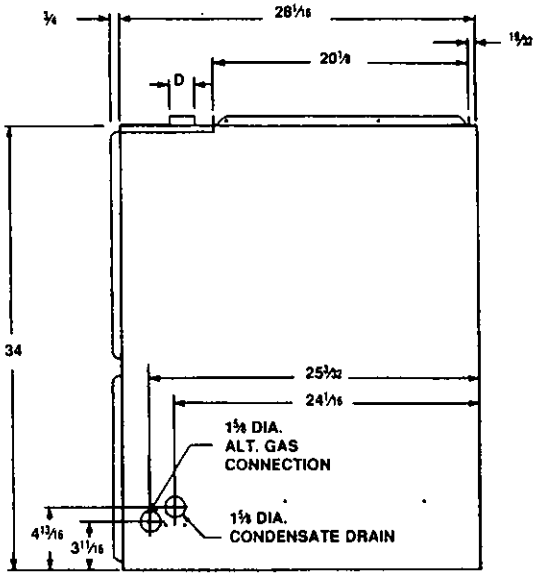

RIGHT SIDE

1393

➤ FIGURE 8
CLEARANCE TO COMBUSTIBLES, HORIZONTAL UNITS

DOWNFLOW MODELS								MINIMUM CLEARANCE (IN.)						SHIP WGTS
MODEL	A	B	C	D	E	F	LEFT SIDE	RIGHT SIDE	BACK	TOP	FRONT	VENT	
04	17½	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	111
06	17½	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	117
07	17½	16 11/32	15 5/8	2	16 5/8	13 7/8	0	0	0	1	2*	0	123
07	21	19 27/32	19 3/16	2	20 1/8	17 3/8	0	0	0	1	2*	0	123
09	21	19 27/32	19 3/16	2	20 1/8	17 3/8	0	0	0	1	2*	0	148
10	21	19 27/32	19 3/16	2	20 1/8	17 3/8	0	0	0	1	2*	0	152
12	24½	23 11/32	22 5/8	2	23 5/8	20 7/8	0	0	0	1	2*	0	160

*A service clearance of at least 24 inches is recommended in front of all furnaces.

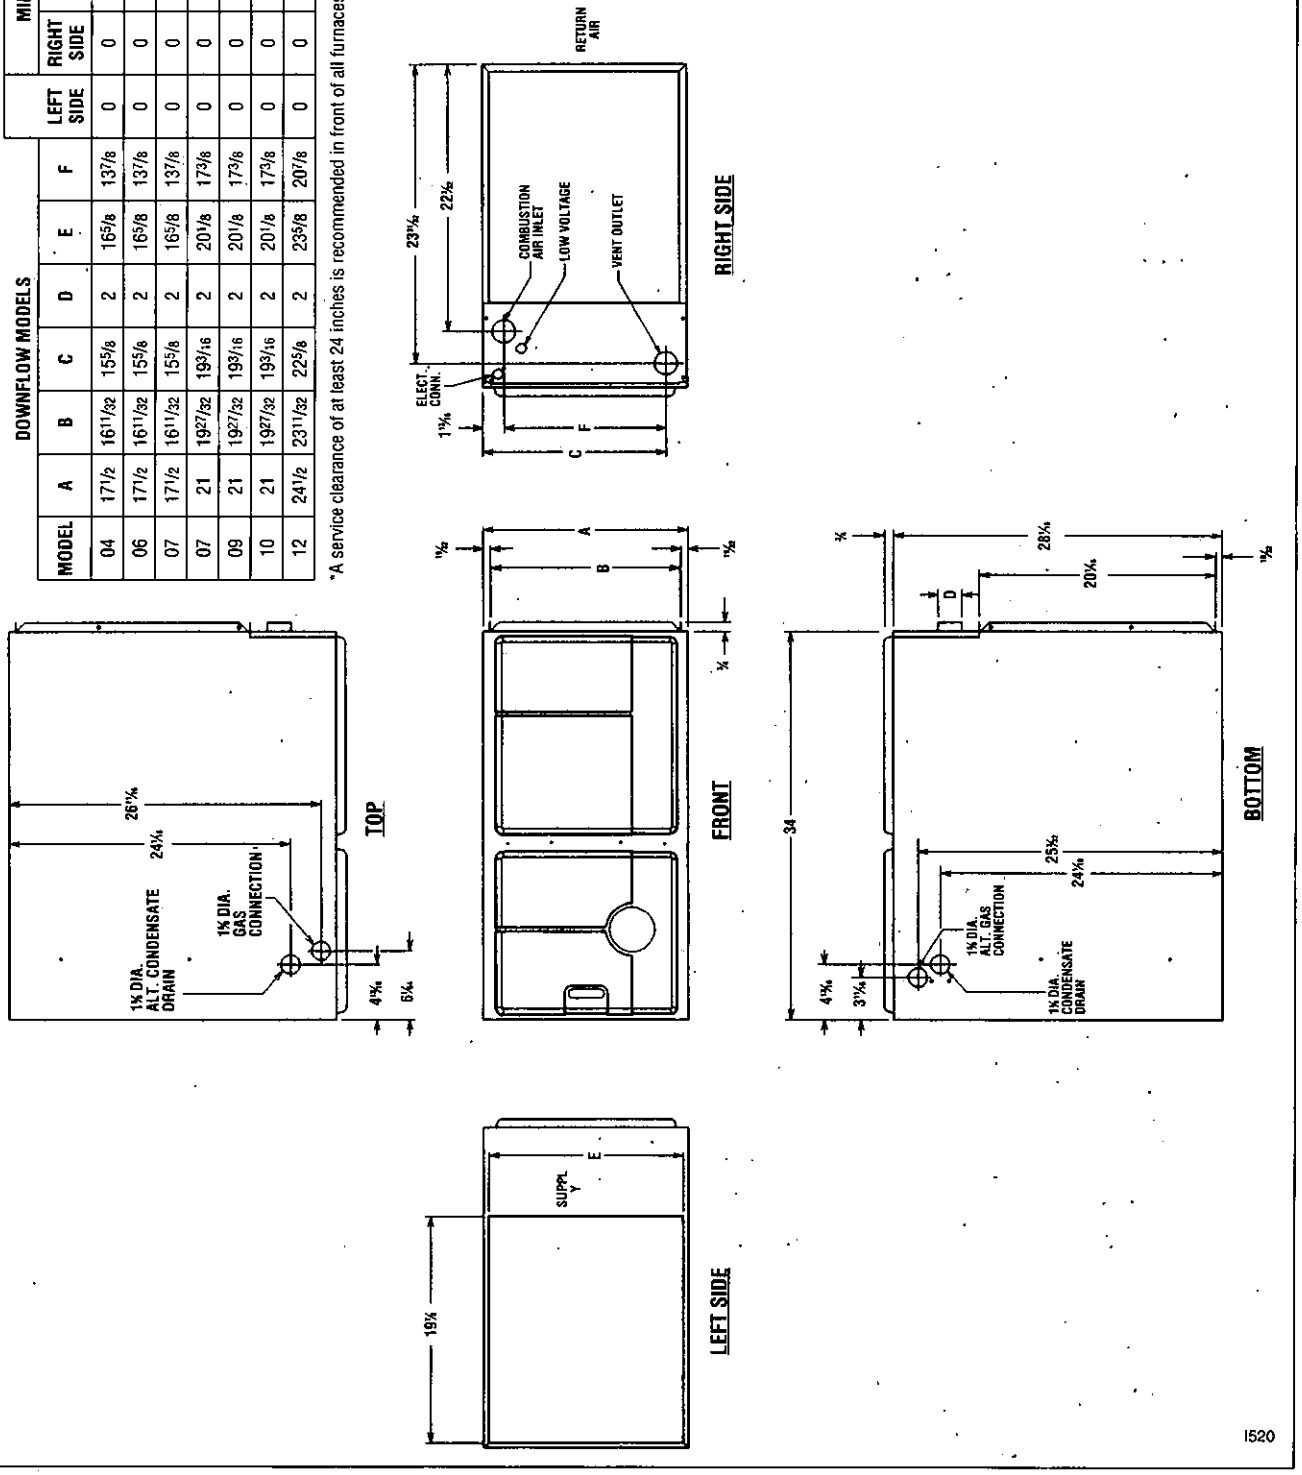

DUCTING

Proper air flow is required for the correct operation of this furnace. Too little air flow can cause erratic operation and can damage the heat exchanger. The duct system must carry the correct amount of air for heating and cooling if summer air conditioning is used.

Size the ducts according to acceptable industry standards and methods. The total static pressure drop of the air distribution system should not exceed 0.5" w.c.

⚠ WARNING

NEVER ALLOW THE PRODUCTS OF COMBUSTION FROM THE FLUE TO ENTER THE RETURN AIR DUCTWORK OR THE CIRCULATED AIR SUPPLY. ALL RETURN DUCTWORK MUST BE ADEQUATELY SEALED AND SECURED TO THE FURNACE WITH SHEET METAL SCREWS; AND JOINTS, TAPED. ALL OTHER DUCT JOINTS MUST BE SECURED WITH APPROVED CONNECTIONS AND SEALED AIRTIGHT. WHEN AN UPFLOW FURNACE IS MOUNTED ON A PLATFORM WITH RETURN THROUGH THE BOTTOM, IT MUST BE SEALED AIRTIGHT BETWEEN THE FURNACE AND THE RETURN AIR PLENUM. THE FLOOR OR PLATFORM MUST PROVIDE SOUND PHYSICAL SUPPORT OF THE FURNACE WITHOUT SAGGING, CRACKS, OR GAPS, AROUND THE BASE, PROVIDING A SEAL BETWEEN THE SUPPORT AND THE BASE.

FAILURE TO PREVENT PRODUCTS OF COMBUSTION FROM BEING CIRCULATED INTO THE LIVING SPACE CAN CREATE POTENTIALLY HAZARDOUS CONDITIONS, INCLUDING CARBON MONOXIDE POISONING THAT COULD RESULT IN PERSONAL INJURY OR DEATH.

DO NOT, UNDER ANY CIRCUMSTANCES, CONNECT RETURN OR SUPPLY DUCTWORK TO OR FROM ANY OTHER HEAT PRODUCING DEVICE SUCH AS A FIREPLACE INSERT, STOVE, ETC. DOING SO MAY RESULT IN FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PERSONAL INJURY OR PROPERTY DAMAGE.

IMPORTANT: *Some high efficiency filters have a greater than normal resistance to air flow. This can adversely affect furnace operation. BE SURE TO CHECK AIR FLOW if using any filter other than the factory-provided filter.*

UPFLOW UNITS

1. Position the unit to minimize long runs of duct or runs of duct with many turns and elbows.
2. Open the return air compartment.
   a. If using side or back return air, **do not remove the bottom base.**
   b. Cut an opening in the side or back. The opening should be cut the full width of the knockouts on the unit.
   c. Remove the bottom base if using bottom return air.

NOTE: Where the maximum air flow is 1800 CFM or more, both sides or the bottom must be used for return air.

3. Connect the return duct or return air cabinet to the unit. Make the connection air tight to prevent entraining combustion gases from an adjacent fuel-burning appliance.
4. **Be sure to have adequate space for the unit filter.**

   NOTE: DO NOT take return air from bathrooms, kitchens, furnace rooms, garages, utility or laundry rooms, or cold areas.
5. If summer air conditioning is desired, position the indoor coil on the top of the unit. Insure that no air can bypass this coil.
6. Connect the supply air plenum to the furnace plenum opening.

   IMPORTANT: If a flexible duct connector must be used, it MUST be rated for a minimum temperature of 250°F. continuous.

DOWNFLOW UNITS

1. Position the unit to minimize long runs of duct or runs of duct with many turns and elbows.
2. If summer air conditioning is desired, position the indoor coil on the bottom of the unit. Insure that no air can bypass this coil.
3. If installing on a combustible floor **and not using an air conditioning plenum,** install the special non-combustible floor base. See Figure 9.

⚠ WARNING

THE DOWNFLOW FURNACE DESIGN IS CERTIFIED FOR INSTALLATION ON A NON-COMBUSTIBLE FLOOR. USE THE SPECIAL BASE SPECIFIED ON THE FURNACE CLEARANCE LABEL. FAILURE TO INSTALL THE SPECIAL BASE MAY RESULT IN FIRE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. THIS SPECIAL BASE IS SHIPPED FROM THE FACTORY AS AN ACCESSORY.

4. Connect the furnace to the supply air plenum.
5. Connect the return air ducting to the return air opening at the top of the unit. Make the connection air tight to prevent entraining combustion gases from an adjacent fuel-burning appliance.
6. **Be sure to have adequate space for the unit filter.**

   NOTE: DO NOT take return air from bathrooms, kitchens, furnace rooms, garages, utility or laundry rooms, or cold areas.

FIGURE 9
COMBUSTIBLE FLOOR BASE

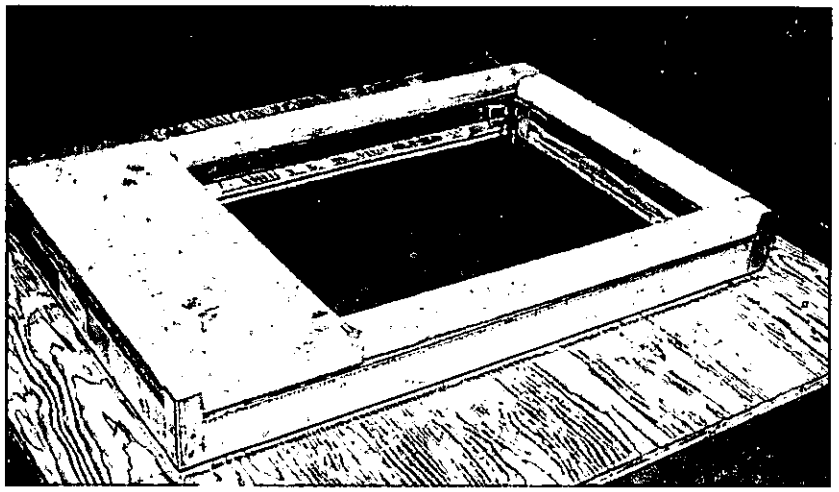

HORIZONTAL UNIT

IMPORTANT: THIS FURNACE MAY ONLY BE INSTALLED SO AS WHEN FACING THE FRONT OF THE FURNACE, SUPPLY AIR IS DISCHARGED ON THE LEFT HAND SIDE.

1. Position the unit to minimize long runs or runs with many turns and elbows.
2. If summer air conditioning is desired, position the indoor coil on the left end of the unit. Insure that no air can bypass this coil.
3. Connect the furnace to the supply air plenum.
4. Connect the return air ducting to the return air opening at the right end of the unit. Make the connection air tight to prevent entraining combustion gases from an adjacent fuel-burning appliance.
5. **Be sure to have adequate space for the unit filter.**

   NOTE: DO NOT take return air from bathrooms, kitchens, furnace rooms, garages, utility or laundry rooms, or cold areas.

VENTING AND COMBUSTION AIR PIPING

GENERAL INFORMATION

⚠ WARNING

READ AND FOLLOW ALL INSTRUCTIONS IN THIS SECTION. FAILURE TO PROPERLY VENT THIS FURNACE CAN CAUSE CARBON MONOXIDE POISONING OR AN EXPLOSION OR FIRE, RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

This furnace removes both sensible and latent heat from the combustion flue gases. Removal of latent heat results in condensation of flue gas water vapor. This condensed water vapor drains from the secondary heat exchanger and out of the unit into a drain trap.

When installed as a non-direct vent furnace, only exhaust piping is required and inside combustion air may be used. Refer to section on "COMBUSTION & VENTILATION AIR FOR FURNACE INSTALLATIONS."

Direct vent installations require a dedicated combustion air and venting system. All air for combustion is taken from the outside atmosphere and all combustion products are discharged to the outdoors.

The combustion air and vent pipe fittings must conform to American National Standards Institute (ANSI) and American Society for Testing Materials (ASTM) standards D1785 (Schedule 40 PVC), D2665 (PVC-DWV), D2241 (SDR-21 and SDR26-26 PVC), D2661 (ABS-DWV) or F628 (Schedule 40 ABS-DWV).

In Canada all combustion air and vent pipe must be CSA- or ULC-certified Schedule 40 PVC, PVC-DWV or ABS-DWV.

IMPORTANT: *The plastic combustion air and venting components are of Schedule 40 PVC. If using ABS piping, ensure that the solvent cement is compatible for joining PVC to ABS components or use a mechanical connection that can withstand the vent temperatures and are corrosion resistant.*

NOTE: Schedule 40 ABS-DWV pipe and fittings may be used as an alternate to PVC pipe for the combustion air inlet and vent pipes.

NOTE: Cellular core PVC is also approved for use. It must be schedule 40PVC-DWV cellular pipe for non-pressure applications and manufactured under ASTM F-891.

OVERTEMPERATURE SAFETY SWITCHES

Furnaces are equipped with safety switches in the control compartment to protect against overtemperature conditions caused by inadequate combustion air supply. The switches for the upflow and downflow models are located in the burner compartment. If a switch is tripped it must be manually reset.

⚠ WARNING

DO NOT JUMPER THESE DEVICES! IF ONE OF THESE SWITCHES SHOULD TRIP, A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER MUST BE CALLED TO CHECK AND/OR CORRECT FOR ADEQUATE COMBUSTION AIR SUPPLY. DO NOT RESET THE SWITCHES WITHOUT TAKING CORRECTIVE ACTION TO ASSURE THAT AN ADEQUATE SUPPLY OF COMBUSTION AIR IS MAINTAINED UNDER ALL CONDITIONS OF OPERATION. FAILURE TO DO SO CAN RESULT IN CARBON MONOXIDE POISONING OR DEATH. IF THIS UNIT IS MOUNTED IN A CLOSET, THE DOOR MUST BE CLOSED WHEN MAKING THIS CHECK.

REPLACE THESE SWITCHES ONLY WITH THE IDENTICAL REPLACEMENT PART.

EXISTING VENT SYSTEMS

When the installation of this furnace replaces an existing furnace that is removed from a vent system serving other appliances, the vent system is likely to be too large to properly vent the remaining attached appliances.

The following steps should be followed with each appliance remaining connected to the original common vent system. Place the appliance to be tested in operation, while the other appliances remaining connected to the common vent system are not in operation. Test the operation of each appliance individually by the following method.

1. Permanently seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and determine that there is no blockage, restriction, leakage, corrosion or other deficiencies which could cause an unsafe condition.
3. Insofar as is practical, close all building doors, windows and all doors between the space where the appliances remaining connected to the common venting system are located. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.

4. Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so the appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
6. After it has been determined that each appliance that remains connected to the common venting system properly vents (when tested as outlined above), return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliance to their previous conditions of use.
7. If improper venting is observed during any of the above tests, the common venting system must be resized. Refer to latest edition of the National Fuel Gas Code ANSI Z223.1, 1992 or the AGA-GAMA venting tables for Category I furnaces.

When the furnace is installed in the same space with other gas appliances such as a water heater, be sure there is an adequate supply of combustion and ventilation air for the other appliances. Do not delete or reduce the combustion air supply required by the other gas appliances in this space. See Z223.1, National Fuel Gas Code (NFPA54) or CAN/CGA-B149.1 and .2 for determining the combustion air requirements for gas appliances. An unconfined space must have at least 50 cubic feet (volume) for each 1,000 BTUH of the total input of all appliances in the space. If the open space containing the appliances is in a building with tight construction (contemporary construction), outside air may still be required for the appliances to burn and vent properly. Outside air openings should be sized the same as for a confined space.

JOINING PIPE AND FITTINGS

⚠ WARNING

PVC SOLVENT CEMENTS AND PRIMERS ARE HIGHLY FLAMMABLE. PROVIDE ADEQUATE VENTILATION AND DO NOT ASSEMBLE NEAR HEAT SOURCE OR AN OPEN FLAME. DO NOT SMOKE. AVOID SKIN OR EYE CONTACT. OBSERVE ALL CAUTIONS AND WARNINGS PRINTED ON MATERIAL CONTAINERS. FAILURE TO FOLLOW THESE GUIDELINES MAY RESULT IN FIRE, EXPLOSION OR ASPHYXIATION CAUSING PERSONAL INJURY OR DEATH.

All pipe, fittings, solvent cement, primers and procedures must conform to American National Standard Institute and American Society for Testing and Materials (ANSI/ASTM) standards in the U.S.

Pipe and Fittings - ASTM-D1785, D2466 and D2665

PVC Primer and Solvent Cement - ASTM-D2564

ABS Pipe and Fittings - Use ABS Primer and Solvent Cement D2235

Procedure for Cementing Joints - ASTM-D2855

IMPORTANT: *The plastic combustion air and venting components are of Schedule 40 PVC. If using ABS piping, ensure that the solvent cement is compatible for joining PVC to ABS components or use a mechanical connection that can withstand the vent temperatures and are corrosion resistant.*

CEMENTING JOINTS

All joints in the PVC vent must be properly sealed using the following materials and procedures.

PVC CLEANER-PRIMER AND PVC MEDIUM-BODY SOLVENT CEMENT

IMPORTANT: After cutting pipe, remove all ragged edges and burrs. This is important to prevent reduction in pressure drop throughout the system.

1. Cut pipe end square. Chamfer edge of pipe. Clean fitting socket and pipe joint area of all dirt, grease and moisture.
2. After checking pipe and socket for proper fit, wipe socket and pipe with cleaner-primer. Apply a liberal coat of primer to inside surface of socket and outside of pipe. DO NOT ALLOW PRIMER TO DRY BEFORE APPLYING CEMENT.
3. Apply a thin coat of cement evenly in the socket. Quickly apply a heavy coat of cement to the pipe end and insert pipe into fitting with a slight twisting movement until it bottoms out.

   NOTE: Cement must be fluid; if not, recoat.
4. Hold the pipe in the fitting for 30 seconds to prevent the tapered socket from pushing the pipe out of the fitting.
5. Wipe all excess cement from the joint with a rag. Allow 15 minutes before handling. Cure time varies according to fit, temperature and humidity.

NOTE: Stir the solvent cement frequently while using. Use a natural bristle brush or the dauber supplied with the can. The proper brush size is one inch.

IMPORTANT: *For Proper Installation*

DO NOT use solvent cement that has become curdled, lumpy or thickened.

DO NOT thin. Observe shelf precautions printed on containers.

For application below 32°F, use only low-temperature-type solvent cement.

COMBUSTION AND VENTILATION AIR

NON-DIRECT FURNACE INSTALLATIONS

⚠ WARNING

THE FURNACE AND ANY OTHER FUEL-BURNING APPLIANCE MUST BE PROVIDED WITH ENOUGH FRESH AIR FOR PROPER COMBUSTION AND VENTILATION OF THE FLUE GASES. MOST HOMES WILL REQUIRE THAT OUTSIDE AIR BE SUPPLIED INTO THE FURNACE AREA. FAILURE TO DO SO CAN CAUSE PERSONAL INJURY OR DEATH FROM CARBON MONOXIDE POISONING.

Adequate facilities for providing air for combustion and ventilation must be provided in accordance with section 5.3, "Air for Combustion and Ventilation" of the National Fuel Gas Code, ANSI Z223.1-1992, CAN/CGA B149.1 and 2, or applicable provisions for the local building codes, and not obstructed so as to prevent the flow of air to the furnace.

IMPORTANT: *Air for combustion and ventilation must not come from a corrosive atmosphere. Any failure due to corrosive elements in the atmosphere is excluded from warranty coverage.*

The following types of installation (but not limited to the following) will require OUTDOOR AIR for combustion, due to chemical exposures:

- Commercial buildings
- Buildings with indoor pools
- Furnaces installed in laundry rooms
- Furnaces in hobby or craft rooms
- Furnaces installed near chemical storage areas.

Exposure to the following substances in the combustion air supply (but not limited to the following) will also require OUTDOOR AIR for combustion:

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine-based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry curing and acid washing materials

Combustion air must be free of acid-forming chemicals such as sulphur, fluorine and chlorine. These elements are found in aerosol sprays, detergents, bleaches, cleaning solvents, air fresheners, paint and varnish removers, refrigerants and many other commercial and household products. When burned in a gas flame, vapors from these products form acid compounds. The acid compounds increase the dew point temperature of the flue products and are highly corrosive after they condense.

⚠ WARNING

ALL FURNACE INSTALLATIONS MUST COMPLY WITH THE NATIONAL FUEL GAS CODE AND LOCAL CODES TO PROVIDE ADEQUATE COMBUSTION AND VENTILATION AIR FOR THE FURNACE. FAILURE TO DO SO CAN RESULT IN EXPLOSION, FIRE, PROPERTY DAMAGE, CARBON MONOXIDE POISONING, PERSONAL INJURY OR DEATH.

Combustion air requirements are determined by whether the furnace is in an open (unconfined) area or in a confined space such as a closet or small room.

EXAMPLE 1: FURNACE LOCATED IN AN UNCONFINED SPACE

Using indoor air for combustion.

An unconfined space must have at least 50 cubic feet for each 1,000 BTUH of the **total input for all appliances** in the space. Here are a few examples of the room sizes required for different inputs. The sizes are based on 8-foot ceilings.

BTUH Input	Minimum Sq. Feet With 8' Ceiling	Typical Room Size With 8' Ceiling
45,000	281	14' x 20' OR 16' x 18'
60,000	375	15' x 25' OR 19' x 20'
75,000	469	15' x 31' OR 20' x 24'
90,000	563	20' x 28' OR 24' x 24'
105,000	657	20' x 33' OR 26' x 25'
120,000	750	25' x 30' OR 24' x 32'

If the open space containing the furnace is in a building with tight construction, outside air may still be required for the furnace to operate and vent properly. Outside air openings should be sized the same as for a confined space.

EXAMPLE 2: FURNACE LOCATED IN A CONFINED SPACE

A confined space (any space smaller than shown above as "unconfined") must have **two openings into the space. One opening must be within 12 inches of the ceiling and the other must be within 12 inches of the floor.** The openings must be sized by how they are connected to the heated area or to the outside, and by the input of all appliances in the space.

If confined space is within a building with tight construction, combustion air must be taken from outdoors or area freely communicating with the outdoors.

A. USING INDOOR AIR FOR COMBUSTION

If combustion air is taken from the heated area, the openings must **each** have at least 100 square inches of free area. Each opening must have at least one square inch of free area for each 1,000 BTUH of total input in the space. Here are some examples of typical openings required.

BTUH Input	Free Area Each Opening
45,000	100 square inches
60,000	100 square inches
75,000	100 square inches
90,000	100 square inches
105,000	105 square inches
120,000	120 square inches

IMPORTANT: *Air should not be taken from a heated space with a fireplace, exhaust fan or other device that may produce a negative pressure.*

B. USING OUTDOOR AIR FOR COMBUSTION

If combustion air is taken from outdoors through vertical ducts, the openings and ducts must have at least one square inch of free area for each 4,000 BTUH of total appliance input. Here are some typical sizes.

BTUH Input	Free Area Each Opening	Round Pipe Size
45,000	11.25 square inches	4"
60,000	15.00 square inches	5"
75,000	18.75 square inches	5"
90,000	22.50 square inches	6"
105,000	26.25 square inches	6"
120,000	30.00 square inches	6"

IMPORTANT: Do not take air from an attic space that is equipped with power ventilation.

If combustion air is taken from outdoors through horizontal ducts, the openings and ducts must have at least one square inch of free area for each 2,000 BTUH of total appliance input.

FIGURE 10
AIR FROM HEATED SPACE

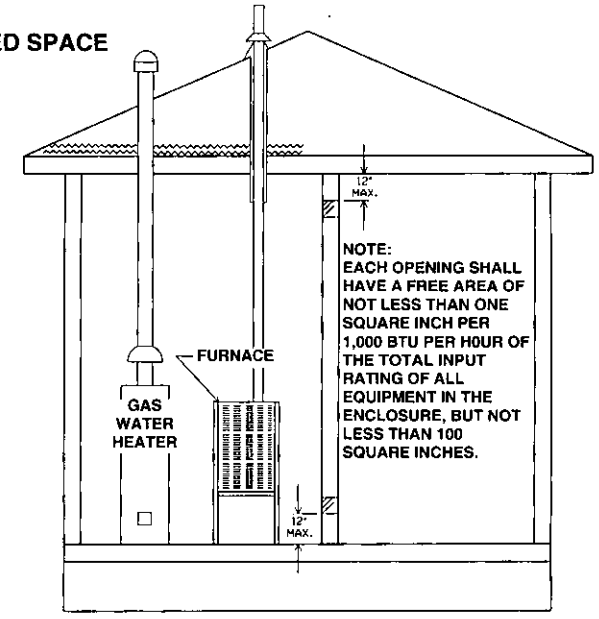

Here are some typical sizes.

BTUH Input	Free Area Each Opening	Round Pipe Size
45,000	22.50 square inches	6"
60,000	30.00 square inches	6"
75,000	37.50 square inches	7"
90,000	45.00 square inches	8"
105,000	52.50 square inches	8"
120,000	60.00 square inches	9"

If unit is installed where there is an exhaust fan, sufficient ventilation must be provided to prevent the exhaust fan from creating a negative pressure.

Combustion air openings must not be restricted in any manner.

CONSULT LOCAL CODES FOR SPECIAL REQUIREMENTS.

Return air grilles and warm air registers must not be obstructed.

FIGURE 11
AIR FROM ATTIC/CRAWL SPACE

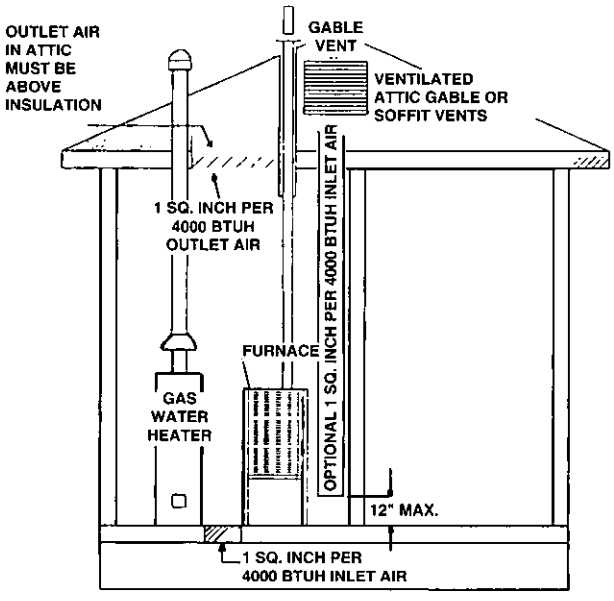

FIGURE 12
OUTSIDE AIR USING A HORIZONTAL DUCT

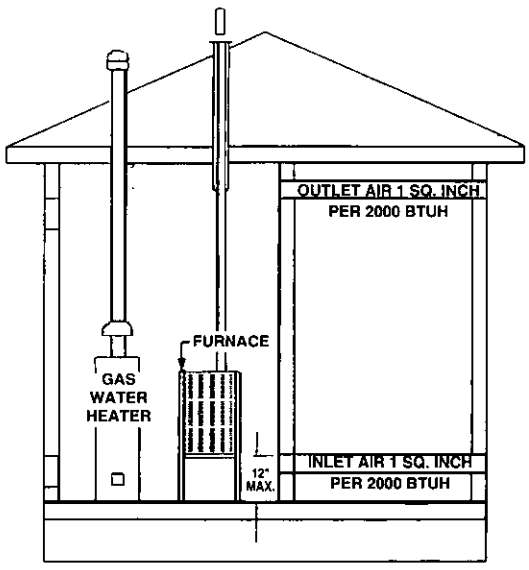

CONNECTION TO FURNACE

IMPORTANT: *When indoor combustion air is used, the inlet air opening at the furnace must be protected from accidental blockage. On upflow models, install a 90° elbow pointing downward in the side inlet air opening or a double elbow pointing downward in the top inlet air opening. On downflow/horizontal models, install a double elbow in the top inlet air opening. See Figure 13.*

FIGURE 13
COMBUSTION AIR FITTING.

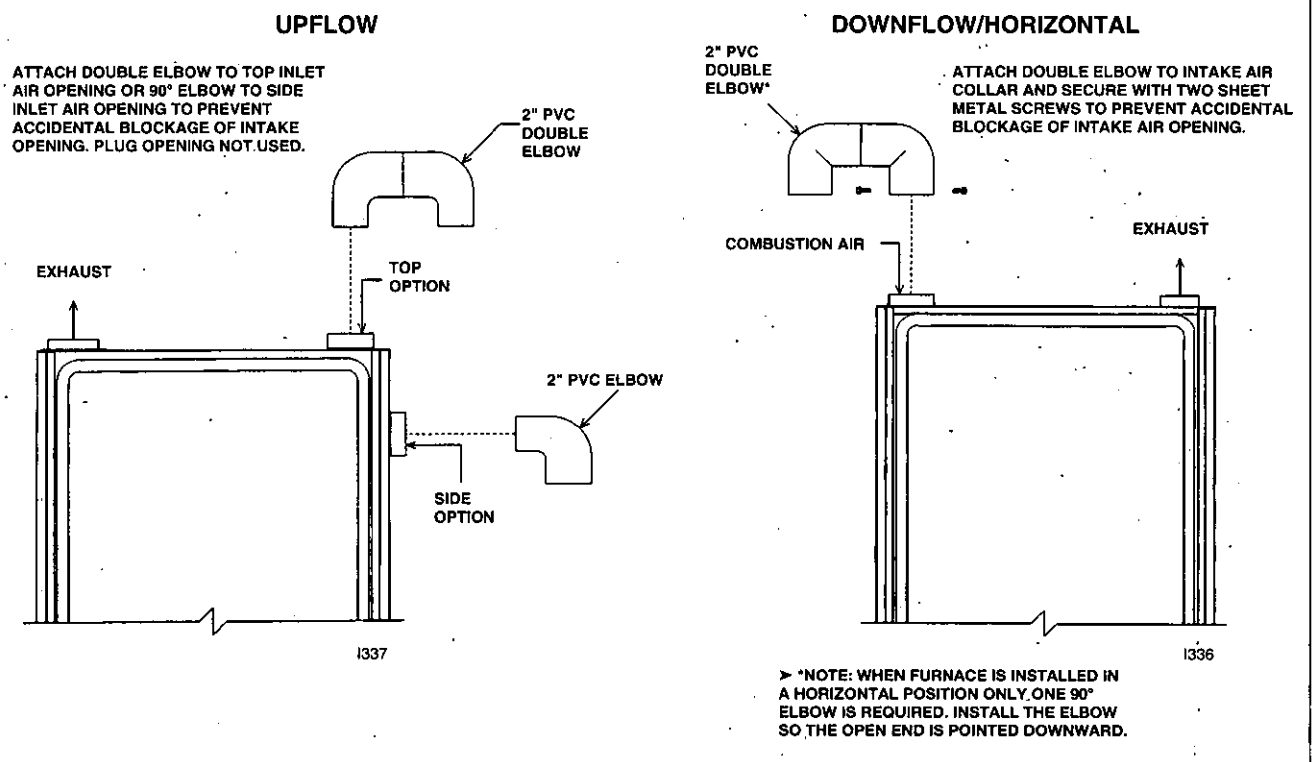

VENT PIPE INSTALLATION

NON-DIRECT VENT INSTALLATION GUIDELINES

IMPORTANT: FAILURE TO CORRECTLY FOLLOW ALL VENTING GUIDELINES MAY RESULT IN ERRATIC FURNACE OPERATION, FREEZE-UP OF COMBUSTION AIR OR EXHAUST AIR PIPING OR SOOTING OF THE FURNACE.

All exhaust piping must be installed in compliance with Part 7, "Venting of Equipment," of the latest edition of the National Fuel Gas Code NPFA54/ ANSI Z223.1-, local codes or ordinances and these instructions.

1. Vertical piping is preferred.
2. All horizontal piping must slope upward a minimum of 1/4 inch per foot of run so that condensate drains toward the furnace.
3. All horizontal runs must be supported at least every 4 feet. No sags or dips are permitted.
4. ***IMPORTANT: DO NOT COMMON VENT WITH ANY OTHER APPLIANCE. DO NOT INSTALL IN THE SAME CHASE OR CHIMNEY WITH A METAL OR HIGH TEMPERATURE PLASTIC PIPE FROM ANOTHER GAS OR FUEL-BURNING APPLIANCE UNLESS THE REQUIRED MINIMUM CLEARANCES TO COMBUSTIBLES ARE MAINTAINED BETWEEN THE PVC PIPE AND OTHER PIPES.***
5. All vent runs through unconditioned spaces where below-freezing temperatures are expected should be insulated with 1-in. thick, medium-density, foil-faced fiberglass. An equivalent "arm-a-flex" or "rub-a-tex" insulation may also be

FIGURE 14
TEE TERMINAL – FOR STANDARD HORIZONTAL SINGLE PIPE INSTALLATION

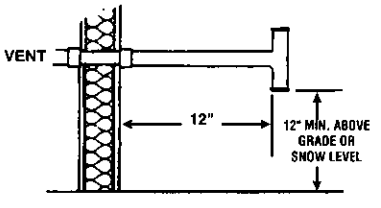

TABLE 1
FOR NON-DIRECT VENT APPLICATIONS - AIR FOR COMBUSTION PROVIDED FROM INDOORS

MAXIMUM ALLOWABLE LENGTH IN FEET OF EXHAUST PIPING

FURNACE INPUT	PIPE SIZE IN.	NO. OF ELBOWS							TERMINATION
		0	1	2	3	4	5	6	
45,000	2	65	62.5	60.0	57.5	55.0	52.5	50.0	STANDARD
	2	60	57.5	55.0	52.5	50.0	47.5	45.0	ALTERNATE
	3	*N.R.							
60,000	2	40	37.5	35.0	32.5	30.0	27.5	25.0	STANDARD
	2	35	32.5	30.0	27.5	25.0	22.5	20.0	ALTERNATE
	3	140	136.5	133.0	129.5	126.0	122.5	119.0	STANDARD
	3	135	131.5	128.0	124.5	121.0	117.5	114.0	ALTERNATE
75,000	2	25	22.5	20.0	17.5	15.0	12.5	10.0	STANDARD
	2	20	17.5	15.0	12.5	10.0	7.5	5.0	ALTERNATE
	3	120	116.5	113.0	109.5	106.0	102.5	99.0	STANDARD
	3	88	84.5	81.0	77.5	74.0	70.5	67.0	ALTERNATE
90,000	2	20	17.5	15.0	12.5	10.0	7.5	5.0	STANDARD
	2	15	12.5	10.0	7.5	5.0	N.R.	N.R.	ALTERNATE
	3	100	96.5	93.0	89.5	86.0	82.5	79.0	STANDARD
	3	68	64.5	61.0	57.5	54.0	50.5	47.0	ALTERNATE
105,000	2	*N.R.							
	3	90	86.5	83.0	79.5	76.0	72.5	69.0	STANDARD
	3	58	54.5	51.0	47.5	44.0	40.5	37.0	ALTERNATE
120,000	2	*N.R.							
	3	80	76.5	73.0	69.5	66.0	62.5	59.0	STANDARD
	3	48	44.5	41.0	37.5	34.0	30.5	27.0	ALTERNATE

NOTES:
1. *N.R. - NOT RECOMMENDED.
2. MAXIMUM OF 6 - 90 DEGREE ELBOWS MAY BE USED. DO NOT COUNT ELBOWS REQUIRED FOR ALTERNATE TERMINATION. MEDIUM OR LONG SWEEP ELBOWS MAY BE USED.
3. TWO - 45 DEGREE ELBOWS ARE CONSIDERED EQUIVALENT TO ONE - 90 DEGREE ELBOW.

ELEVATED SINGLE PIPE ALTERNATE TEE TERMINATION

See Figure 15. The tee termination may be elevated up to 24 inches above the wall penetration if required for anticipated snow levels. Use 2 medium-radius, 2-in. PVC elbows and 2-in. PVC pipe, attaching the tee so it is 12 inches from the wall.

FIGURE 15
ALTERNATE HORIZONTAL TERMINATION FOR NON-DIRECT VENT INSTALLATIONS

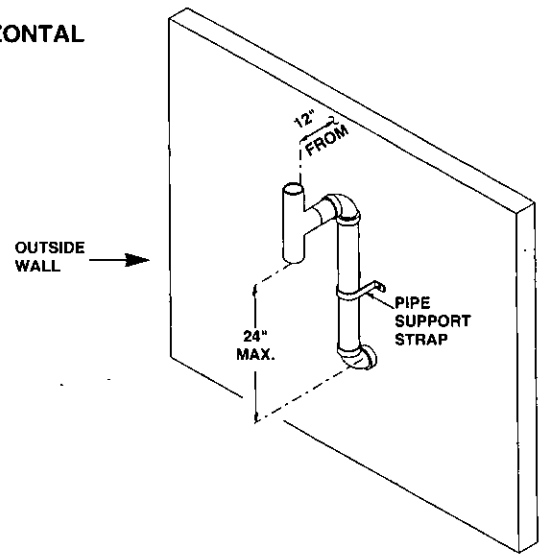

used as long as there is no heat tape applied to the vent pipe. For horizontal runs where water may collect, wrap the vent pipe with self-regulating 3 or 5 watt heat tape. The heat tape must be U.L. listed and installed per the manufacturer's instructions.

6. The minimum vent pipe length is 5 feet.

STANDARD INSTALLATIONS

The single-pipe system requires an exhaust pipe only. Combustion air may be taken from the furnace installation area or ducted to the furnace area from the outside.

Size the exhaust pipe as specified in Table 1. This table lists the maximum allowable length in feet of the exhaust pipe that may be used for all furnace inputs as related to the number of elbows required and the termination. (See shaded area.)

Vertical through-the-roof installations do not require a vent termination. Use 2-in. PVC pipe extending a minimum of 12 inches above the anticipated level of snow accumulation. See exhaust pipe requirements, Figure 20. When 3-in. vent pipe is used from furnace to the roof, reduce it to 2 inches before penetrating the roof. A maximum of 18 inches of 2-in. pipe may be used below the roof.

Horizontal vent terminations require a 2-in. PVC tee positioned 12 inches from the outside wall. See exhaust pipe requirements, Figure 21. When 3-in. pipe is used from the furnace to the outside wall, reduce it to 2 inches before penetrating the wall. A maximum of 18 inches of 2-in. pipe may be used inside the wall.

An alternate termination may be used as shown in Figure 15 to clear anticipated snow levels. The tee may be raised up to 24 inches above the wall penetration. Use two medium-radius bend, 2-in. PVC elbows and a length of 2-in. PVC pipe so that the elbows are on 24-in. centers.

NON-DIRECT VENT TERMINATION LOCATION REQUIREMENTS

⚠ CAUTION

MOISTURE IN THE COMBUSTION PRODUCTS CONDENSES AS IT LEAVES THE TERMINATION. THIS CONDENSATE CAN FREEZE ON EXTERIOR WALLS, UNDER THE EAVES, AND ON SURROUNDING OBJECTS. SOME DISCOLORATION IS TO BE EXPECTED. HOWEVER, IMPROPER LOCATION OR INSTALLATION CAN CAUSE

FIGURE 16
NON-DIRECT VENT TERMINATION CLEARANCES

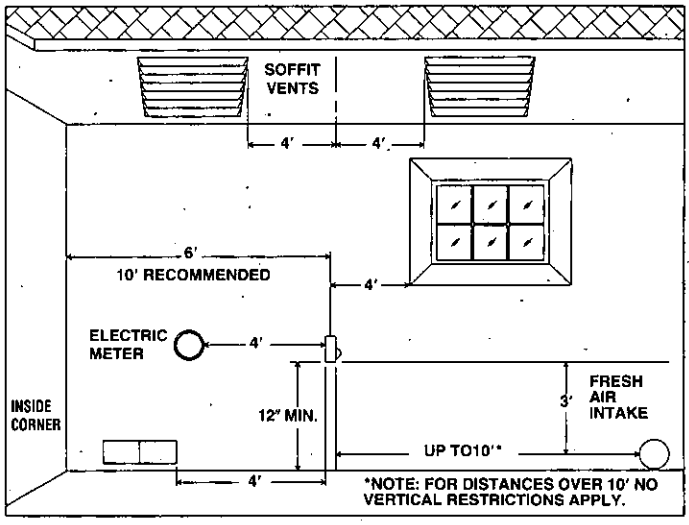

STRUCTURAL OR EXTERIOR FINISH DAMAGE TO THE BUILDING.

Non-direct venting location requirements are slightly different in some cases than direct venting. Install a non-direct vent with the following minimum clearances.
See Figure 16.

1. Locate the bottom of the vent terminal at least 12 inches above grade. Increase the 12-in. minimum to keep the terminal openings above the level of snow accumulation, where applicable.
2. The vent shall not terminate over public walkways or over an area where condensate or vapor could create a nuisance or hazard.
3. 4 feet below, 4 feet horizontally from, or 1 foot above any door, window soffit, under eave vent or gravity air inlet to the building.
4. The vent terminal shall have a minimum horizontal clearance of 4 feet from electric meters, gas meters, regulators and relief equipment.
5. 6 feet from an inside corner formed by two exterior walls – 10 feet is the recommended distance.
6. Locate it 3 feet above any forced air inlet located within 10 feet. Any fresh air or make-up air inlet, such as for a dryer or furnace area, is considered a forced air inlet.
7. Avoid areas where dripping condensate may cause problems, such as above planters, patios, or adjacent to windows where steam may cause fogging.

In addition to the minimum clearances listed above, the vent location should also be governed by the following guidelines.

1. Do not terminate under any kind of patio or deck. If running the vent under a deck, insulate it to insure no condensate freezes and blocks the pipe.
2. Do not locate on the side of a building with prevailing winter winds. This will help prevent moisture from freezing on walls and overhangs (under eaves).
3. Do not extend vent directly through brick or masonry surfaces. Use a rust-resistant sheet metal or plastic backing plate behind vent.
4. Do not locate too close to shrubs as condensate may stunt or kill them.
5. Minimum vertical clearances of 1 foot are recommended for overhangs up to 1 foot horizontal. The vertical clearance should be increased equally for each additional increase in horizontal overhang to a maximum vertical clearance of 6 feet.
6. Caulk all cracks, seams and joints within 6 feet horizontally and above and below vent.

DIRECT VENT INSTALLATIONS

⚠ WARNING

READ AND FOLLOW ALL INSTRUCTIONS IN THIS SECTION. FAILURE TO PROPERLY VENT THIS FURNACE CAN CAUSE CARBON MONOXIDE POISONING OR AN EXPLOSION OR FIRE, RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

Direct vent installations require a dedicated combustion air and venting system. All air for combustion is taken from the outside atmosphere and all combustion products are discharged to the outdoors. **Therefore, no ventilation or combustion air openings are required.**

IMPORTANT: *The plastic combustion air and venting components are of Schedule 40 PVC. If using ABS piping ensure that the solvent cement is compatible for joining PVC to ABS components or use a mechanical connection that can withstand the vent temperatures and are corrosion resistant.*

INSTALLATION GUIDELINES

All exhaust piping must be installed in compliance with Part 7, "Venting of Equipment," of the latest edition of the National Fuel Gas Code NPFA54/ ANSI Z223.1-, local codes or ordinances and these instructions.

1. Vertical piping is preferred.
2. All horizontal piping must slope upward a minimum of 1/4 inch per foot of run so that condensate drains toward the furnace.
3. All horizontal runs must be supported at least every 4 feet. No sags or dips are permitted.
4. ***IMPORTANT: DO NOT COMMON VENT WITH ANY OTHER APPLIANCE. DO NOT INSTALL IN THE SAME CHASE OR CHIMNEY WITH A METAL OR HIGH TEMPERATURE PLASTIC PIPE FROM ANOTHER GAS OR FUEL-BURNING APPLIANCE UNLESS THE REQUIRED MINIMUM CLEARANCES TO COMBUSTIBLES ARE MAINTAINED BETWEEN THE PVC PIPE AND OTHER PIPES.***

TABLE 2
FOR DIRECT VENT APPLICATIONS - AIR FOR COMBUSTION PROVIDED FROM OUTDOORS

MAXIMUM ALLOWABLE LENGTH IN FEET OF EXHAUST AND INTAKE AIR PIPE

FURNACE INPUT	PIPE SIZE IN.	NO. OF ELBOWS							TERMINATION
		0	1	2	3	4	5	6	
45,000	2	70	67.5	65.0	62.5	60.0	57.5	55.0	STANDARD
	2	62	59.5	57.0	54.5	52.0	49.5	47.0	CONCENTRIC
	2	66	63.5	61.0	58.5	56.0	53.5	51.0	ALTERNATE - RXGY-D02
	3	N.R.							
60,000	2	45	42.5	40.0	37.5	35.0	32.5	30.0	STANDARD
	2	37	34.5	32.0	29.5	27.0	24.5	22.0	CONCENTRIC
	2	41	38.5	36.0	33.5	31.0	28.5	26.0	ALTERNATE - RXGY-D02
	3	155	151.5	148.0	144.5	141.0	137.5	134.0	STANDARD
	3	119	116.5	114.0	111.5	108.0	104.5	101.0	CONCENTRIC
	3	127	121.5	118.0	114.5	111.0	107.5	104.0	ALTERNATE - RXGY-D03
75,000	2	30	27.5	25.0	22.5	20.0	17.5	15.0	STANDARD
	2	18	15.5	13.0	10.5	8.0	5.5	N.R.	CONCENTRIC
	2	26	23.5	21.0	18.5	16.0	13.5	11.0	ALTERNATE - RXGY-D02
	3	145	141.5	138.0	134.5	131.0	127.5	124.0	STANDARD
	3	109	105.5	102.0	98.5	95.0	91.5	88.0	CONCENTRIC
	3	117	113.5	110.0	106.5	103.0	99.5	96.0	ALTERNATE - RXGY-D03
90,000	2	N.R.							
	3	120	116.5	113.0	109.5	106.0	102.5	99.0	STANDARD
	3	58	54.5	51.0	47.5	44.0	40.5	37.0	CONCENTRIC
	3	92	88.5	85.0	81.5	78.0	74.5	71.0	ALTERNATE - RXGY-D03
105,000	2	N.R.							
	3	120	116.5	113.0	109.5	106.0	102.5	99.0	STANDARD
	3	58	54.5	51.0	47.5	44.0	40.5	37.0	CONCENTRIC
	3	92	88.5	85.0	81.5	78.0	74.5	71.0	ALTERNATE - RXGY-D03
120,000	2	N.R.							
	3	115.0	111.5	108.0	104.5	101.0	97.5	94.0	STANDARD
	3	53.0	49.5	46.0	42.5	39.0	35.5	32.0	CONCENTRIC
	3	87.0	83.5	80.0	76.5	73.0	69.5	66.0	ALTERNATE - RXGY-D03
	3	112.0	108.5	105.0	101.5	98.0	94.5	91.0	ALTERNATE - RXGY-D04

NOTES:
1. N.R. - NOT RECOMMENDED.
2. MAXIMUM OF 6 ELBOWS MAY BE USED. DO NOT COUNT ELBOWS IN ALTERNATE TERMINATION KIT. MEDIUM OR LONG SWEEP ELBOWS MAY BE USED.
3. TWO - 45 DEGREE ELBOWS ARE CONSIDERED EQUIVALENT TO ONE - 90 DEGREE ELBOW.
4. CONCENTRIC TERMINATION NO. RXGY-C01 IS FOR THROUGH-THE-WALL VENTING.
5. CONCENTRIC TERMINATION NO. RXGY-E02 IS FOR THROUGH-THE-ROOF VENTING.
6. USE KITS RXGY-D02 (2") OR RXGY-D03 (3") FOR STANDARD OR ALTERNATE THROUGH-THE-WALL VENTING.
7. WHEN D03 KIT IS USED WITH 60,000 & 75,000 BTUH MODELS, THE EXHAUST PIPE MUST BE REDUCED TO 1-1/2" PVC IMMEDIATELY OUTSIDE THE WALL.
8. USE KIT RXGY-D04 (2-1/2") FOR ALTERNATE THROUGH-THE-WALL VENTING ONLY ON 120,000 BTUH MODELS WITH EXCESSIVELY LONG RUNS..

5. All vent runs through unconditioned spaces where below-freezing temperatures are expected should be insulated with 1-in. thick, medium-density, foil-faced fiberglass. An equivalent "arm-a-flex" or "rub-a-tex" insulation may also be used as long as there is no heat tape applied to the vent pipe. For horizontal runs where water may collect, wrap the vent pipe with self-regulating 3 or 5 watt heat tape. The heat tape must be U.L. listed and installed per the manufacturer's instructions.
6. The minimum vent pipe length is 5 feet.

Size the exhaust and combustion air intake pipes as specified in Table 2. This table lists the maximum allowable length in feet of the exhaust and combustion air intake pipes that may be used for all furnace inputs as related to the number of elbows required and the termination (see shaded area).

COMBUSTION AIR FOR DIRECT VENT INSTALLATIONS

THE COMBUSTION AIR SYSTEM DESIGNED FOR THIS FURNACE MUST BE USED.

When this furnace is installed as a direct vent forced air furnace, all combustion air is supplied directly to the burner through a special air inlet system outlined in these instructions. This system consists of field-supplied Schedule 40 or 26 SDR-PVC pipe and one of the following horizontal vent termination kits: RXGY-D02, RXGY-D03, RXGY-D04, RXGY-C01 or RXGY-E02.

NOTE: Schedule 40 ABS-DWV pipe and fittings may be used as an alternate to PVC pipe for the combustion air inlet and vent pipes.

The combustion air for this furnace is supplied directly from the outdoors through the combustion air inlet system.

When the furnace is installed in the same space with other gas appliances, such as a water heater, be sure there is an adequate supply of combustion and ventilation air for the other appliances. Do not delete or reduce the combustion air supply required by the other gas appliances in this space. See Z223.1, National Fuel Gas Code (NFPA54) or CAN/CGA-B149.1 and .2 for determining the combustion air requirements for gas appliances. An unconfined space must have at least 50 cubic feet (volume) for each 1,000 BTUH of the total input of all appliances in the space. If the open space containing the appliances is in a building with tight construction (contemporary construction), outside air may still be required for the appliances to burn and vent properly. Outside air openings should be sized the same as for a confined space.

STANDARD TERMINATIONS

STANDARD VERTICAL TERMINATIONS

COMBUSTION AIR PIPING

Use two medium-radius sweep elbows to keep the inlet downward to prevent entry of rain. See Figure 20 for the proper relationship of combustion air to exhaust termination.

STANDARD HORIZONTAL TERMINATIONS

COMBUSTION AIR PIPING

When 3-in. pipe is used between the furnace and outside wall, reduce it to 2 inches before penetrating the wall. Up to 18 inches of 2-in. pipe may be used inside the wall.

The standard horizontal intake air termination for all models is a 2-in. PVC coupling with a wind deflector vane (provided) attached. Cut a 2¼-in. length of 2-in. PVC pipe. Connect this pipe and another 2-in. PVC coupling to the coupling at the wall. The outer coupling must terminate 4 inches from the wall. See Figure 21, Detail B, for vane location. Attach vane in vertical position with PVC solvent.

IMPORTANT: To ensure proper furnace operation, the supplied vane must be installed in the vertical position as shown in Figure 21, Detail B.

The combustion air inlet terminal must be located with respect to the exhaust terminal as shown in Figure 21, Detail C.

➤ **IMPORTANT: All furnaces with horizontal air intakes, except those using horizontal concentric vent kit RXGY-C01, must have a drain tee assembly and trap installed as close to the furnace as possible. This is to drain any water that may be in the combustion air pipe to prevent it from entering the furnace combustion chamber.**

These parts are included in kits RXGY-D02 (for 2-in. pipe), RXGY-D03 (for 3-in. pipe) and RXGY-D04 (special for the 120,000 BTU furnace installed with the alternate horizontal termination). Attach the trap to the bottom of the tee with PVC solvent. Connect the other end to a suitable drain, as to the downstream of a condensate trap on the furnace.

STANDARD VERTICAL TERMINATIONS

EXHAUST VENT PIPING

Vertical through-the-roof vent applications do not require an exhaust terminal. The exhaust vent must terminate at least 12 inches above the combustion intake air termination. The exhaust vent for models with inputs of 90,000 through 120,000 BTUH is 2-in. PVC pipe 120,000 BTUH models with excessively long runs require 2½". Refer to Table 2 for proper application. This must be reduced to 1" or 1½" the last 12 inches for models with inputs of 45,000 through 75,000 BTUH. See Figure 22.

STANDARD HORIZONTAL TERMINATIONS

EXHAUST PIPING

For direct vent systems the standard termination is 2-in. PVC pipe extending 12 inches from the wall for furnaces with inputs from 90,000 to 120,000 BTUH. Install a 2-in. coupling at the outside wall to prevent the termination from being pushed inward. When 3-in. pipe is used between the furnace and outside wall, reduce to 2 inches before penetrating the wall. The standard termination is 1½ -in. PVC pipe extending outward 12 inches from the wall for models with inputs of 45,000 to 75,000 BTUH. Install a 2-in. to 1½-in. coupling at the outside wall to prevent pushing the termination back into the wall. See Figure 21, Detail B.

The combustion air and exhaust terminations must be at least 12 inches above grade and must be oriented with respect to each other as shown in Figure 21. Refer to section on alternate venting options when higher snow levels are anticipated.

ALTERNATE TERMINATIONS

ALTERNATE HORIZONTAL DIRECT VENT TERMINATIONS

KIT NOS. RXGY-D02, -D03 AND -D04

The combustion air and exhaust terminations may be raised a maximum of 24 inches above the wall penetrations to maintain the required 12 inch clearance above grade or snow level. See Figure 17. Size the

pipe length according to Table 2. The top elbow serves as the air intake termination. Use PVC cement to install the wind deflector vane vertically in the air inlet elbow as shown in Figure 17.

From the top elbow in the exhaust pipe, extend a length of PVC pipe outward so that it terminates exactly 12 inches from the wall. See Figure 17. Reduce the termination pipe extension to is 1½ inch pipe for 45,000 BTUH through 75,000 BTUH units.

The 45,000 BTUH unit only uses kit RXGY-D02. The 60,000 BTUH and 75,000 BTUH units may use kits RXGY-D02 or RXGY-D03 depending on pipe lengths and number of elbows. Use kit RXGY-D03 with 90,000 BTUH through 120,000 BTUH units. **The RXGY-D04 kit only applies to the 120,000 BTUH unit using an alternate termination and excessively long runs.** See Table 2.

The following are parts lists for the RXGY-D02, RXGY-D03 and RXGY-D04 alternate horizontal direct vent termination kits:

RXGY-D02

1. 2-in. tee with reducer assembly
2. ½-in. PVC 6-in. dia. trap
3. PVC vane
4. 2-in. PVC elbow
5. 1½-in. PVC nipple with coupling
6. PVC strap
7. vent template

RXGY-D03

1. 3-in. tee with reducer assembly
2. ½-in. PVC 6-in. dia. trap
3. PVC vane
4. 2-in. PVC elbow
5. PVC strap
6. vent template

RXGY-D04

1. 2½-in. PVC elbow
2. 3" x 2½" PVC bushing
3. 2½" x 6½" long PVC pipe
4. 2½" x 16" long PVC pipe
5. 2½" x 21" long PVC pipe
6. PVC vane
7. ➤ 3-in. tee with reducer assembly
8. 6-in. dia. ½-in. PVC trap
9. PVC strap
10. vent template

NOTE: The RXGY-D04 kit only applies to the 120,000 BTUH unit using an alternate termination and excessively long runs.

FIGURE 17
ALTERNATE HORIZONTAL DIRECT VENT TERMINATION

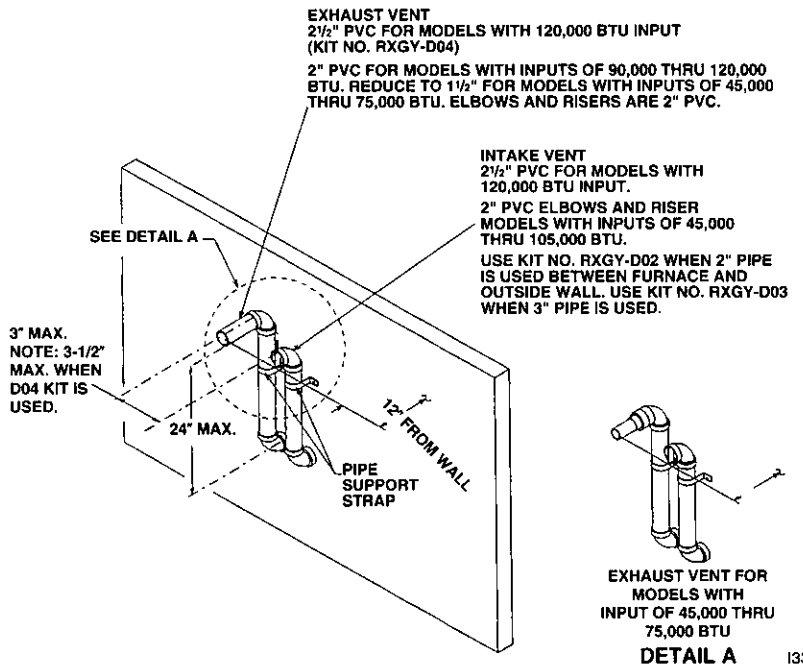

FIGURE 18
VERTICAL CONCENTRIC VENT KIT - RXGY - E02

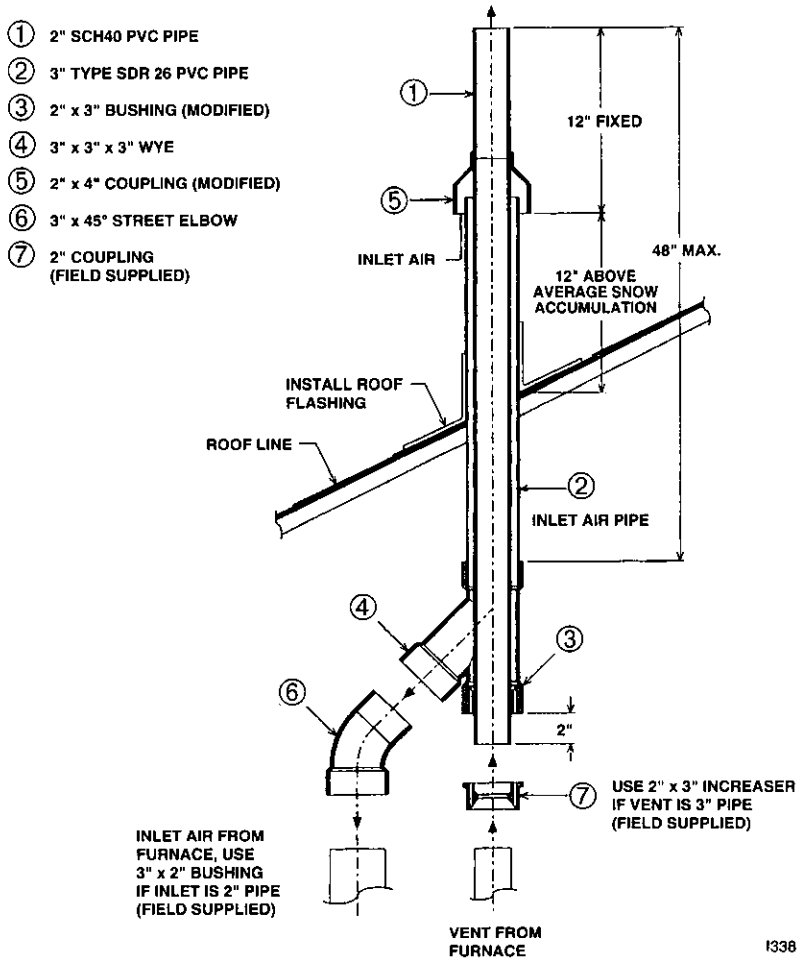

CONCENTRIC TERMINATIONS

ALTERNATE VERTICAL CONCENTRIC VENT KIT NO. RXGY-E02

This kit is for vertical intake air/vent runs and may be installed through roofs up to 9 inches thick. One 4 1/8-in. diameter hole is required through the roof for the installation. See Figure 18 for the general layout. Complete installation instructions are included with the kit.

HORIZONTAL CONCENTRIC TERMINATION

This kit is for horizontal intake air pipe runs and may be installed through walls up to 16 inches thick. See Figure 19. Complete installation instructions are supplied with the kits.

FIGURE 19.
HORIZONTAL CONCENTRIC VENT KIT NO. RXGY-C01 (DIRECT VENT INSTALLATIONS)

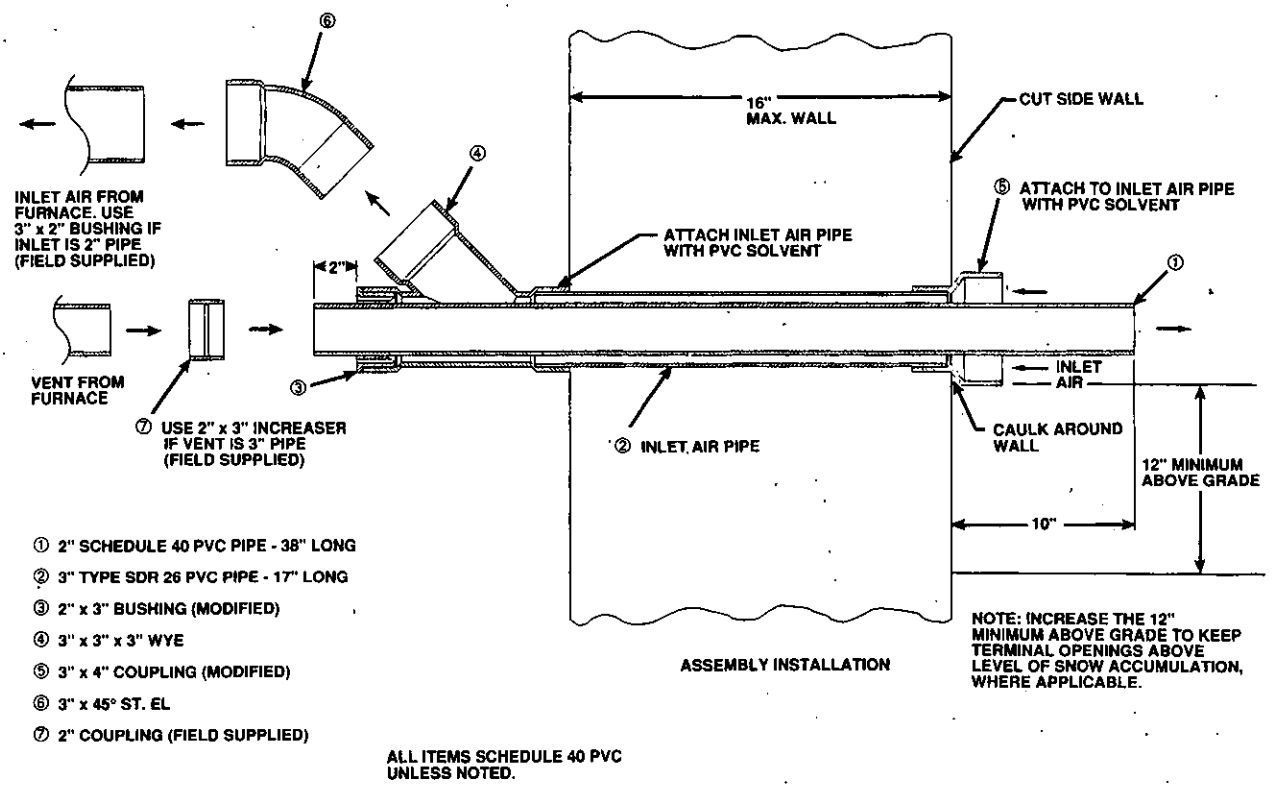

FIGURE 20
STANDARD VERTICAL DIRECT VENTING
UPFLOW MODEL SHOWN (TYPICAL FOR DOWNFLOW MODELS)

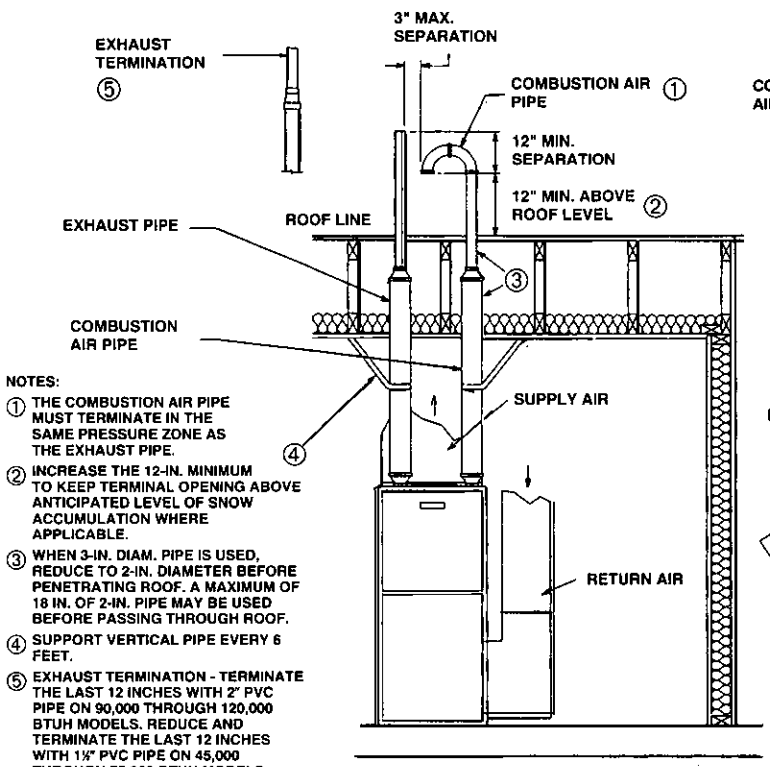

NOTES:

① THE COMBUSTION AIR PIPE MUST TERMINATE IN THE SAME PRESSURE ZONE AS THE EXHAUST PIPE.

② INCREASE THE 12-IN. MINIMUM TO KEEP TERMINAL OPENING ABOVE ANTICIPATED LEVEL OF SNOW ACCUMULATION WHERE APPLICABLE.

③ WHEN 3-IN. DIAM. PIPE IS USED, REDUCE TO 2-IN. DIAMETER BEFORE PENETRATING ROOF. A MAXIMUM OF 18 IN. OF 2-IN. PIPE MAY BE USED BEFORE PASSING THROUGH ROOF.

④ SUPPORT VERTICAL PIPE EVERY 6 FEET.

⑤ EXHAUST TERMINATION - TERMINATE THE LAST 12 INCHES WITH 2" PVC PIPE ON 90,000 THROUGH 120,000 BTUH MODELS. REDUCE AND TERMINATE THE LAST 12 INCHES WITH 1¼" PVC PIPE ON 45,000 THROUGH 75,000 BTUH MODELS.

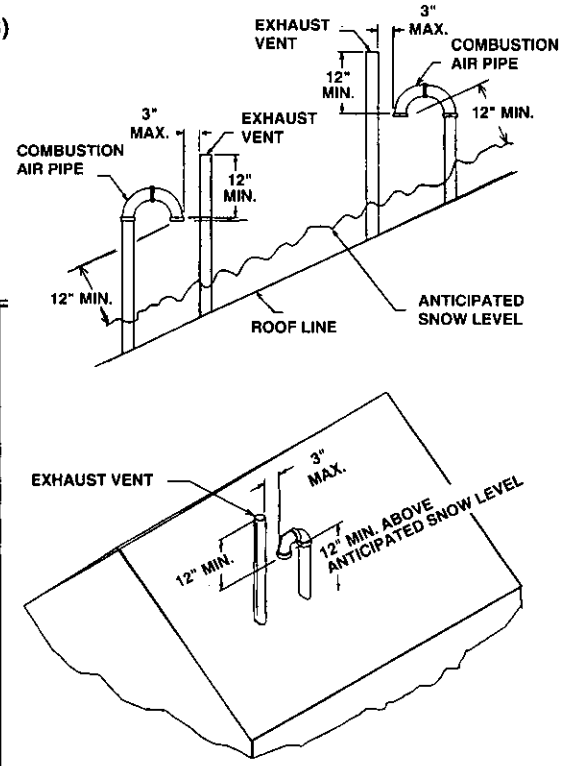

PITCHED ROOF INSTALLATIONS

I407

FIGURE 21
STANDARD HORIZONTAL DIRECT VENTING
UPFLOW MODEL SHOWN (TYPICAL FOR DOWNFLOW MODELS)

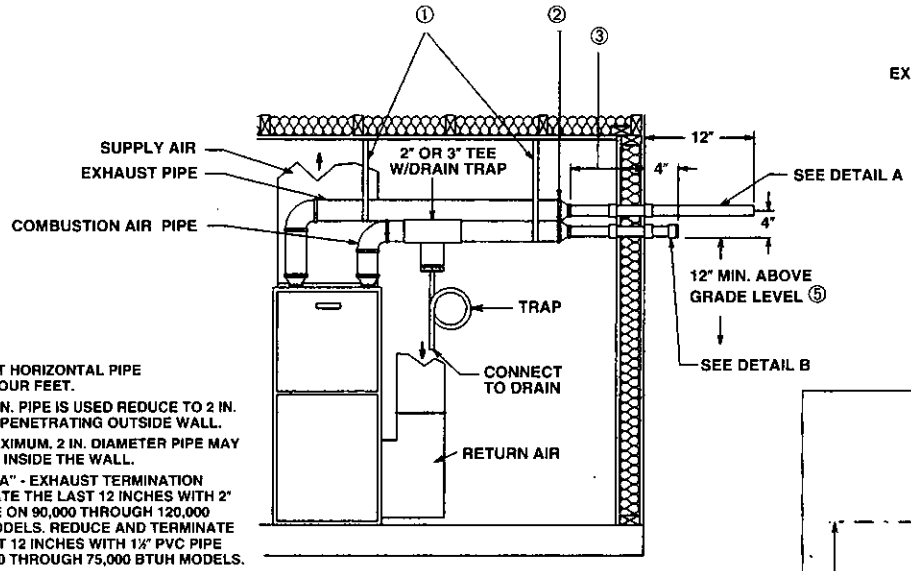



EXHAUST TERMINATION
④ DETAIL A

NOTES:

① SUPPORT HORIZONTAL PIPE EVERY FOUR FEET.

② WHEN 3 IN. PIPE IS USED REDUCE TO 2 IN. BEFORE PENETRATING OUTSIDE WALL.

③ 18 IN. MAXIMUM. 2 IN. DIAMETER PIPE MAY BE USED INSIDE THE WALL.

④ DETAIL "A" - EXHAUST TERMINATION TERMINATE THE LAST 12 INCHES WITH 2" PVC PIPE ON 90,000 THROUGH 120,000 BTUH MODELS. REDUCE AND TERMINATE THE LAST 12 INCHES WITH 1¼" PVC PIPE ON 45,000 THROUGH 75,000 BTUH MODELS.

⑤ INCREASE THE 12 IN. MINIMUM ABOVE GRADE TO KEEP TERMINAL OPENINGS ABOVE ANTICIPATED LEVEL OF SNOW ACCUMULATION WHERE APPLICABLE.

⑥ DETAIL "B", INSTALL WIND DEFLECTOR VANE IN 2 IN. PVC COUPLING IN VERTICLE POSITION USING PVC SOLVENT.

THE COMBUSTION AIR TERMINATION MUST BE IN THE SAME PRESSURE ZONE AS THE EXHAUST TERMINATION.

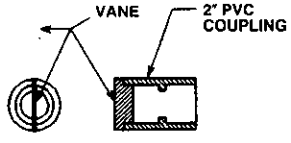

COMBUSTION AIR TERMINATION
⑥ DETAIL B

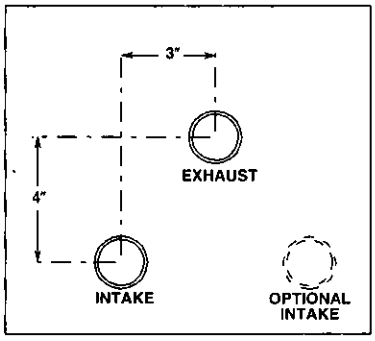

DETAIL C
EXHAUST / INTAKE RELATIONSHIP

I407

LOCATION REQUIREMENTS HORIZONTAL DIRECT VENTS

⚠ CAUTION

THE COMBUSTION PRODUCTS AND MOISTURE IN THE FLUE GASES WILL CONDENSE AS THEY LEAVE THE TERMINATION. THE CONDENSATE CAN FREEZE ON THE EXTERIOR WALL, UNDER THE EAVES AND ON SURROUNDING OBJECTS. SOME DISCOLORATION TO THE EXTERIOR OF THE BUILDING IS TO BE EXPECTED. HOWEVER, IMPROPER LOCATION OR INSTALLATION CAN RESULT IN STRUCTURAL OR EXTERIOR FINISH DAMAGE TO THE BUILDING AND MAY RECIRCULATE PRODUCTS OF COMBUSTION INTO THE COMBUSTION AIR TERMINAL AND FREEZE.

NOTE: In Canada vent terminations should be done in accordance with the current CAN/CGA-B149 Gas Installation Code and/or local codes.

The vent must be installed with the following minimum clearances. See Figures 22 and 23.

1. The bottom of the vent terminal and the air inlet shall be located at least 12 inches above grade. Increase the 12-in. minimum to keep the terminal openings above the level of snow accumulation, where applicable.
2. The vent shall not terminate over public walkways or over an area where condensate or vapor could create a nuisance or hazard.
3. The vent terminal shall be located at least one foot from any opening through which flue gases could enter a building.
4. The vent terminal shall be at least 3 feet above any forced air inlet located within 10 feet, except the combustion air inlet of a direct vent appliance.
5. The vent terminal shall have a minimum horizontal clearance of 4 feet from electric meters, gas meters, regulators and relief equipment.
6. The air inlet shall be located at least 10 feet horizontally from the vent of any other gas or fuel burning appliance or electric clothes drier. The only exception to this requirement is the case of multiventing two or more of these furnaces. For those specifics refer to the section on multiventing in these instructions.

In addition to the minimum clearances listed above, the vent location should also be governed by the following guidelines.

1. **Do not terminate under any kind of patio or deck. If running the vent under a deck, insulate it to insure no condensate freezes and blocks the pipe.**
2. Do not terminate behind any area that may allow the flue products to become stagnant and recirculate.
3. Do not locate on the side of a building with prevailing winter winds. This will help prevent moisture from freezing on walls and overhangs (under eaves).
4. Do not extend vent directly through brick or masonry surfaces. Use a rust-resistant sheet metal or plastic backing plate behind vent. See Figure 19.
5. Do not locate too close to shrubs as condensate may stunt or kill them.
6. Minimum vertical clearances of 1 foot are recommended for overhangs up to 1 foot horizontal. The vertical clearance should be increased equally for each additional increase in horizontal overhang to a maximum vertical clearance of 6 feet.
7. Caulk all cracks, seams and joints within 6 feet horizontally and above and below vent. See Figure 23.

FIGURE 22
MOISTURE ZONES

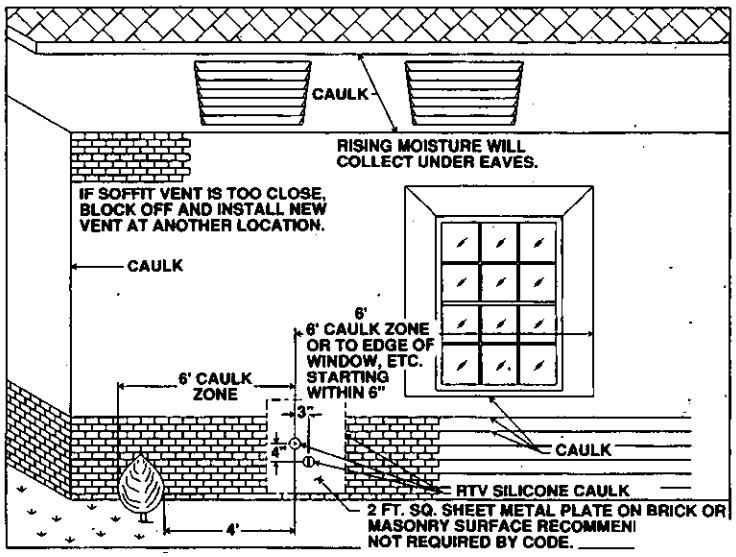

FIGURE 23
DIRECT VENT MINIMUM CLEARANCES

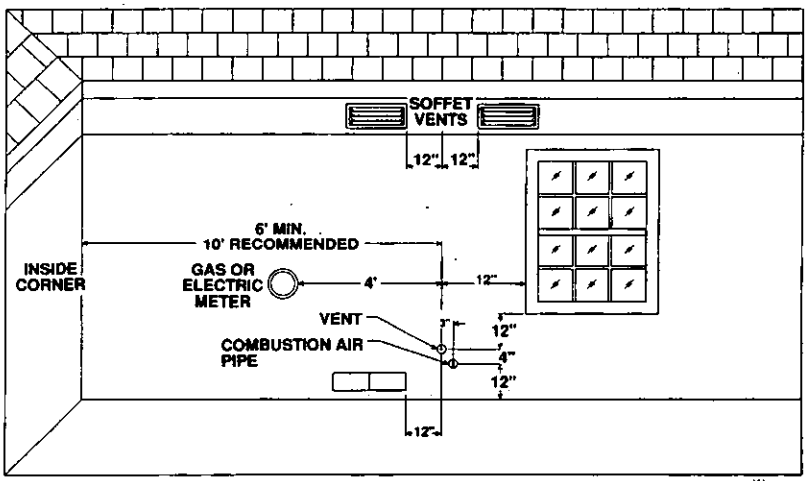

FIGURE 24
TWO FURNACE VENTING THROUGH ROOF

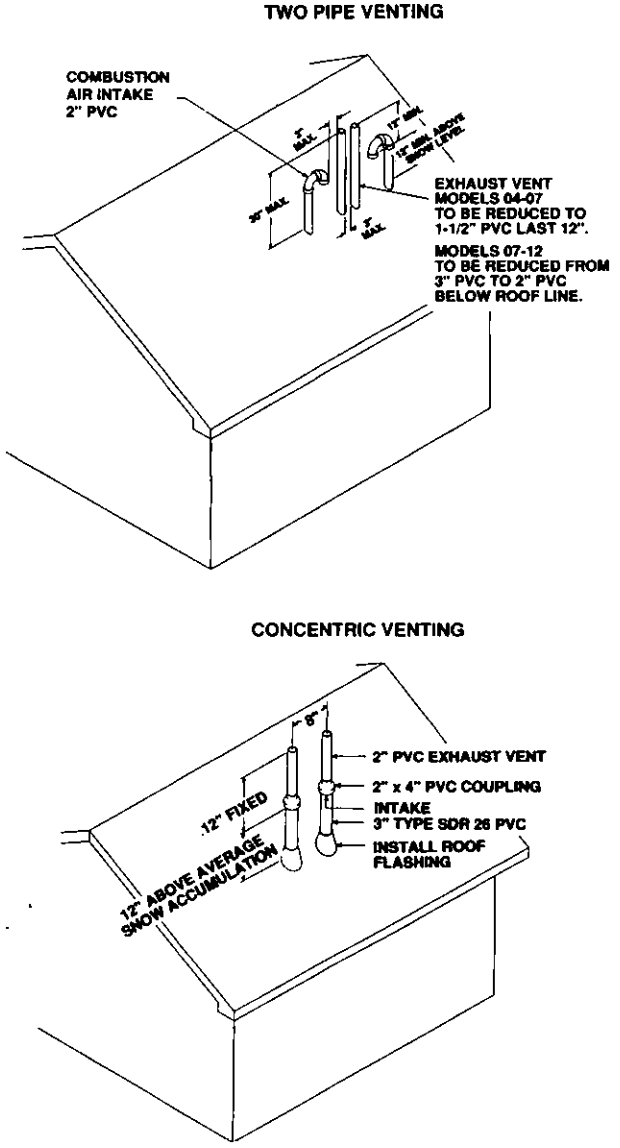

FIGURE 25
TWO FURNACE VENTING THROUGH WALL

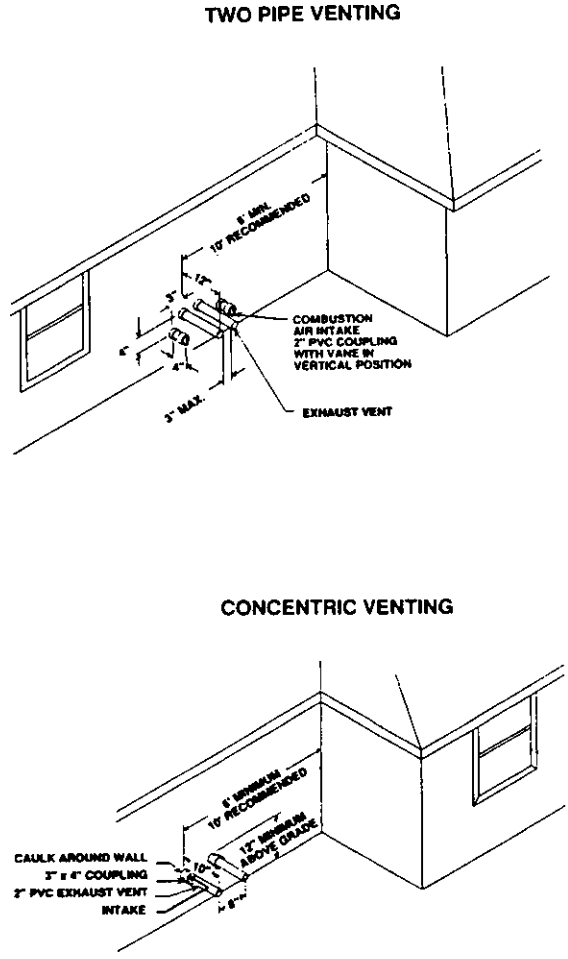

8. Painted surfaces must be sound and in good condition with no cracking, peeling, etc. Painted surfaces will require maintenance.
9. Do not expose 3" x 2" reducer/ bushing to outdoor ambient temperatures.

MULTIVENTING

IF VENTING TWO OR MORE FURNACES NEAR EACH OTHER IS REQUIRED, EACH FURNACE MUST BE INDIVIDUALLY VENTED – NO COMMON VENTING IS PERMITTED. See Figures 24 and 25 for positioning of the terminations. When more than two furnaces are to be vented, there must be at least 4 feet between the first two furnaces and the third, etc.

CONNECTING TO FURNACE

IMPORTANT: *Clean and debur all pipe cuts. The shavings must not be allowed to block the exhaust, inlet or condensate drain pipes.*

UPFLOW FURNACE

The exhaust pipe connection is a 2-in. female PVC pipe fitting extending through the left side of the furnace top plate. This opening has a protective cap which should be removed just prior to installing the exhaust pipe. When 2-in. pipe is used, connect it directly to this fitting. When 3-in. pipe is used, connect a 2 to 3-in. coupling to this fitting with a short piece of 2-in. PVC pipe.

The inlet combustion air connection is at the right side of the top plate. An alternate combustion inlet air connection may be made on the right side of the jacket. This opening has a plastic cap. A combustion inlet air connection fitting is supplied with the furnace and it must be installed in the furnace by screwing it into the opening. Make sure the rubber "O-ring" supplied with the furnace is used with this fitting. See Figure 26.

DOWNFLOW/HORIZONTAL FURNACE

The exhaust pipe connection is a 2-in. upflow only PVC pipe fitting extending through the right side of the furnace top cover. This opening has a protective cap which should be removed just prior to installing the exhaust pipe. When 2-in. pipe is used, connect it directly to this fitting. When 3-in. pipe is used, connect with a 2- to 3-in. coupling directly to the 2-in. pipe.

The combustion inlet air connection is a 2-in. extruded hole on the left side of the top plate. When a 2-in. pipe is used, attach a 2-in. PVC coupling over this hole with RTV sealant and also add two sheet metal screws through the coupling into the extrusion to secure it in place, and add the required piping. When 3-in. pipe is required, use a 2- to 3-in. coupling and add the required piping. See Figure 27.

FIGURE 26
UPFLOW COMBUSTION AIR AND VENT PIPE CONNECTION

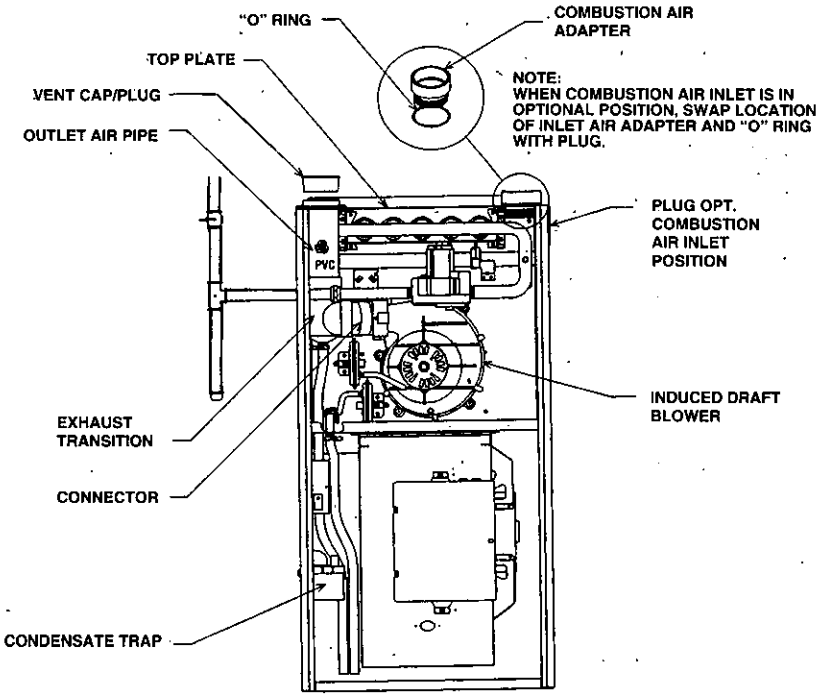

FIGURE 27
DOWNFLOW/HORIZONTAL COMBUSTION AIR AND VENT PIPE CONNECTION

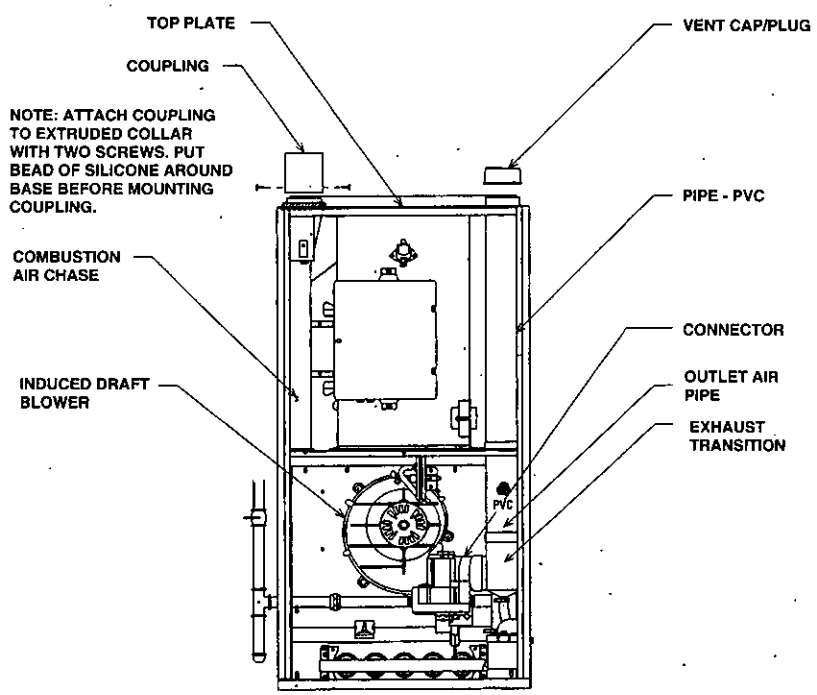

CONDENSATE DRAIN/NEUTRALIZER

GENERAL INFORMATION

⚠CAUTION

DO NOT RUN DRAIN OUTDOORS. FREEZING OF CONDENSATE CAN CAUSE PROPERTY DAMAGE.

IMPORTANT: *Do not connect into a common drain line with an air conditioner evaporator coil drain located below the furnace. A blocked or restricted drain line can result in overflow of the coil pan and negate the furnace blocked drain shutoff control.*

FILL TRAP ASSEMBLY WITH WATER BEFORE OPERATING THE FURNACE. This can be done by removing the drain hose from the trap and pouring about a cup of water into the vent trap. Water will flow into the house drain when the trap is full.

If local codes require, install a condensate neutralizer cartridge in the drain line. Install cartridge in horizontal position only. Also install an overflow line if routing to a floor drain. See Figures 28 and 29.

If no floor drain is available, install a condensate pump that is resistant to acidic water. Pumps are available from your local distributor. If pump used is not resistant to acidic water, a condensate neutralizer must be used ahead of the pump. The condensate pump must have an auxiliary safety switch to prevent operation of the furnace and resulting overflow of condensate in the event of pump failure. The safety switch must be wired through the "R" circuit only (low voltage) to provide operation in either heating or cooling modes.

UPFLOW MODELS

The condensate drain trap is located in the blower compartment on the left-hand side of the jacket. A short piece of 1/2-in. PVC pipe and a 1/2-in. tee are provided. Connect the 1/2-in. pipe to the elbow on the trap and the tee to this pipe so that the open end is upward. Connect at least a 10 3/16" riser to the top of the tee and run a drain tube from the bottom of the tee to a floor drain or condensate pump. Use a solvent cement that is compatible with PVC material. Cut the drain hoses to the appropriate length and connect to the trap with hose clamps. Tighten the clamps with pliers and check for leaks after attaching.

DOWNFLOW MODELS

The condensate trap is located on the right side of the cabinet in the burner compartment. A short piece of 1/2-in. PVC pipe and a 1/2-in. tee are provided. Connect the 1/2-in. pipe to the elbow on the trap and the tee to this pipe so that the open end is upward. Connect a 5½-in. riser to the top of the tee and run a drain tube from the bottom of the tee to a floor drain or condensate pump. Use a solvent cement that is compatible with PVC material.

FIGURE 28
UPFLOW CONDENSATE DRAIN

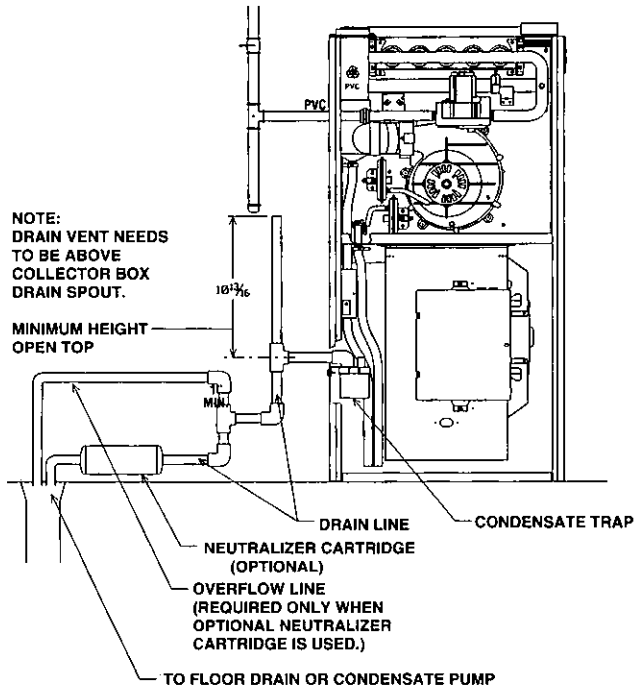

I408

➤ FIGURE 29
DOWNFLOW CONDENSATE DRAIN

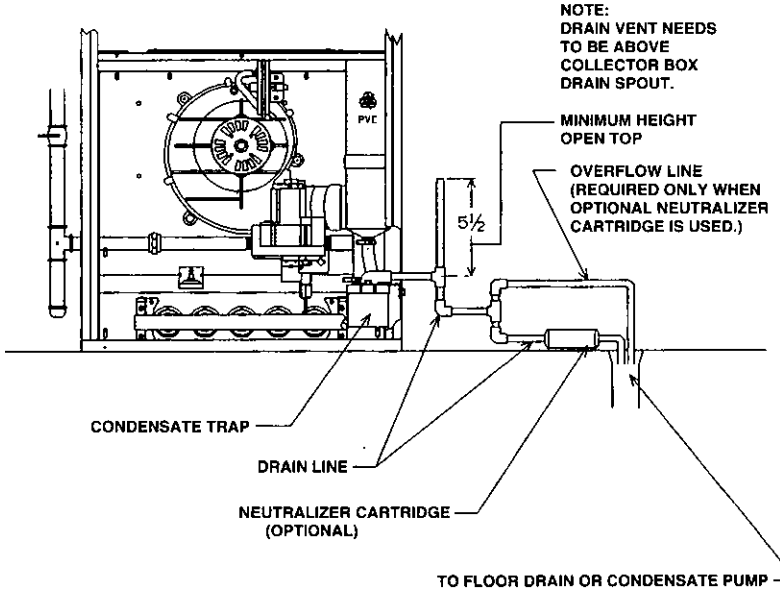

I408

REVERSING THE TRAP

UPFLOW UNITS

The trap may be moved to the right side for right side drainage. Open the knockout for the drain on the right side of the cabinet. Remove the bracket holding the trap from the left side. Seal the left side drain hole with a plug provided in the cloth bag with the furnace. Position the mounting bracket and trap so that the drain elbow is centered in the hole on the right. See Figure 30.

Drill two holes in the cabinet to mount the bracket. Mount the trap and bracket to the right side with the drain elbow pointing through the knockout. Connect the 1/2-in. pipe and tee as noted above. Route the drain hoses over the top of the electric box, cut to the appropriate length, and connect to the trap with hose clamps.

IMPORTANT: DO NOT ALLOW ANY SAGS OR KINKS IN THE HOSES. *This prevents proper condensate flow.*

IMPORTANT: *Do not connect into a common drain line with an air conditioner evaporator coil drain located above the furnace. A blocked or restricted drain line can result in overflow of the coil pan and negate the furnace blocked drain shutoff control.*

DOWNFLOW UNITS

To convert to left side drainage, first remove the drainage hoses from the trap. Remove the trap from its mounting bracket, rotate it 180°, and mount in place with the drainage elbow pointing to the left. Reattach the drain hoses. Remove the plastic drainage knockout from the left side. See Figure 31.

IMPORTANT: *When changing to the left side, interchange the rubber bushing on the right side with the hole plug on the left side. The hole plug must be in place to assure that the control compartment is sealed.*

A length of 1/2-in. PVC pipe is provided for left hand drainage. Glue one end of the pipe to the elbow in the trap. Cut the pipe so that it extends through the left cabinet side one inch. Connect the 1/2-in. tee to the pipe with a 5-in. riser and drain tube as listed above. Use the plastic plug from the left side drainage knockout to seal the right side drainage knockout.

IMPORTANT: *Do not connect into a common drain line with an air conditioner evaporator coil drain located above the furnace. A blocked or restricted drain line can result in overflow of the coil pan and negate the furnace blocked drain shutoff control.*

FILLING THE TRAP

FILL THE TRAP ASSEMBLY WITH WATER BEFORE OPERATING THE FURNACE. Do this by removing the drain hose from the trap or from the connection to the secondary coil. Pour about a cup of water into the vent trap. Any excess water flows into the house drain when the trap is full.

FIGURE 30
UPFLOW OPPOSITE SIDE CONDENSATE TRAP CONNECTION

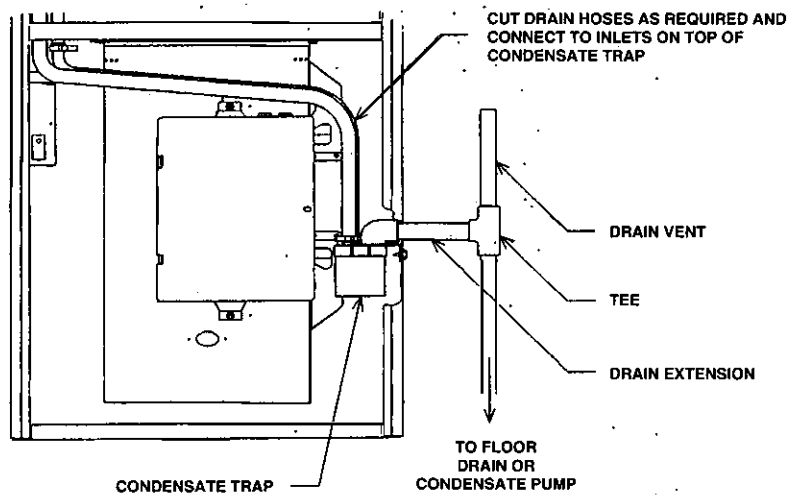

FIGURE 31
DOWNFLOW OPPOSITE SIDE CONDENSATE TRAP CONNECTION

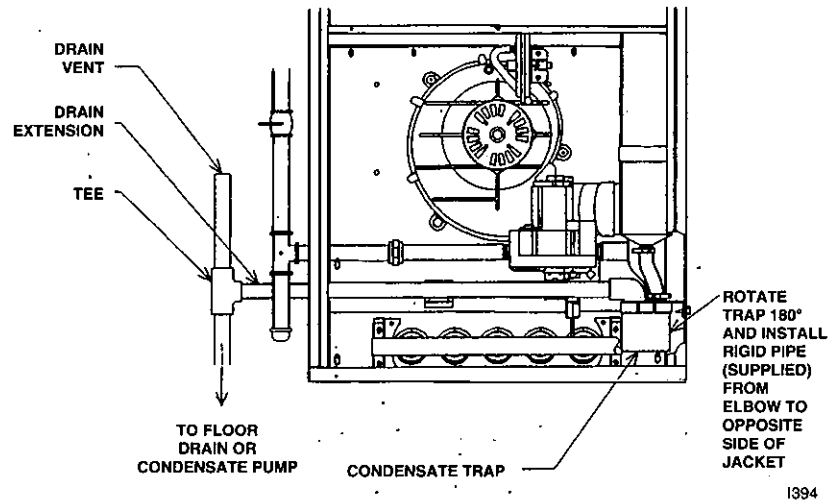

CONDENSATE DRAIN FOR HORIZONTAL INSTALLATION

Refer to Figure 33 for Steps 1-5.

1. This unit is shipped factory ready for downflow installation. The condensate trap assembly and drain hoses require conversion for horizontal installation. Remove the existing condensate trap with the unit in the upright position.
2. Remove the burner compartment door from the unit.
3. Remove the two screws from the right side of the furnace jacket which support the trap mounting bracket ②. Remove the two plastic plugs on either side of the trap outlet hole and discard.
4. Remove the (L-shaped) clear vinyl drain tube ③ from the top of the existing trap ①.

   Do not disconnect the short end from the furnace collector box.
5. Remove the ribbed drain tube ④ from the existing trap ① and the exhaust transition ⑤. Discard this tube. Retain the clamps for future use. Additional clamps are provided in the parts bag if any clamps are damaged during conversion process.

NOTE: The following steps should take place with the furnace in the horizontal position.

Refer to Figure 34 for Steps 6-11.

6. Locate the parts bag in the burner compartment. Install two plastic plugs ⑥ in the side of the jacket from bottom side up.
7. Fill the trap assembly ⑦ with 1/2 cup of water.
8. Attach the gasket ⑧ onto the trap assembly so that the gasket holes on the gasket line up with the holes on the trap assembly.
9. Insert the trap assembly with gasket up through the existing hole in the jacket and secure from inside the jacket. Use two screws provided. Screw down into the two "ears" molded into either side of the trap. Snug the trap assembly against the furnace jacket compressing the gasket slightly to eliminate any air leaks. Do not overtighten!
10. Attach the black molded rubber 90° elbow ⑨ to the straight spout on the trap top using a black nylon clamp ⑩. Attach the other end of the rubber elbow to the spout ① located on the exhaust transition ⑤ using a black nylon clamp.
11. Attach the end of the ribbed tube ③ to the 45° elbow molded into the top of the trap assembly using a black nylon clamp.

    IMPORTANT: Tighten all clamp connections with a pair of pliers and check for leaks after conversion is complete.
12. Connect a 5 1/2 " riser to the top of the tee and run a drain tube from the bottom of the tee to a floor drain or condensate pump. Use a solvent cement that is compatible with PVC material.

FIGURE 32
DOWNFLOW CONDENSATE DRAIN

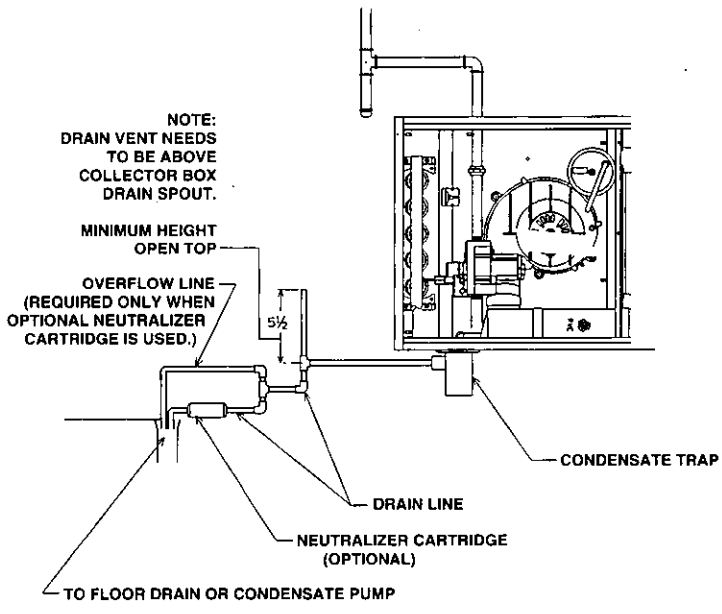

CONDENSATE TRAP CONVERSION FROM DOWNFLOW TO HORIZONTAL INSTALLATION

FIGURE 33
UPRIGHT POSITION: REMOVAL OF EXISTING DOWNFLOW CONDENSATE TRAP

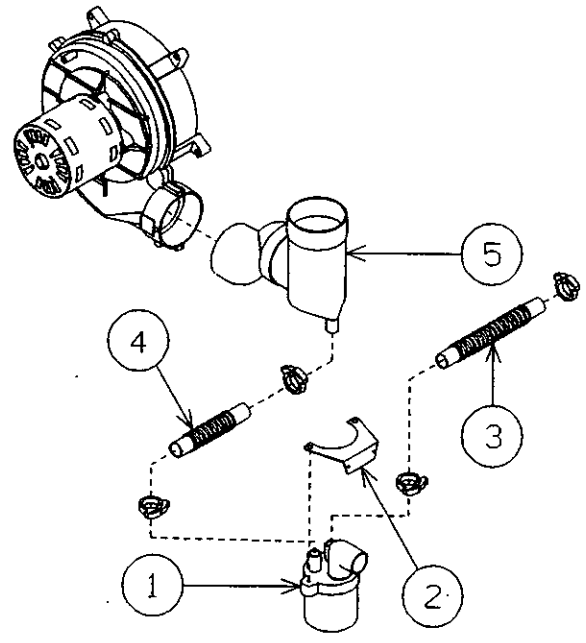

FIGURE 34
HORIZONTAL POSITION: CONDENSATE TRAP INSTALLATION FOR HORIZONTAL OPERATION

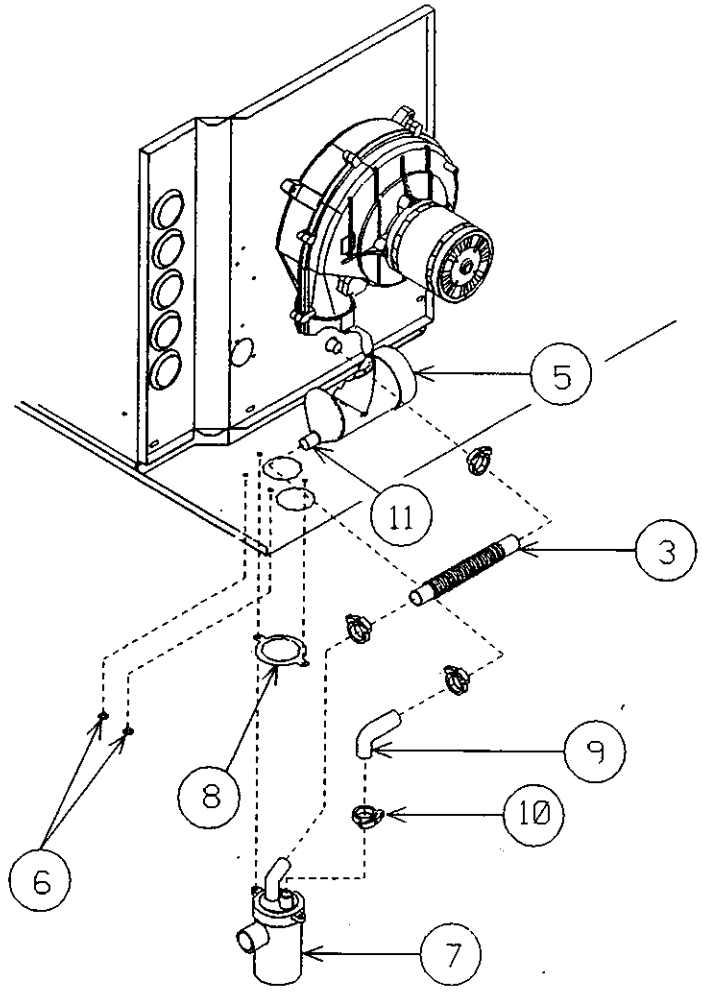

I534

GAS SUPPLY AND PIPING

GAS SUPPLY

⚠ WARNING

THIS FURNACE IS EQUIPPED AT THE FACTORY FOR USE ON NATURAL GAS ONLY. CONVERSION TO LP GAS REQUIRES A SPECIAL KIT SUPPLIED BY THE DISTRIBUTOR OR MANUFACTURER. MAILING ADDRESSES ARE LISTED ON THE FURNACE RATING PLATE, PARTS LIST AND WARRANTY. FAILURE TO USE THE PROPER CONVERSION KIT CAN CAUSE FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. See the conversion kit index supplied with the furnace. This index identifies the proper LP Gas Conversion Kit required for each particular furnace.

IMPORTANT: *Any additions, changes or conversions required for the furnace to satisfactorily meet the application should be made by a qualified installer, service agency or the gas supplier, using factory-specified or approved parts.*

IMPORTANT: *Connect this furnace only to gas supplied by a commercial utility.*

IMPORTANT: *A U.L. recognized fuel gas and CO detector(s) are recommended in all applications, and their installation should be in accordance with the manufacturer's recommendations and/or local laws, rules, regulations or customs.*

GAS PIPING

Install the gas piping according to all local codes and regulations of the utility company.

If possible, run a separate gas supply line directly from the meter to the furnace. Consult the local gas company for the location of the manual main shut-off valve. **The gas line and manual gas valve must be adequate in size to prevent undue pressure drop and never smaller than the pipe size to the combination gas valve on the furnace.** Refer to Table 3 for the recommended gas pipe size. See Figure 35 for typical gas pipe connections.

FIGURE 35
GAS PIPING INSTALLATION

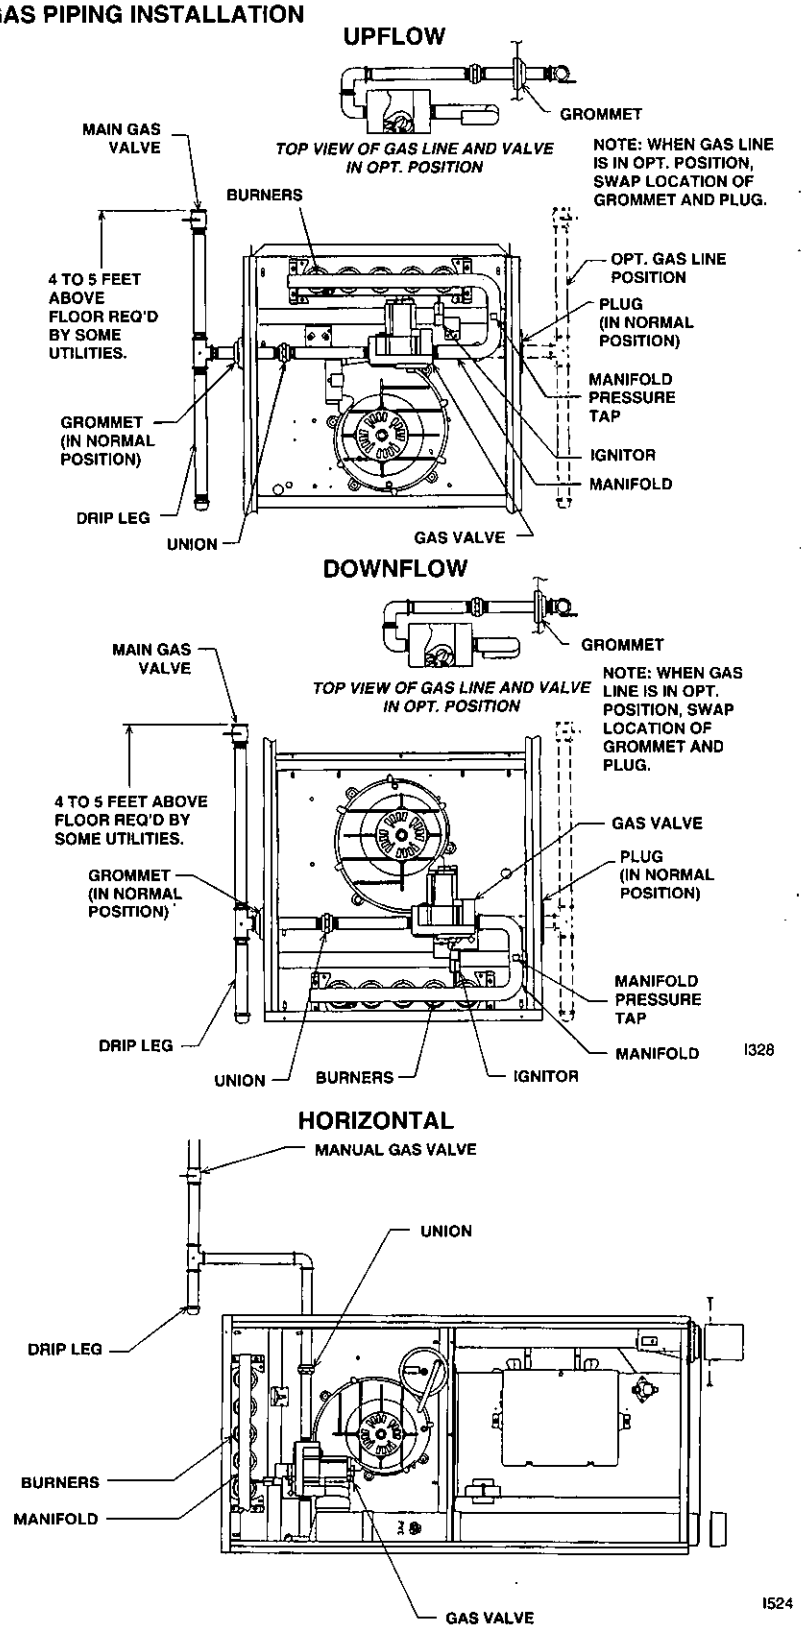

IMPORTANT: DO NOT RUN A FLEXIBLE GAS CONNECTOR INSIDE THE UNIT. Extend the 1/2" black pipe from the gas valve to the outside of the cabinet. Connect any flexible gas connector from there to the gas piping.

Install a ground joint union inside the cabinet to easily remove the control valve assembly. Install a manual shut-off valve in the gas line outside the furnace casing. The valve should be readily accessible to turn the gas supply on or off. Install a drip leg in the gas supply line as close to the furnace as possible. Always use a pipe compound resistant to the action of liquefied petroleum gases on all threaded connections.

IMPORTANT: *When making gas pipe connections, use a back-up wrench to prevent any twisting of the control assembly and gas valve.*

Any strains on the gas valve can change the position of the gas orifices in the burners. This can cause erratic furnace operation.

IMPORTANT: DO NOT RUN A FLEXIBLE GAS CONNECTOR INSIDE THE UNIT. Extend the 1/2" black pipe from the gas valve to the outside of the cabinet. Connect any flexible gas connector from there to the gas piping.

The gas pipe gasket in the cabinet does not seal around a flexi-ble gas connector. **It is important to have all openings in the cabinet burner compartment sealed for proper furnace operation.**

IMPORTANT: *ENSURE that the furnace gas control valve not be subjected to high gas line supply pressures.*

DISCONNECT the furnace and its individual shut-off valve from the gas supply piping during **any pressure testing that exceeds 1/2 p.s.i.g. (3.48 kPa).**

GAS PRESSURE

Natural gas supply pressure should be 5" to 7" w.c. LP gas supply pressure should be 11" to 14" w.c. **This pressure must be maintained with all other gas-fired appliances in operation.** Do not exceed a maximum gas supply pressure of 14" w.c. with any fuel.

TABLE 3
NATURAL GAS PIPE CAPACITY TABLE (CU. FT./HR.)

Capacity of gas pipe of different diameters and lengths in cu. ft. per hr. with pressure drop of 0.3 in. and specific gravity of 0.60 (natural gas).

Nominal Iron Pipe Size, Inches	Length of Pipe, Feet							
	10	20	30	40	50	60	70	80
1/2	132	92	73	63	56	50	46	43
3/4	278	190	152	130	115	105	96	90
1	520	350	285	245	215	195	180	170
1-1/4	1,050	730	590	500	440	400	370	350
1-1/2	1,600	1,100	890	760	670	610	560	530

After the length of pipe has been determined, select the pipe size which will provide the minimum cubic feet per hour required for the gas input rating of the furnace. By formula:

$$\text{Cu. Ft. Per Hr. Required} = \frac{\text{Gas Input of Furnace (BTU/HR)}}{\text{Heating Value of Gas (BTU/FT}^3\text{)}}$$

The gas input of the furnace is marked on the furnace rating plate. The heating value of the gas (BTU/FT3) may be determined by consulting the local natural gas utility or the LP gas supplier.

The minimum supply pressure to the gas valve for proper furnace input adjustments is 5" w.c. for natural gas, however 6" to 7" is recommended. The minimum supply pressure is 11" w.c. for LP gas.

⚠ WARNING

NEVER PURGE A GAS LINE INTO THE COMBUSTION CHAMBER. NEVER USE MATCHES, FLAME OR ANY IGNITION SOURCE FOR CHECKING LEAKAGE. FAILURE TO ADHERE TO THIS WARNING CAN CAUSE A FIRE OR EXPLOSION RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

To check for gas leakage, use an approved chloride-free soap and water solution, an electronic combustible gas detector (see Figure 36), or other approved method.

FIGURE 36
ELECTRONIC COMBUSTIBLE GAS DETECTOR

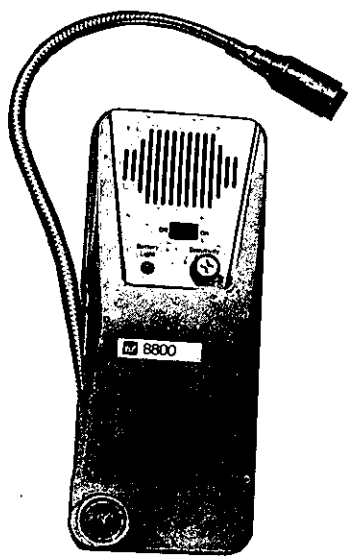

GAS VALVE

This furnace has a 24-volt operated valve. It has ports for measuring supply pressure and manifold pressure. The valve body contains a pressure regulator to maintain proper manifold pressure.

A manual control is on the valve body. It can be set to only the **"ON"** or **"OFF"** positions. The gas valve is a slow-opening valve. See Figure 37.

When energized, it takes 6 to 8 seconds to fully open.

FIGURE 37
GAS VALVE

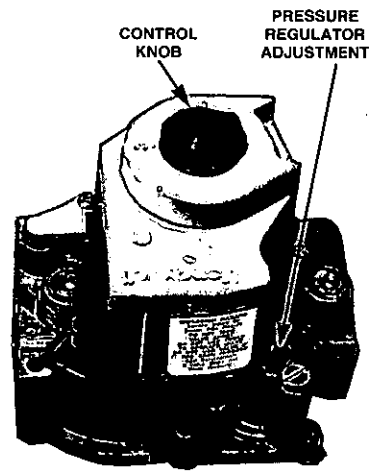

LP CONVERSION

The valve can be converted to use liquified petroleum (LP) gas by replacing the pressure regulator spring with the conversion kit spring. This LP kit spring allows the regulator to maintain the proper manifold pressure for LP gas. The correct burner LP orifices are included in the kit. See Figure 38.

NOTE: Order the correct LP conversion kit from the furnace manufacturer. ***Furnace conversion to LP gas must be performed by a qualified installer, service agency or the gas supplier.***

To change orifice spuds for either conversion to LP or for elevation:

1. Shut off the manual main gas valve and remove the gas manifold.
2. Replace the orifice spuds.
3. Reassemble in reverse order.

Consult the following table if there is any question concerning orifice sizing.

ORIFICE SIZES		
US	**0 - 7999 FT.**	**8000 FT. & ABOVE**
Natural Gas	#50	#51
LP Gas	1.15 mm	1.10 mm
CANADIAN	**0 - 2000 FT.**	**2001-4500 FT.**
Natural Gas	#50	#50
LP Gas	1.15 mm	1.15 mm

4. Turn the gas supply back on and check for proper operation and manifold pressure. See Figures 39, 40 and 41.
5. Attach the notice label alerting the next service technician that the furnace has been converted to LP gas.

NOx MODELS

IMPORTANT: NOx inserts are not required when operating this furnace on LP gas.

When converting furnaces equipped with NOx inserts to LP gas, remove the NOx insert assemblies. Steps for removal are listed below:

1. Turn off all electrical power and the gas supply to the furnace.
2. Remove the burner door from the furnace.
3. Remove the igniter assembly – **handle with care.**

FIGURE 38
LP KIT CONTENTS

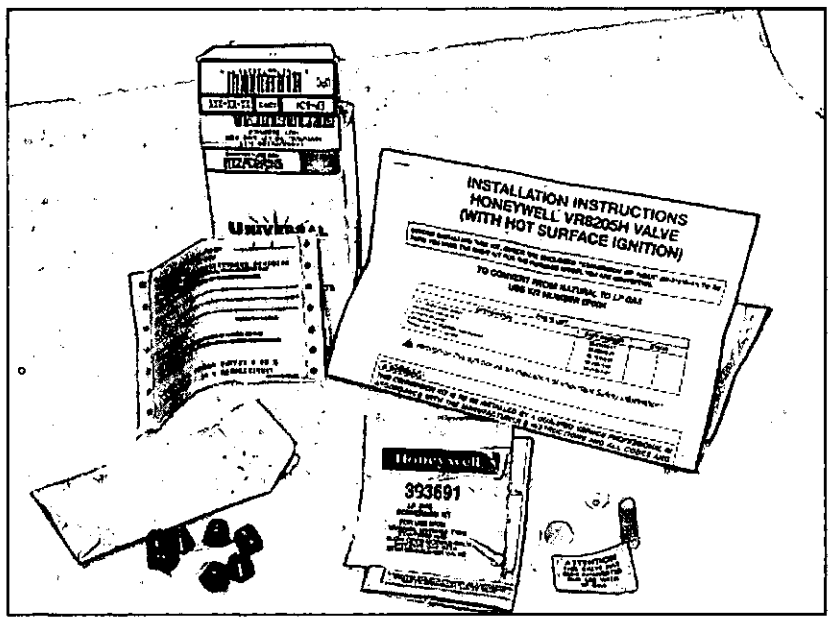

4. Remove the two screws attaching the NOx insert retainer brackets to the center panel. Pull the retainer rod.
5. Put the two screws back into the holes in the center panel.
6. Re-install the igniter and burner assemblies.
7. Replace burner door.
8. Turn on electrical power and gas supply to the unit.

FIGURE 39
HOSE CONNECTION TO LINE PRESSURE TAP

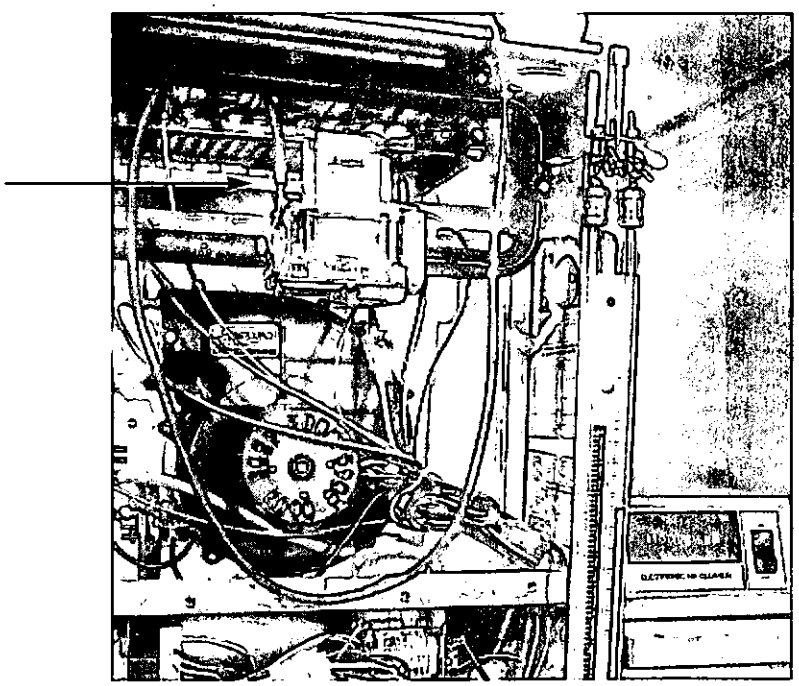

SETTING GAS PRESSURE

The maximum gas supply pressure to the furnace should be 7" w.c. natural gas, or 14" w.c. LP gas. The minimum supply gas pressure to the gas valve should be 5" w.c. natural gas or 11" w.c. LP gas. A properly calibrated U-Tube manometer is required for accurate gas pressure measurements.

Supply Gas Pressure Measurement. A line pressure tap is on the input side of the gas valve. See Figure 39.

1. With gas shut off to the furnace at the manual gas valve outside the unit, remove the input pressure tap plug.
2. Connect a U-Tube manometer to the pressure tap.
3. Turn on the gas supply and operate the furnace and all other gas-fired units on the same gas line as the furnace.
4. Note or adjust the line gas pressure to give:
   A. 5" - 7" w.c. for natural gas.
   B. 11" - 14" w.c. for LP gas.
5. Shut off the gas at the manual gas valve and remove the U-Tube manometer.
6. Replace the pressure tap plug before turning on the gas.

If the supply gas line pressure is above these ranges, install an in-line gas regulator to the furnace for natural gas units. With LP gas, have the LP supplier reduce the line pressure at the regulator.

If supply gas line pressure is below these ranges, either remove any restrictions in the gas supply piping or enlarge the gas pipe. See Tables 3 and 4. With LP gas, have the LP supplier adjust the line pressure at the regulator.

Manifold Gas Pressure Measurement. Natural gas manifold pressure should be 3.5" w.c. LP gas manifold pressure should be 10.0" w.c. Only small variations in gas pressure should be made by adjusting the pressure regulator.

1. With the gas to the unit shut off at the manual gas valve, remove the pressure tap plug in the gas manifold. See Figure 40.
2. Connect a U-Tube manometer to this pressure tap. See Figure 41.
3. Turn on the gas supply and operate the furnace.
4. Note or adjust the manifold gas pressure to give:
   A. 3.5" w.c. for natural gas.
   B. 10.0" w.c. for LP gas.
5. To adjust the pressure regulator, remove the regulator cap.
6. Turn the adjustment screw clockwise to increase pressure, or counterclockwise to decrease pressure.
7. Securely replace the regulator cap.
8. Shut off gas at the manual gas valve and remove the U-Tube manometer.
9. Replace the manifold pressure tap plug before turning on the gas.

FIGURE 40
MANIFOLD PLUG LOCATION

TABLE 4
LP GAS PIPE CAPACITY TABLE (CU. FT./HR.)

Maximum capacity of pipe in thousands of BTU per hour of undiluted liquefied petroleum gases (at 11 inches water column inlet pressure).
(Based on a Pressure Drop of 0.5 Inch Water Column)

Nominal Iron Pipe Size, Inches	Length of Pipe, Feet											
	10	20	30	40	50	60	70	80	90	100	125	150
1/2	275	189	152	129	114	103	96	89	83	78	69	63
3/4	567	393	315	267	237	217	196	182	173	162	146	132
1	1,071	732	590	504	448	409	378	346	322	307	275	252
1-1/4	2,205	1,496	1,212	1,039	913	834	771	724	677	630	567	511
1-1/2	3,307	2,299	1,858	1,559	1,417	1,275	1,181	1,086	1,023	976	866	787
2	6,221	4,331	3,465	2,992	2,646	2,394	2,205	2,047	1,921	1,811	1,606	1,496

Example (LP): Input BTU requirement of unit, 150,000
Equivalent length of pipe, 60 ft. = 3/4" IPS required.

FIGURE 41
MANIFOLD PRESSURE READING

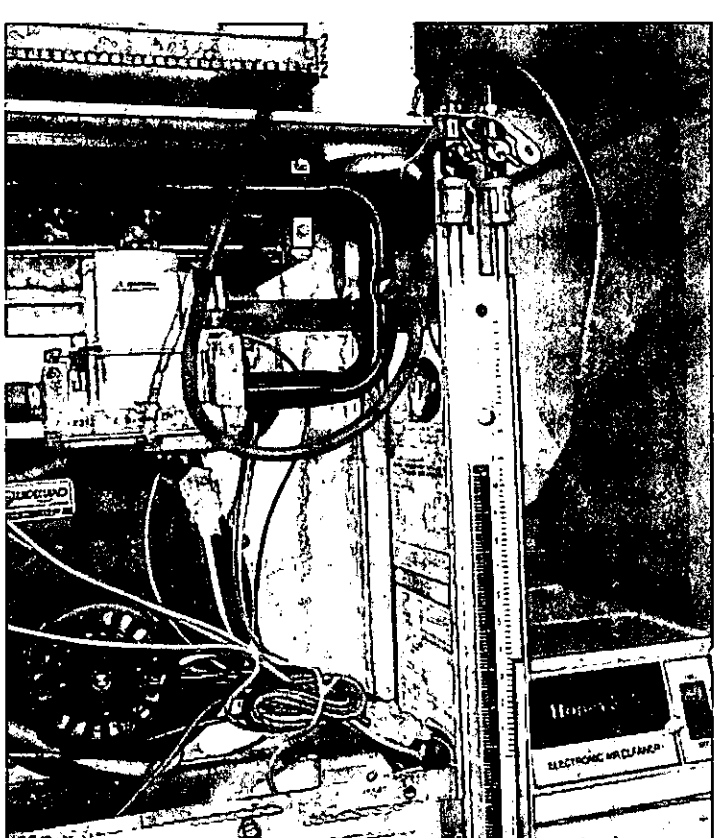

FIGURE 42
UPFLOW GROUNDING CONNECTIONS

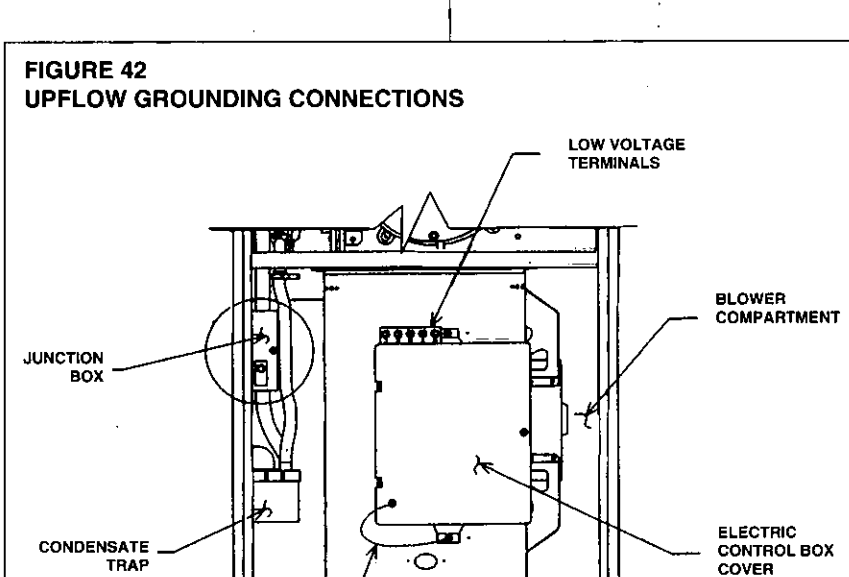

ELECTRICAL WIRING

⚠ WARNING

TURN OFF ELECTRIC POWER AT FUSE BOX OR SERVICE PANEL BEFORE MAKING ANY ELECTRICAL CONNECTIONS. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

⚠ WARNING

THE CABINET MUST HAVE AN UNINTERRUPTED GROUND ACCORDING TO THE LATEST EDITION OF THE NATIONAL ELECTRICAL CODE, ANSI/ NFPA70-, OR IN CANADA, THE CANADIAN ELECTRICAL CODE, CSA-C221 OR LOCAL CODES THAT APPLY. DO NOT USE GAS PIPING AS AN ELECTRICAL GROUND. A GROUND SCREW IS PROVIDED IN THE JUNCTION BOX. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

⚠ WARNING

THIS FURNACE IS EQUIPPED WITH A BLOWER DOOR SAFETY SWITCH. DO NOT DISABLE THIS SWITCH. FAILURE TO FOLLOW THIS WARNING CAN RESULT IN ELECTRICAL SHOCK, PERSONAL INJURY OR DEATH.

IMPORTANT: *The furnace must be installed so that the electrical components are protected from water (condensate).*

Before proceeding with the electrical connections, be certain that the voltage, frequency and phase corresponds to that specified on the furnace rating plate. For single furnace application, maximum over-current protection is 15 amperes.

Use a separate fused branch electrical circuit containing a properly sized fuse or circuit breaker. Run this circuit directly from the main switch box to an electrical disconnect that is readily accessible and located near the furnace. Connect from the electrical disconnect to the junction box on the left side of the furnace, inside the blower compartment. For

the proper connection, refer to the appropriate wiring diagram located on the inside cover of the furnace control box and in these instructions.

NOTE: **UPFLOW MODELS ONLY** The electrical junction box may be moved to the right side if necessary. A knockout is provided. Seal the opposite hole with plug provided.

NOTE: L1 (hot) and L2 (neutral) polarity must be observed when making field connections to the furnace. The ignition control may not sense flame if L1 and L2 are reversed. See Figure 43.

Make all electrical connections in accordance with the latest edition of the National Electrical Code ANSI/NFPA70 – or in Canada, the Canadian Electrical Code Part 1-CSA Standard C22.1 and local codes having jurisdiction.

These may be obtained from:

National Fire Protection Association, Inc.
Batterymarch Park
Quincy, MA 02269

Canadian Standards Association
178 Rexdale Boulevard
Rexdale, Ontario, Canada M9W 1R3

THERMOSTAT

The room thermostat must be compatible with the integrated furnace control on the furnace. All thermostats available from the furnace manufacturer's Parts Department are acceptable. Generally, all thermostats that are not of the "current robbing" type are compatible with the integrated furnace control. The low voltage wiring should be sized as shown in Table 5.

TABLE 5
LOW VOLTAGE WIRING

THERMOSTAT LOAD - AMPS	SOLID COPPER WIRE - AWG					
3.0	16	14	12	10	10	10
2.5	16	14	12	12	10	10
2.0	18	16	14	12	12	10
	50	100	150	200	250	300
	LENGTH OF RUN - FEET ①					

① ➤ The total wire length is the distance from the furnace to the thermostat and back to the furnace.

NOTE: Do not use 24 volt control wiring smaller than No. 18.

NOTE: Do not use 24 volt control wiring smaller than No. 18 AWG.

NOTICE: An isolation relay can be added to prevent any compatibility problems that may occur. Use a single-pole, single-throw relay with a 24-volt AC coil. The contacts should be rated for .5 amps minimum at 24 volts. See Figure 44.

Install the room thermostat in accordance with the instruction sheet packed in the box with the thermostat.

Run the thermostat lead wires inside the blower compartment and connect to low voltage terminals as shown on the wiring diagram. Never install the thermostat on an outside wall or where it will be influenced by drafts, concealed hot or cold water pipes or ducts, lighting fixtures, radiation from fireplace, sun rays, lamps, televisions, radios or air streams from registers. Refer to instructions packed with the thermostat for "heater" selection or adjustment.

FIGURE 43
LINE VOLTAGE CONNECTIONS
HONEYWELL S9201E2001 AND UTEC 1012-920 & 1028-927 CONTROL BOARDS

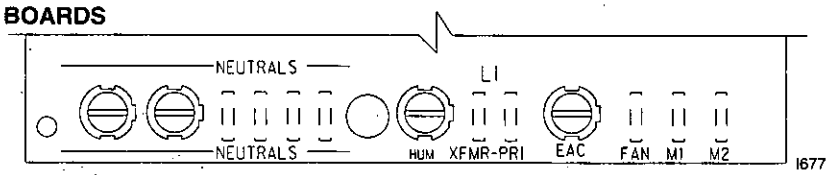

UTEC 1012-925 CONTROL BOARD

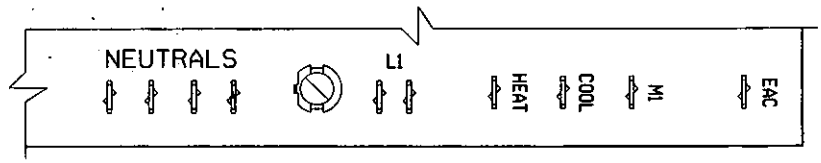

➤ JOHNSON CONTROLS G961DAJ-2401 CONTROL BOARD

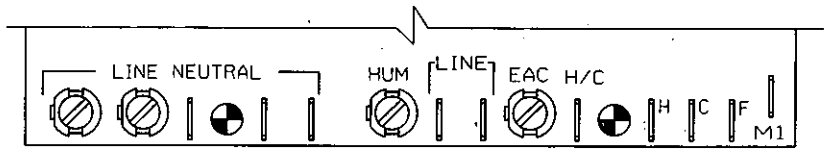

FIGURE 44
ISOLATION RELAY

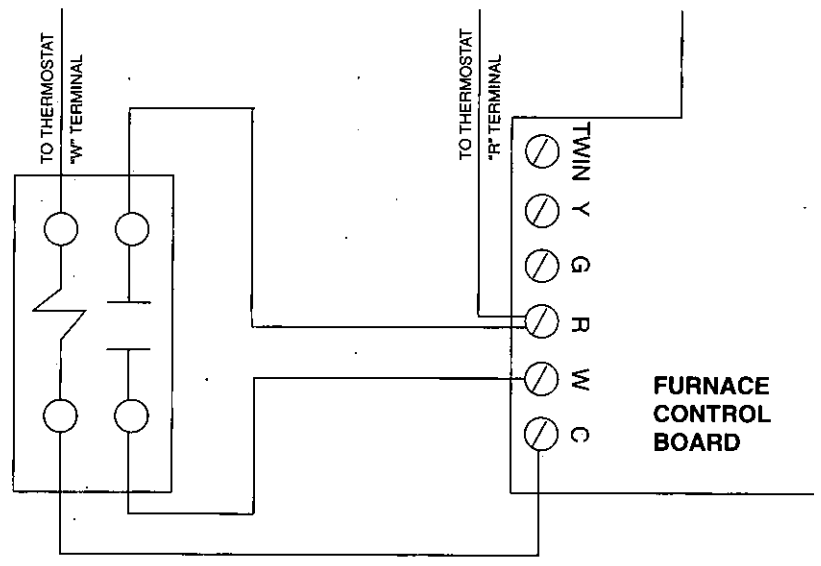

ACCESSORIES

FIELD-INSTALLED OPTION ACCESSORIES

ELECTRONIC AIR CLEANER

Line voltage power can be supplied from the screw terminal "EAC" and a line voltage neutral screw terminal on the control board. This will power the electronic air cleaner whenever the circulating air blower is in operation.

HUMIDIFIER

Line voltage power can be supplied from screw terminal "HUM" to a line voltage neutral screw terminal on the control board. This will power the humidifier whenever the burner is on and the circulating air blower is operating in the heating mode.

NOTE: Maximum current – 1.0 amps for each option.

HIGH ALTITUDE KIT

Models installed at altitudes of 5,000 feet and above require a pressure switch change. These may be ordered under Option Code No. 278. Models with this option code will have the additional pressure switch and burner orifice packed with the furnace. The installer should replace the induced draft blower pressure switch installed on the furnace with the new pressure switch. The burner orifices should also be changed when required (See Table Below). The following high altitude kits are also available:

Kit No:	RXGY-F04 – set point – 0.70" w.c.
	RXGY-F05 – set point – 0.60" w.c.
	RXGY-F06 – set point – 1.11" w.c.
	RXGY-F07 – set point – 0.95" w.c.

The following is a list of furnace inputs and required pressure switches:

INPUT	KIT NO.	SET POINT	MAKE POINT
45,000	RXGY-F06	1.11" w.c.	1.29" w.c.
60,000	RXGY-F06	1.11" w.c.	1.29" w.c.
75,000	RXGY-F07	0.95" w.c.	1.10" w.c..
90,000	RXGY-F06	1.11" w.c.	1.29" w.c..
105,000	RXGY-F04	0.70" w.c.	0.85" w.c.
120,000	RXGY-F05	0.60" w.c.	0.75" w.c.

ORIFICE SIZES		
U.S.	0 - 7999 FT.	8000 FT. & ABOVE
Natural Gas	#50	#51
LP Gas	1.15 mm	1.10 mm
CANADA	**0 - 2000 FT.**	**2001 TO 4500**
Natural Gas	#50	#50
LP Gas	1.15 mm	1.15 mm

NOTICE: DO NOT make any attempt to rerate the furnace by changing gas orifices or the gas pressure. Allow the natural derate of the gas to occur.

The natural derate is approximately 1.8% per 1000 feet.

No orifice sizing or other derate procedures are necessary unless the natural gas exceeds 1075 BTU/cu. ft. at sea level or the LP gas exceeds 2500 BTU/cu. ft. at sea level. If the heating values exceed these levels, consult the manufacturer for the derate procedures.

FURNACE TWINNING INSTALLATIONS

Twinning operation of two furnaces, installed side-by-side, connected by a common duct system with main power supplied by the same source, and controlled by a common thermostat can be done with the Honeywell S9201E2001, UTEC 1012-920 or 1028-927 and Johnson Controls G961DAJ-2401 integrated control boards.

IMPORTANT: TWINNING OF (-)GRJ- AND (-)GTJ- UNITS REQUIRES AN ACCESSORY TWINNING KIT. REFER TO THE SPECIFICATION SHEET FOR PROPER KIT. DO NOT ATTEMPT TO TWIN THESE MODELS BY USING THE INSTRUCTIONS BELOW.

It should be noted that both blowers will run simultaneously when there is a call for heating, cooling or fan.

The "OK" LED will flash if twinning is not set up properly.

HONEYWELL S9201E2001 CONTROL BOARD

1. **Single Stage Operation**
   (See Figure 45)
   a. Control board "ONE" is connected to the thermostat.
   b. Remove the jumper between the "XMIT" and "RCV" terminals.
   c. Connect wire from "XMIT" terminal of board "ONE" to "RCV" terminal of board "TWO."
   d. Connect wire from "RCV" terminal of board "ONE" to "XMIT" terminal of board "TWO."
   e. Connect wire between the grounds.
   f. Connect wire between the two "W" thermostat terminals.
2. **Two Stage Operation**
   (See Figure 46)
   a. Repeat steps a, b, c, d and e above.
   b. Connect "W1" of thermostat to "W" on control board "ONE".
   c. Connect "W2" of thermostat to "W" on control board "TWO".

UTEC 1012-920 & 1028-927 CONTROL BOARDS

1. **Single Stage Operation**
   (See Figure 47)
   a. Control board "ONE" is on furnace connected to the thermostat.
   b. The 24 VAC supply to both control boards must be in phase with each other.
   c. Connect the "C," "W" and "TWIN" terminals to counterparts on each control.
   d. Both control boards must have switch #3 in the "ON" position.
   e. Control board "ONE" must have the switch #4 in the "1st" position. The other control board must have switch #4 in the "ON" position for single stage heat operation. **NOTE:** The 1028-927 control board has no 4th, 1st-2nd switch, Staging is determined through "W" terminal connections only.
2. **Two Stage Operation**
   (See Figure 48)
   a. Follow above instructions: Switch #4 on control board "TWO" must be in "2nd" position. Control board "TWO" **must be** the slave (not connected to the thermostat) in two-stage operation.
   b. Connect "W2" on thermostat to "W" on control board "TWO".

Johnson Controls G961DAJ-2401

1. **Single Stage Operation**
   (See Figure 49)
   a. Control board "ONE" is on the furnace connected to the thermostat.
   b. The 24 VAC supply to both control boards must be in phase with each other.
   c. Connect the "C" "W" and "TWIN" terminals to counterparts on each control.
   d. Both control boards must have switch #1 in the "ON" position.
   e. Control board "ONE" must have switch #2 in the "ON" position. The other control board must have switch #2 in the "OFF" position for single stage heat.
2. **Two Stage Operation**
   (See Figure 50)
   a. Follow above instructions except connect "W2" on the thermostat to "W" on control board "TWO."
   b. Control board "TWO" **must be** the slave (not connected to the thermostat) in two-stage operation.

FIGURE 45
HONEYWELL NO. S9201E2001 CONTROL BOARD
TWINNING CONNECTION SINGLE STAGE OPERATION

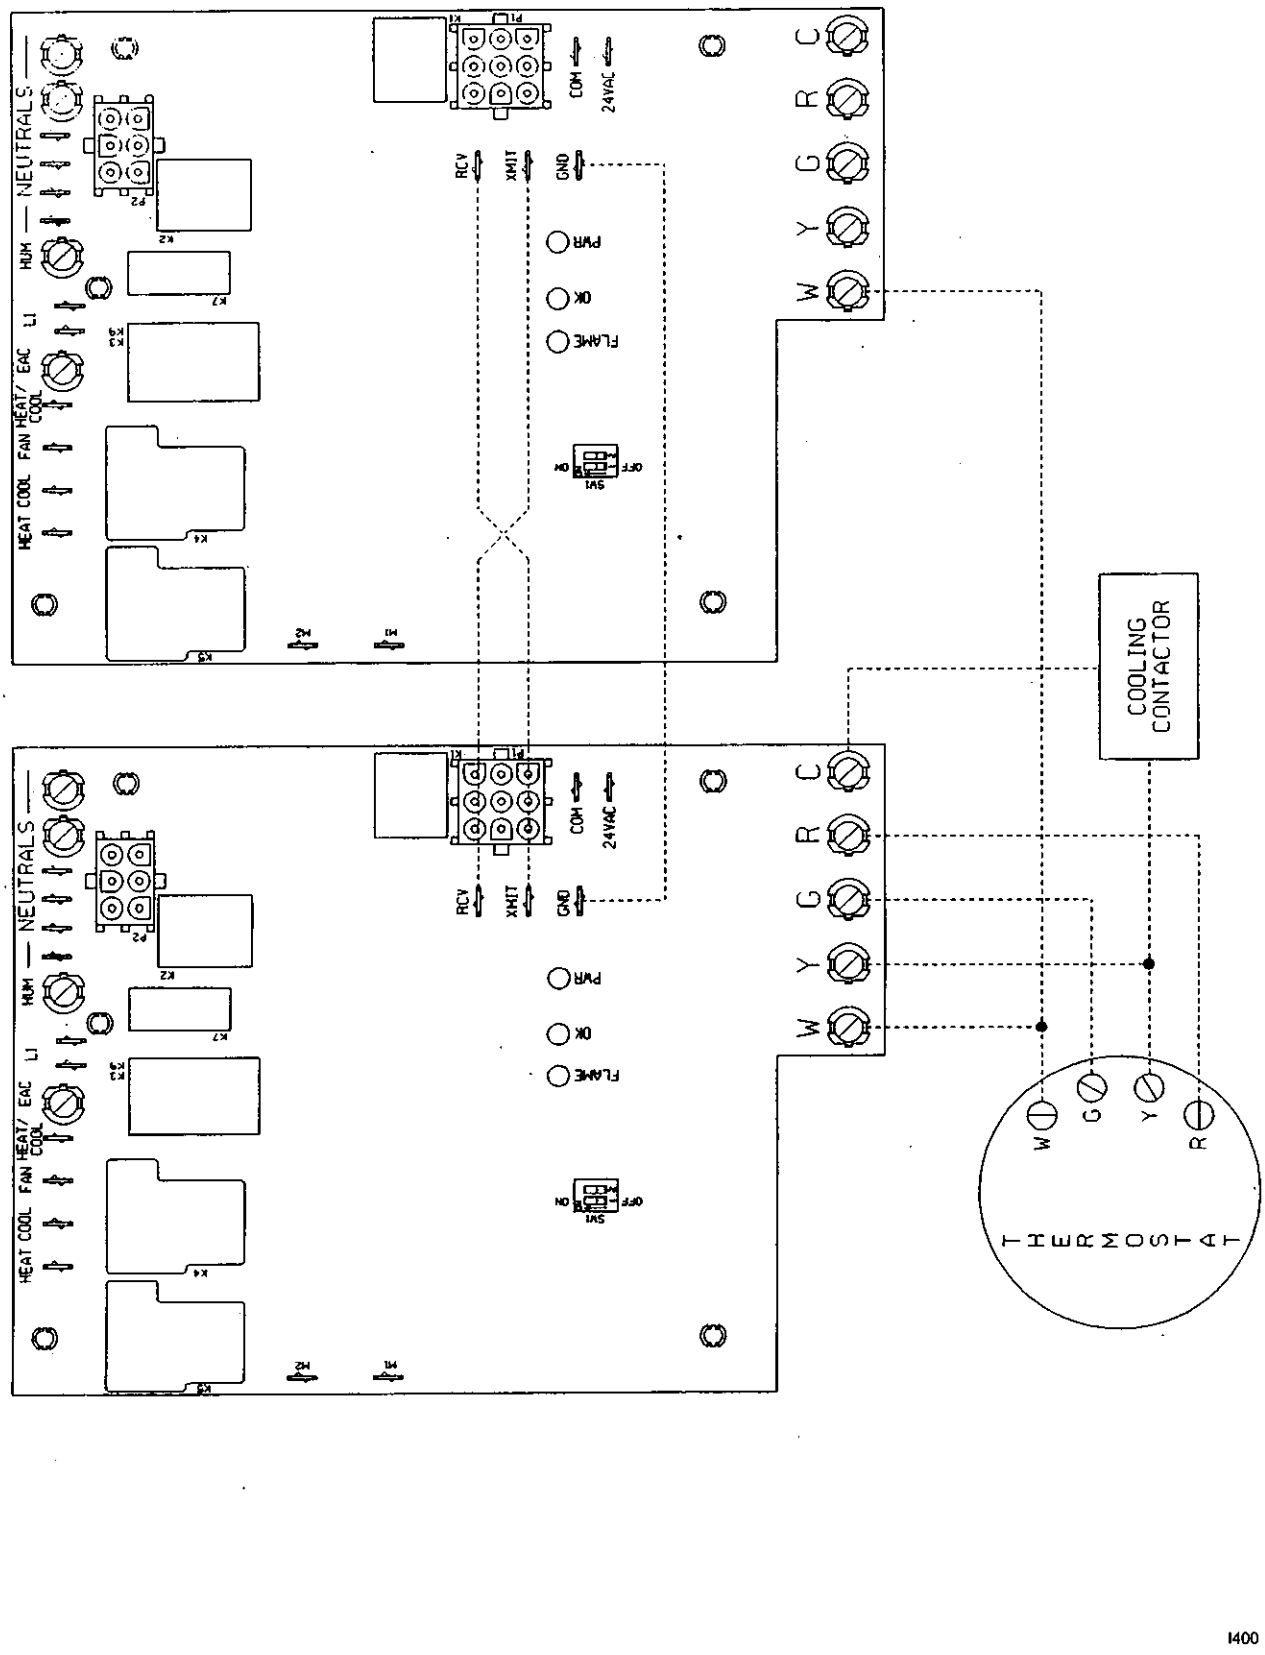

FIGURE 46
HONEYWELL NO. S9201E2001 CONTROL BOARD
TWINNING CONNECTION TWO STAGE OPERATION

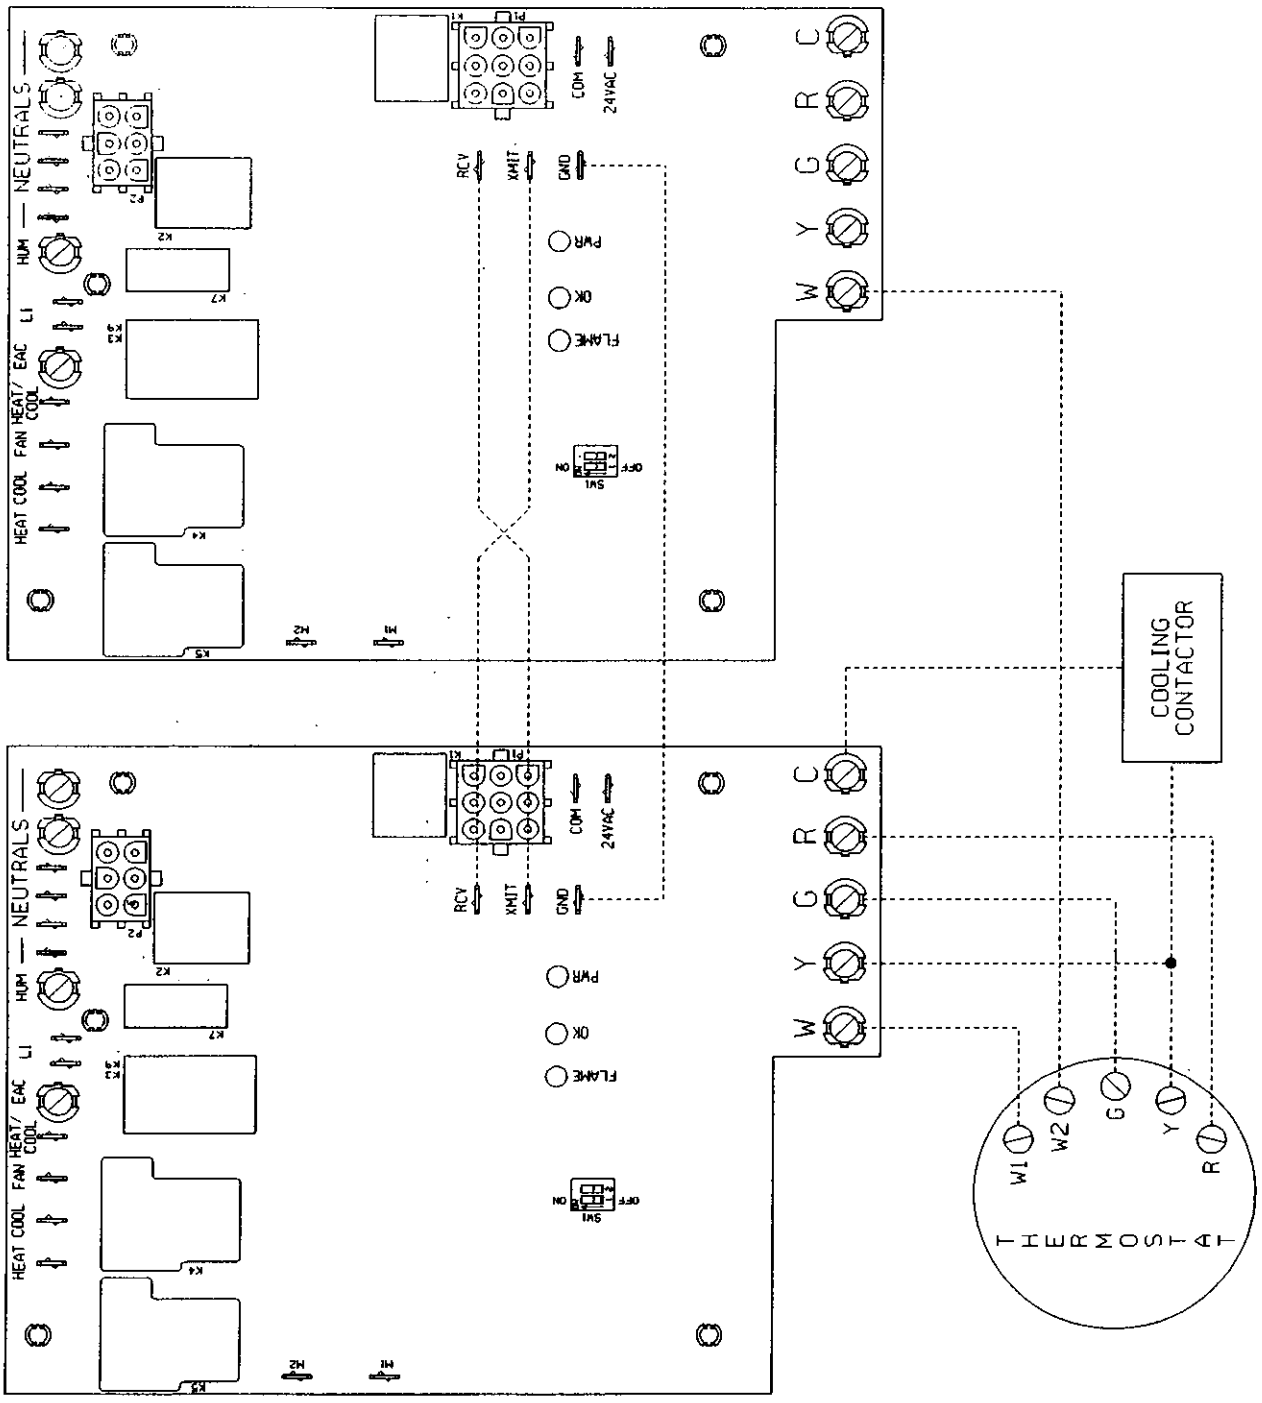

1401

FIGURE 47
UTEC NO. 1012-920 & 1028-927 CONTROL BOARD
TWINNING CONNECTION SINGLE STAGE OPERATION

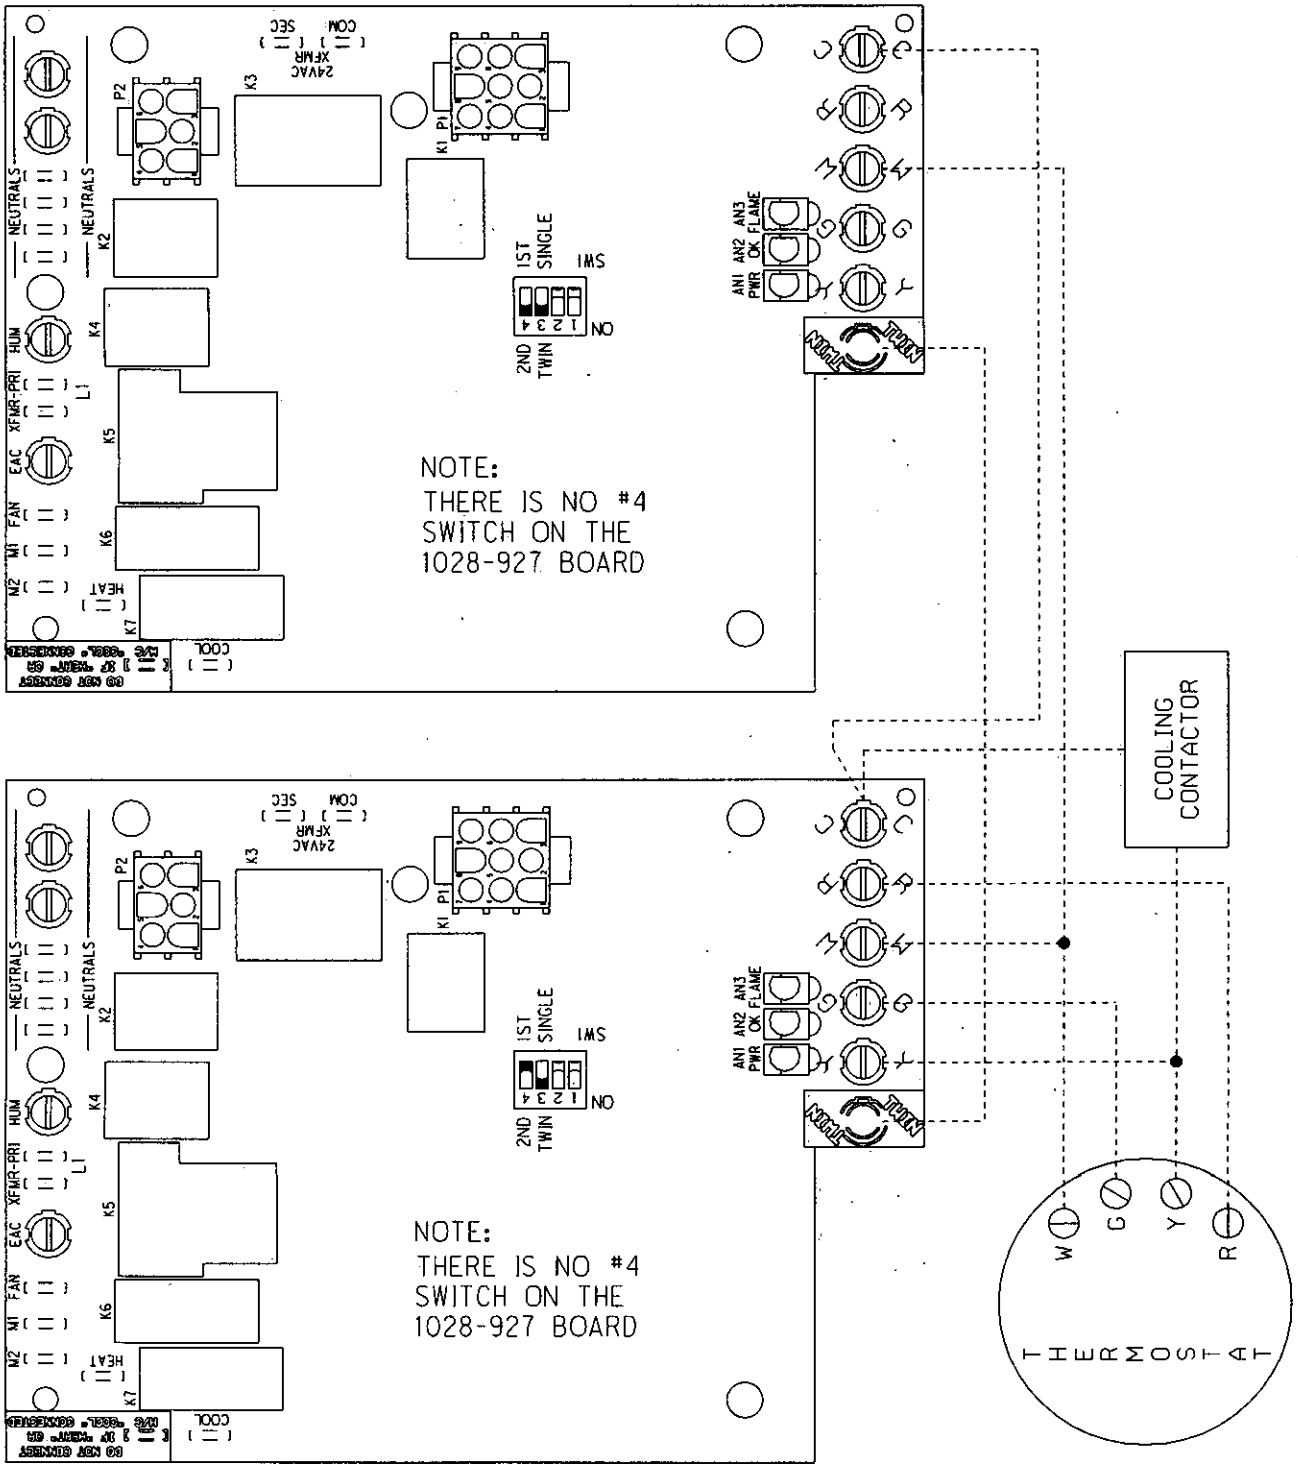

FIGURE 48
UTEC NO. 1012-920 & 1028-927 CONTROL BOARD
TWINNING CONNECTION TWO STAGE OPERATION

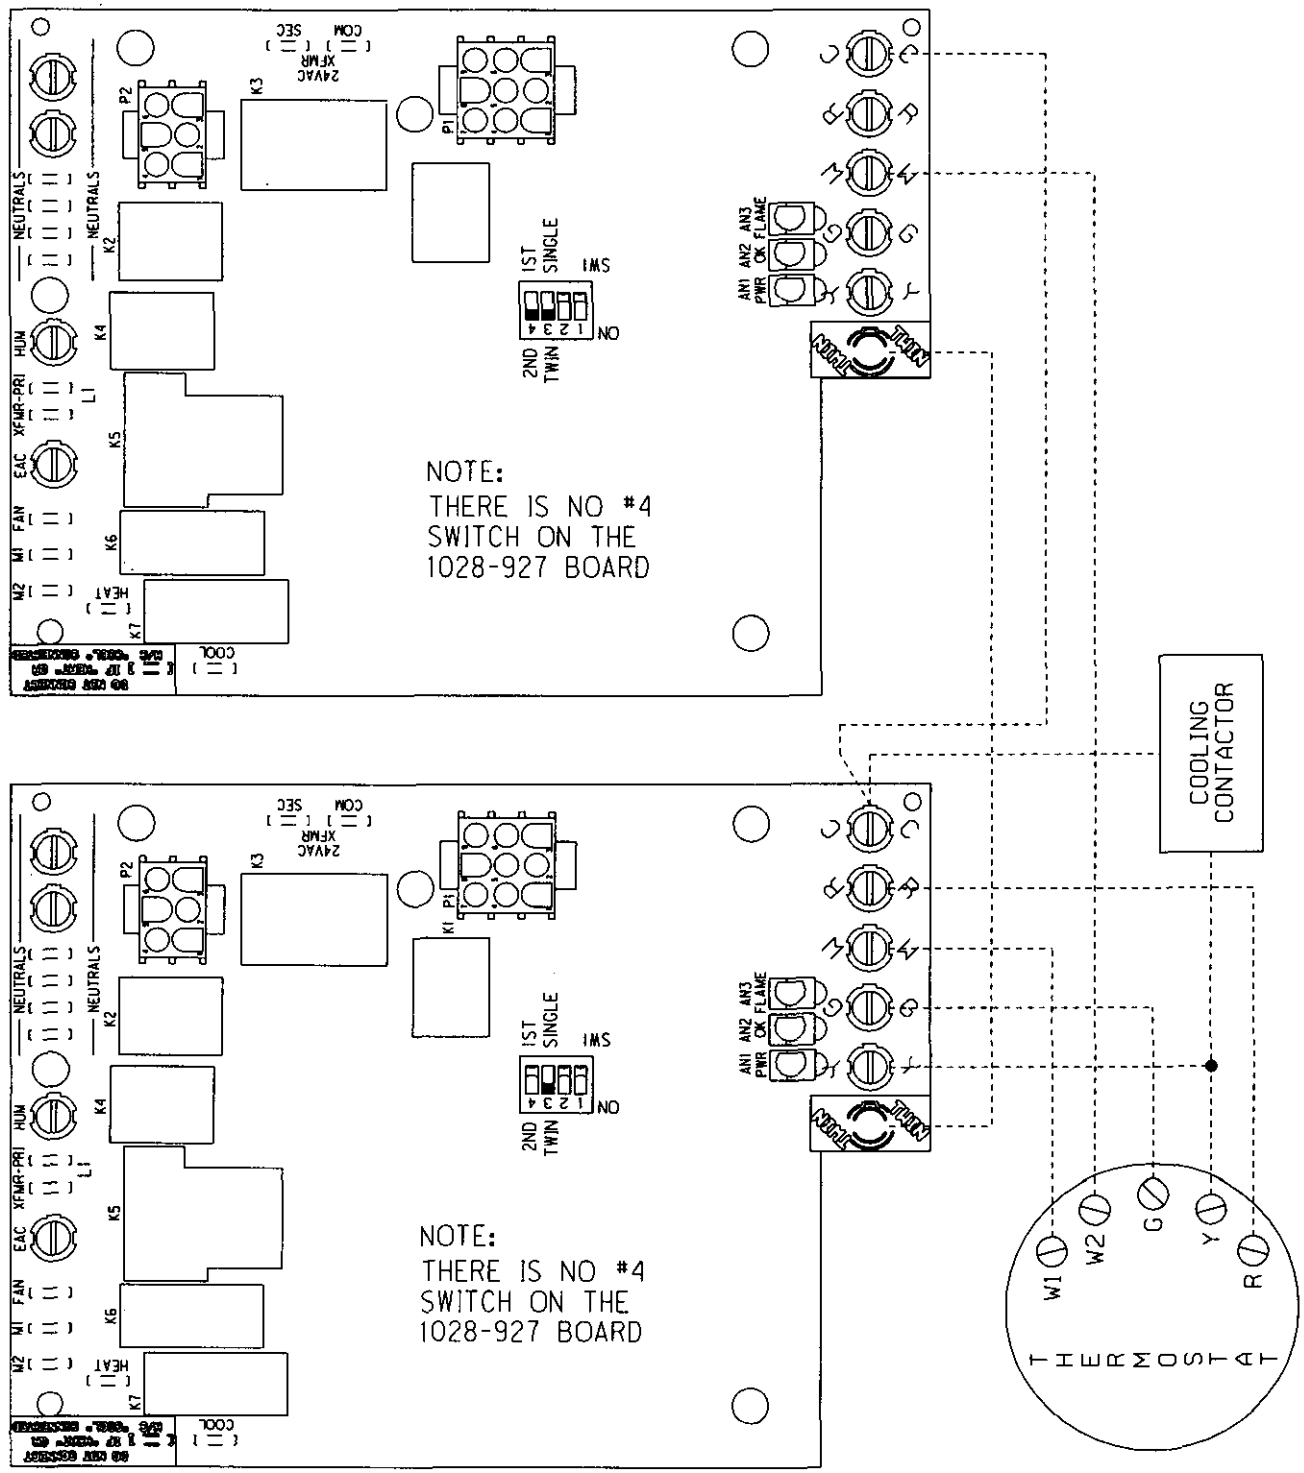

FIGURE 49
JOHNSON CONTROLS G961DAJ-2401 CONTROL BOARD
TWINNING CONNECTION SINGLE STAGE OPERATION

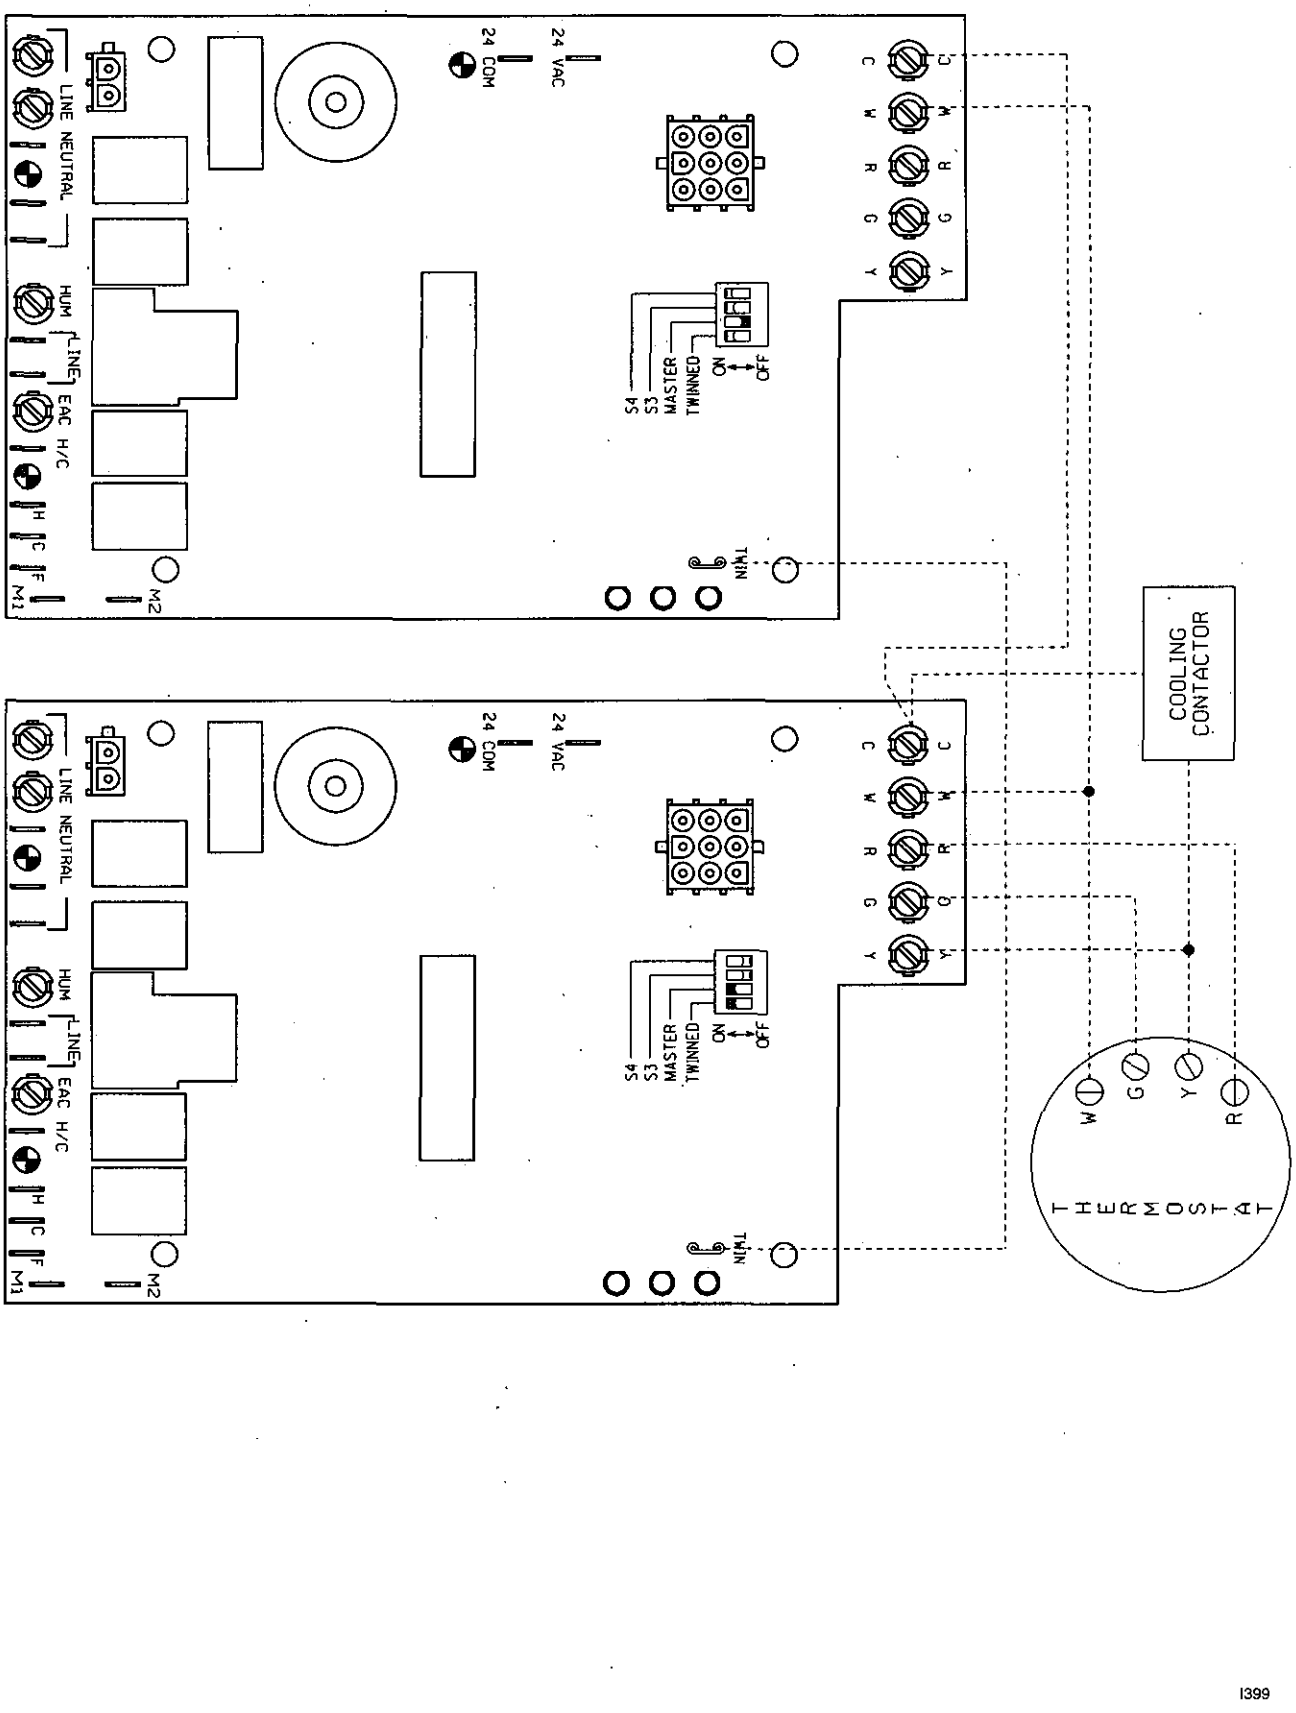

FIGURE 50
JOHNSON CONTROLS G961DAJ-2401 CONTROL BOARD
TWINNING CONNECTION TWO STAGE OPERATION

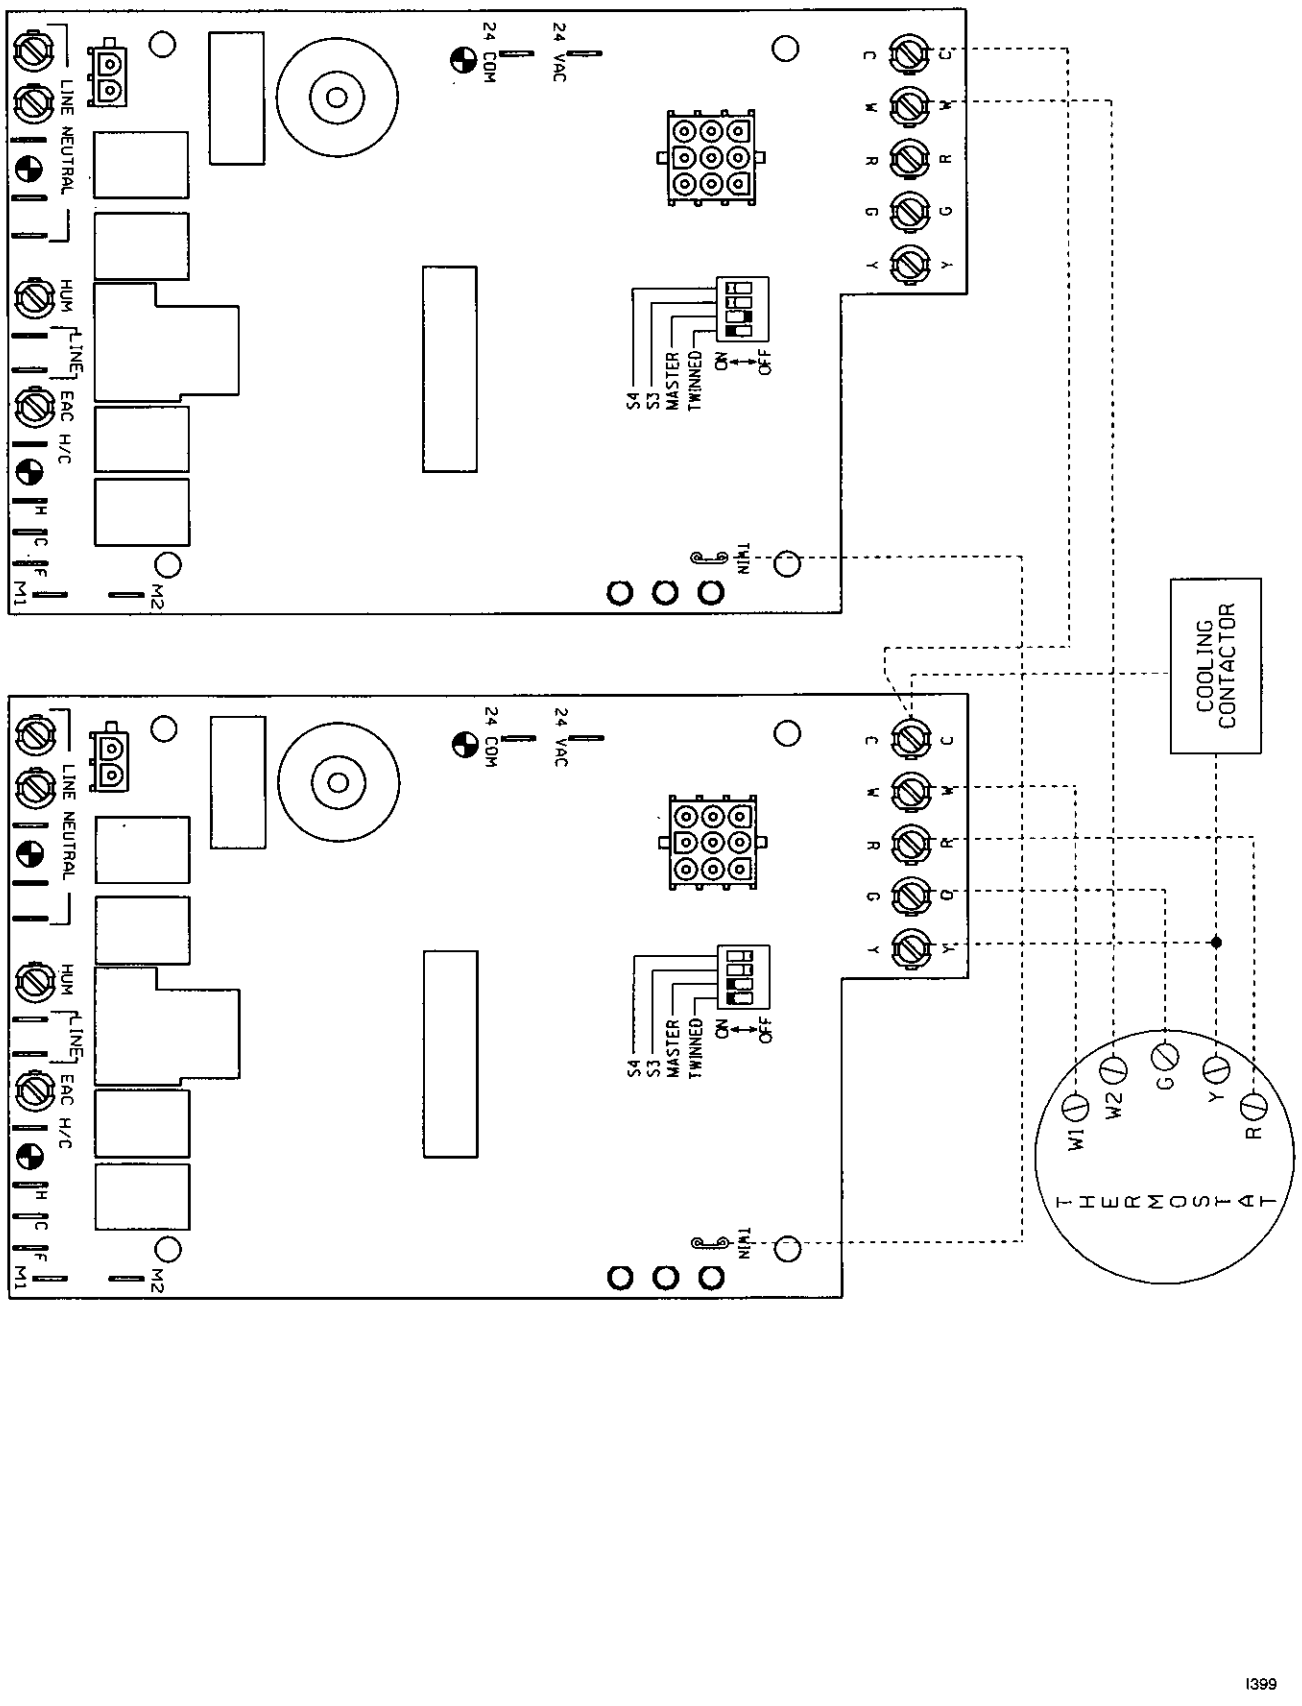

I399

START-UP PROCEDURES

This furnace is equipped with a silicon carbide hot surface ignition (HSI) device. Each time the room thermostat calls for heat, the HSI lights the main burners directly See the lighting instructions on the furnace.

TO START THE FURNACE

1. Remove the burner compartment control access door.
2. **IMPORTANT:** Be sure that the manual gas control has been in the "OFF" position for at least five minutes. Do not attempt to manually light the main burners.
3. Turn off the furnace electrical power and set the room thermostat to its lowest setting.
4. Turn the gas control knob to the "ON" position.
5. Replace the burner compartment control access door.
6. Turn on the furnace electrical power.
7. Set the room thermostat to a point above room temperature to light the main burners.
8. After the burners are lit, set the room thermostat to a desired temperature.

TO SHUT DOWN THE FURNACE

1. Set the room thermostat to its lowest setting.
2. Remove the burner compartment control access door.
3. Shut off the gas to the main burners by turning the gas control knob to the "OFF" position. See Figure 36.

⚠ WARNING

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, CLOSE THE MANUAL GAS VALVE FOR THE APPLIANCE BEFORE SHUTTING OFF THE ELECTRICAL SUPPLY. FAILURE TO DO SO CAN CAUSE AN EXPLOSION OR FIRE RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

SEQUENCE OF OPERATION

Honeywell or UTEC Integrated Controls with Hot Surface Ignition.

1. Each time the thermostat contacts close, the induced draft blower (inducer) begins a prepurge cycle.
2. The air proving negative pressure switch(es) closes.
3. **30 seconds after the pressure switch(es) close, the hot surface igniter heats for 30 seconds** to full temperature. The induced draft blower operates for the complete heating cycle.
4. After the 30-second igniter warm up, **the gas valve opens for a 9-second trial for ignition.**
5. The igniter lights the gas burners and **stays energized for the first 8 seconds after the gas valve opens.**
6. 8 seconds after the gas valve opens **the remote flame sensor must prove flame ignition for *one second*** using the process of flame rectification. If the burners don't light, the system goes through another ignition sequence. It does this **up to four** times.
7. The main blower starts approximately 20 seconds after the burners ignite.
8. When the thermostat cycle ends, the gas valve closes, the burners go out, the induced draft blower stops after **a 5-second post-purge,** and the negative pressure switch(es) open.
9. The main blower continues until timed off by the setting on the integrated furnace control board.

Sequence if the system doesn't light or doesn't sense flame:

1. On a call for heat, the control runs the inducer for 30 seconds to prepurge.
2. After the 30-second prepurge, the hot surface igniter heats for 30 seconds. The inducer continues to run.
3. After the 30-second igniter warm up, the gas valve opens for a 9-second trial for ignition. The inducer continues and the igniter stays energized.
4. If flame is not sensed during the ninth second after the gas valve opens, the gas valve closes, and the igniter de-energizes.
5. After a 30 second inter-purge, the igniter heats for 30 seconds. After 30 seconds, the gas valve opens for 9 seconds. If no flame is sensed, it closes the gas valve, the igniter de-energizes. **Both the inducer and main blower operate for 180 seconds.**
6. It retries up to four times. At the end of the last try, the inducer stops immediately. **The system is in "soft" lock out.**
7. The above sequence will repeat after a one hour delay. It will continue repeating until ignition is successful or the call for heat is terminated.
8. **To reset the lock out, make and break power either at the thermostat or at the unit disconnect switch for 5 to 10 seconds.** It then goes through another set of trials for ignition.

UTEC or Johnson Controls Direct Spark Ignition

1. Each time the thermostat contacts close, the induced draft blower (inducer) begins a prepurge cycle.
2. The air proving negative pressure switch(es) closes.
3. **30 seconds after the pressure switch(es) close, the spark igniter energizes.** The induced draft blower operates for the complete heating cycle.
4. After the spark igniter energizes, **the gas valve opens for a 8 second trial for ignition.**
5. The igniter lights the gas burners.
6. After the gas valve opens **the flame sensor must prove flame ignition for *one second*** using the process of flame rectification. If the burners don't light, the system goes through another ignition sequence. It does this **up to four** times.
7. The main blower starts 20 seconds after the burners ignite.
8. When the thermostat cycle ends, the gas valve closes, the burners go out, the induced draft blower stops after **a 5-second post-purge,** and the negative pressure switch(es) open.
9. The main blower continues until timed off by the setting on the integrated furnace control board.

Sequence if the system doesn't light or doesn't sense flame:

1. On a call for heat, the control runs the inducer for 30 seconds to pre-purge.
2. After the 30-second pre-purge, the spark igniter energizes. The inducer continues to run.
3. After the spark igniter energizes, the gas valve opens for a 8-second trial for ignition. The inducer continues and the igniter stays energized.
4. If flame is not sensed within 8 seconds after the gas valve opens, the gas valve closes, and the igniter de-energizes.
5. After a 30-second inter-purge, the igniter is energized, the gas valve opens for 8 seconds. If no flame is sensed, it closes the gas valve, the igniter de-energizes. **Both the main blower and the inducer operate for 180 seconds before the next ignition trial.**
6. It retries up to four times. At the end of the last try, the inducer stops. The system is in "soft" lockout.
7. The above sequence will repeat after a one hour delay. It will continue repeating until ignition is successful or the call for heat is terminated.
8. **To reset the lock out, make and break power either at the thermostat or at the unit disconnect switch for 5 to 10 seconds.** It then goes through another set of trials for ignition.

ADJUSTING OR CHECKING FURNACE INPUT

The maximum gas supply pressure to the furnace should be 7" w.c. for natural gas. The minimum gas supply pressure for purposes of input adjustment to the furnace should be 5" w.c.

A properly calibrated magnehelic gauge or manometer is required for accurate gas pressure readings.

The manifold pressure should be set at 3.5" w.c. for natural gas. Only small variations in the gas flow should be made by means of the pressure regulator adjustment. In no case should the final manifold pressure vary more than plus or minus 0.3" w.c. from the above-specified pressures. To adjust the pressure regulator, remove the regulator cap and turn the adjustment screw clockwise to increase pressure or counterclockwise to decrease pressure. Then replace the regulator cap securely. Any necessary major changes in the gas flow rate should be made by changing the size of the burner orifices.

To change orifice spuds, shut off the manual gas valve and remove the gas manifold. On LP gas furnaces, the LP gas supply pressure must be set between 11" and 14" w.c. by means of the tank or branch supply regulators. The furnace manifold pressure should be set at 10" w.c. at the gas control valve. For elevations up to 2,000 feet, rating plate input ratings apply. For high altitudes (elevations over 2,000 ft.), see conversion kit index 92-21519-XX for derating and orifice spud sizes.

Checking furnace input is important to prevent over firing beyond its design-rated input. NEVER SET INPUT ABOVE THAT SHOWN ON THE RATING PLATE. Use the following table or formula to determine input rate. Start the furnace and measure the time required to burn one cubic foot of gas. Prior to checking the furnace input, make certain that all other gas appliances are shut off, with the exception of pilot burners. Time the meter with only the furnace in operation.

TABLE 6
METER TIME

METER TIME IN MINUTES AND SECONDS FOR NORMAL INPUT RATING OF FURNACES EQUIPPED FOR NATURAL OR LP GAS

INPUT BTU/HR	METER SIZE CU. FT.	HEATING VALUE OF GAS BTU PER CU. FT.									
		900		1000		1040		1100		2500 (LP)	
		MIN.	SEC.	MIN.	SEC.	MIN.	SEC.	MIN.	SEC.	MIN.	SEC.
45,000	ONE	1	12	1	20	1	23	1	28	3	20
	TEN	12	0	13	20	13	50	14	40	33	20
60,000	ONE	0	54	1	0	1	3	1	6	2	30
	TEN	9	0	10	0	10	24	11	0	25	0
75,000	ONE	0	44	0	48	0	50	0	53	2	0
	TEN	7	12	8	0	8	19	8	48	20	0
90,000	ONE	0	36	0	40	0	42	0	44	1	40
	TEN	6	0	6	40	7	0	7	20	16	40
105,000	ONE	0	31	0	34	0	36	0	38	1	26
	TEN	5	10	5	40	6	0	6	20	14	20
120,000	ONE	0	27	0	30	0	31	0	33	1	15
	TEN	4	30	5	0	5	10	5	30	12	30

Formula: $\text{Input BTU/HR} = \frac{\text{Heating Value of Gas (BTU/FT}^3\text{)} \times 3600}{\text{Time in Seconds (for 1 cu. ft.) of Gas}}$

SETTING INPUT RATE

The furnace is shipped from the factory with #50 orifices. They are sized for natural gas having a heating value of 1075 BTU/cu. ft. and a specific gravity of .60.

Since heating values vary geographically, the manifold pressure and/or gas orifice size may need to be changed to adjust the furnace to its nameplate input. Consult the local gas utility to obtain the yearly average heating value and orifice size required to fire each individual burner at 15,000 BTU/HR.

AIR FLOW

The importance of proper air flow over the heat exchanger cannot be over emphasized. One of the most *common causes* of heat exchanger failure is overheating due to low air flow. An air flow table is located inside the blower door.

TEMPERATURE RISE CHECK

To determine if the air flow is correct, make a temperature rise check.

1. Insert a thermometer in the supply air duct as close to the furnace as possible yet out of a direct line from the heat exchanger. See Figure 51.
2. Insert a thermometer in the return air duct as close to the furnace as possible.
3. Operate the furnace.
4. When the thermometer in the supply air duct stops rising (approximately five minutes), subtract the return air temperature from the supply air temperature. The difference is the temperature rise.
5. Compare the measured temperature rise to the approved temperature rise range listed on the furnace name plate. See Figure 52.

If the measured temperature rise is above the approved range, the air flow is too low. More air must be moved by speeding up the blower, by removing restrictions in the duct system, or by adding more supply or return air duct. If the measured temperature rise is below the approved range, the air flow is too much. Use lower speed tap on the multi-speed blower.

Ideally the measured temperature rise should be in the middle of the range.

FIGURE 51
TEMPERATURE RISE MEASUREMENT

FIGURE 52
FURNACE NAME PLATE

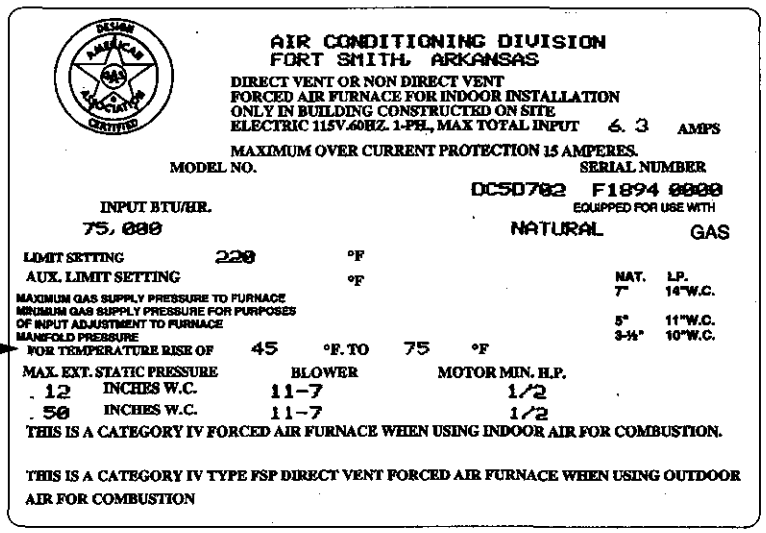

TABLE 7

90 PLUS AIR FLOW PERFORMANCE

MODEL	BLOWER/ MOTOR HP	SPEED	CFM @ ESP						
			.1	.2	.3	.4	.5	.6	.7
UGRA-04	11 x 7 / 1/2	LOW	805	780	760	720	685	645	605
		*M-LO	920	885	850	810	775	730	690
		M-HI	1140	1110	1085	1045	1010	950	890
		HIGH	1360	1320	1280	1235	1195	1140	1080
UGTA-04	11 x 7 / 1/2	LOW	820	790	760	725	690	650	610
		*M-LO	930	890	850	815	785	750	720
		M-HI	1150	1120	1090	1045	1002	950	900
		HIGH	1414	1365	1320	1270	1220	1165	1115
UGRA-06	11 x 7 / 1/2	LOW	770	740	710	675	645	605	570
		*M-LO	880	845	815	790	760	715	670
		M-HI	1060	1025	990	960	925	880	835
		HIGH	1260	1215	1175	1135	1100	1040	985
UGTA-06	11 x 7 / 1/2	LOW	795	760	730	695	660	615	570
		*M-LO	910	885	860	815	770	725	680
		M-HI	1115	1080	1045	1005	965	920	875
		HIGH	1365	1315	1270	1225	1180	1125	1070
UGRA-07	11 X 7 / 1/2	LOW	780	745	710	675	640	595	555
		M-LO	880	850	825	785	750	702	655
		*M-HI	1090	1050	1010	970	925	875	825
		HIGH	1300	1255	1210	1160	1110	1055	1005
UGTA-07	11 X 7 / 1/2	LOW	780	750	720	675	635	595	555
		M-LO	890	860	835	790	750	705	660
		*M-HI	1100	1060	1025	980	940	890	845
		HIGH	1340	1295	1250	1200	1150	1090	1025
UGRA-07	12 X 7 1/2 / 3/4	LOW	1105	1095	1080	1050	1030	1010	990
		M-LO	1290	1275	1260	1220	1195	1170	1140
		M-HI	1480	1435	1415	1390	1370	1300	1255
		HIGH	1705	1665	1615	1570	1540	1475	1400
UGTA-07	12 X 7 1/2 / 3/4	LOW	1185	1160	1140	1115	1095	1065	1040
		M-LO	1405	1375	1350	1310	1270	1235	1195
		M-HI	1595	1560	1525	1480	1440	1380	1325
		HIGH	1835	1780	1730	1675	1625	1555	1480
UGRA-09	12 X 11 / 3/4	LOW	1235	1210	1185	1150	1120	1075	1035
		*M-LO	1490	1465	1440	1405	1375	1315	1255
		M-HI	1720	1670	1620	1600	1580	1520	1460
		HIGH	2100	2050	2000	1955	1910	1825	1745
UGTA-09	12 X 11 / 3/4	LOW	1155	1125	1100	1080	1060	1000	940
		*M-LO	1420	1400	1380	1365	1350	1260	1175
		M-HI	1605	1575	1550	1560	1570	1480	1390
		HIGH	2005	1965	1930	1890	1850	1765	1680
UGRA-10	12 X 11 / 3/4	LOW	1230	1205	1180	1155	1130	1090	1050
		*M-LO	1490	1445	1405	1375	1350	1295	1240
		M-HI	1710	1665	1620	1580	1540	1475	1410
		HIGH	2010	1955	1900	1855	1810	1710	1610
UGTA-10	12 X 11 / 3/4	LOW	1180	1150	1120	1100	1080	1025	970
		*M-LO	1460	1425	1390	1375	1360	1280	1200
		M-HI	1680	1645	1615	1585	1560	1490	1420
		HIGH	2055	2000	1940	1880	1820	1745	1675
UGRA-12	11 X 10 / 3/4	LOW	1320	1305	1290	1260	1230	1185	1140
		*M-LO	1610	1580	1555	1515	1475	1415	1355
		M-HI	1870	1820	1775	1715	1660	1590	1520
		HIGH	2115	2050	1990	1945	1900	1795	1690
UGTA-12	11 X 10 / 3/4	LOW	1285	1250	1215	1235	1260	1230	1200
		*M-LO	1590	1565	1540	1505	1475	1425	1375
		M-HI	1840	1820	1800	1750	1700	1645	1590
		HIGH	2315	2250	2185	2110	2040	1965	1890

* Heating speed for cooling applications
NOTE: Units tested with filters in place.

TABLE 8
90 PLUS AIR FLOW PERFORMANCE – UGRJ & UGTJ MODELS

MODEL	BLOWER/ MOTOR HP	SPEED	CFM @ ESP						
			.1	.2	.3	.4	.5	.6	.7
UGRJ-04	11 x 7 / 1/2	LOW	805	780	760	720	685	645	605
		MED-LO	920	885	850	810	775	730	690
		MED-HI	1140	1110	1085	1045	1010	950	890
		HIGH	1360	1320	1280	1235	1195	1140	1080
UGTJ-04	11 x 7 / 1/2	LOW	820	790	760	725	690	650	610
		MED-LO	930	890	850	815	785	750	720
		MED-HI	1150	1120	1090	1045	1002	950	900
		HIGH	1414	1365	1320	1270	1220	1165	1115
UGRJ-06	11 x 7 / 1/2	LOW	880	845	815	790	760	715	670
		MED	1060	1025	990	960	925	880	835
		HIGH	1260	1215	1175	1135	1100	1040	985
UGTJ-06	11 x 7 / 1/2	LOW	910	885	860	815	770	725	680
		MED	1115	1080	1045	1005	965	920	875
		HIGH	1365	1315	1270	1225	1180	1125	1070
UGRJ-07	11 X 7 / 1/2	LOW	880	850	825	785	750	702	655
		MED	1090	1050	1010	970	925	875	825
		HIGH	1300	1255	1210	1160	1110	1055	1005
UGTJ-07	11 X 7 / 1/2	LOW	890	860	835	790	750	705	660
		MED	1100	1060	1025	980	940	890	845
		HIGH	1340	1295	1250	1200	1150	1090	1025
UGRJ-07	12 X 7 / 1/2	LOW	1185	1160	1140	1115	1095	1065	1040
		MED	1405	1375	1350	1310	1270	1235	1195
		HIGH	1595	1560	1525	1480	1440	1380	1325
UGTJ-07	12 X 7 / 1/2	LOW	1105	1095	1080	1050	1030	1010	990
		MED	1290	1275	1260	1220	1195	1170	1140
		HIGH	1480	1435	1415	1390	1370	1300	1255
UGRJ-07	12 X 7 / 3/4	LOW	1405	1375	1350	1310	1270	1235	1195
		MED	1595	1560	1525	1480	1440	1380	1325
		HIGH	1835	1780	1730	1675	1625	1555	1480
UGTJ-07	12 X 7 / 3/4	LOW	1290	1275	1260	1220	1195	1170	1140
		MED	1480	1435	1415	1390	1370	1300	1255
		HIGH	1705	1665	1615	1570	1540	1475	1400
UGRJ-09	12 X 11 / 1/2	LOW	1235	1210	1180	1150	1120	1075	1035
		MED	1490	1465	1445	1405	1375	1315	1255
		HIGH	1720	1670	1620	1600	1580	1520	1460
UGTJ-09	12 X 11 / 1/2	LOW	1155	1125	1100	1080	1060	1000	940
		MED	1420	1400	1380	1365	1350	1260	1175
		HIGH	1605	1575	1550	1560	1570	1480	1395
UGRJ-09	12 X 11 / 3/4	LOW	1490	1465	1445	1405	1375	1315	1255
		MED	1720	1670	1620	1600	1580	1520	1460
		HIGH	2100	2050	2000	1955	1910	1825	1745
UGTJ-09	12 X 11 / 3/24	LOW	1420	1400	1380	1365	1350	1260	1175
		MED	1605	1575	1550	1560	1570	1480	1395
		HIGH	2005	1965	1930	1890	1850	1765	1680
UGRJ-10	12 X 11 / 1/2	LOW	1230	1205	1180	1155	1130	1090	1050
		MED	1490	1445	1405	1375	1350	1295	1240
		HIGH	1710	1665	1620	1580	1540	1475	1410
UGTJ-10	12 X 11 / 1/2	LOW	1180	1150	1120	1100	1080	1025	970
		MED	1460	1425	1390	1375	1360	1280	1200
		HIGH	1680	1645	1615	1585	1560	1490	1420
UGRJ-10	12 X 11 / 3/4	LOW	1490	1445	1405	1375	1350	1295	1240
		MED	1710	1665	1620	1580	1540	1475	1410
		HIGH	2010	1955	1900	1855	1810	1710	1610
UGTJ-10	12 X 11 / 3/4	LOW	1460	1425	1390	1375	1360	1280	1200
		MED	1680	1645	1615	1585	1560	1490	1420
		HIGH	2055	2000	1940	1880	1820	1745	1675
UGRJ-12	11 X 10 / 1/2	LOW	1320	1305	1290	1260	1230	1185	1140
		MED	1610	1580	1555	1515	1475	1415	1355
		HIGH	1870	1820	1775	1715	1	1590	1520
UGTJ-12	11 X 10 / 1/2	LOW	1285	1250	1215	1235	1260	1230	1200
		MED	1590	1565	1540	1505	1	1425	1375
		HIGH	1840	1820	1800	1750	1700	1645	1590
UGRJ-12	11 X 10 / 3/4	LOW	1610	1580	1555	1515	1475	1415	1355
		MED	1870	1820	1775	1715	1660	1590	1520
		HIGH	2115	2050	1990	1945	1900	1795	1690
UGTJ-12	11 X 10 / 3/4	LOW	1590	1565	1540	1505	1475	1425	1375
		MED	1840	1820	1800	1750	1700	1645	1590
		HIGH	2315	2250	2185	2110	2040	1965	1890

* Heating speed for cooling applications
NOTE: Units tested with filters in place.

SETTING BLOWER TIMINGS

The Honeywell and UTEC control boards have four quick connect terminals for connecting the motor speed leads. These are:

1. FAN SPEED — motor runs on this speed when the thermostat is in the "FAN ON" position.
2. COOL — connect desired cooling speed.
3. HEAT — connect desired heating speed.
4. HEAT/COOL (not available on UTEC-925 control board) — connect desired speed when heating and cooling speed are the same.

IMPORTANT: *Do not connect any motor speeds to "HEAT" and "COOL" if you use the "HEAT/COOL" terminal.*

5. If heating and continuous fan speed are the same, "piggyback" jumper across "FAN" and "HEAT" terminals.

See Figures 53, 54, 55 and 56 for instructions for setting the blower "OFF" timings.

If cooling speed and fan speed are desired to be the same, this may be accomplished by not connecting "Y" to the integrated furnace control.

If desired for cool, fan and heat to all be the same speed, then "piggyback" jumper "H/C" to "FAN" and do not connect "Y" to the integrated furnace control. Do not connect anything to "H" or "C."

FIGURE 53
UTEC -920 & -927
BLOWER OFF TIMINGS

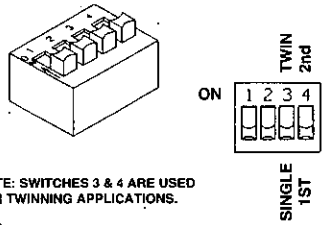

NOTE: SWITCHES 3 & 4 ARE USED FOR TWINNING APPLICATIONS.

I402

OFF TIME	SWITCH 1	SWITCH 2
90 SEC.	OFF	ON
120 SEC.	OFF	OFF
160 SEC.	ON	OFF
180 SEC.	ON	ON

➤ FIGURE 54
JOHNSON CONTROLS
G961DAJ-2401
BLOWER OFF TIMINGS

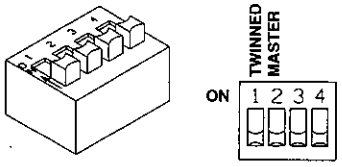

NOTE: SWITCHES 1 & 2 ARE USED FOR TWINNING APPLICATIONS.

I402 I402

OFF TIME	SWITCH 3	SWITCH 4
90 SEC.	ON	ON
120 SEC.	OFF	ON
160 SEC.	ON	OFF
180 SEC.	OFF	OFF

FIGURE 55
HONEYWELL E2001
BLOWER OFF TIMINGS



(TIMER IS RED BLOCK ON BOARD)

I335

OFF TIME	SWITCH 1	SWITCH 2
90 SEC.	ON	OFF
120 SEC.	OFF	OFF
160 SEC.	OFF	ON
180 SEC.	ON	ON

FIGURE 56
UTEC - 925
BLOWER OFF TIMINGS



(TIMER IS RED BLOCK ON BOARD)

I335

OFF TIME	SWITCH 1	SWITCH 2
90 SEC.	OFF	ON
120 SEC.	OFF	OFF
160 SEC.	ON	OFF
180 SEC.	ON	ON

GAS FURNACE (DIRECT DRIVE) INSTRUCTIONS FOR CHANGING BLOWER SPEED

⚠ WARNING

DISCONNECT THE ELECTRICAL SUPPLY TO THE FURNACE BEFORE ATTEMPTING TO CHANGE THE BLOWER SPEED. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

The blower motor is wired for blower speeds required for normal operation as shown.

If additional blower speed taps are available (leads connected to "M1" and "M2" on the electronic control), speeds may be changed if necessary to fit requirements of the particular installation. Reconnect the unused motor leads to "M1" or "M2." Check motor lead color for speed designation.

Heating speeds should not be reduced where it could cause the furnace air temperature to rise to exceed the maximum outlet air temperature specified for the unit.

IMPORTANT: *Always check air temperature rise after changing the heating speed for any reason.*

MAINTENANCE

⚠ WARNING

DISCONNECT MAIN ELECTRICAL POWER TO THE UNIT BEFORE ATTEMPTING ANY MAINTENANCE. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PERSONAL INJURY OR DEATH.

FILTERS

NOTE: RGRJ and RGTJ models do not come from the factory with filters installed. Filters must be field installed.

Keep the filters clean at all times. Vacuum dirt from filter, wash with detergent and water, air dry thoroughly and reinstall.

NOTE: Some filters must be resized to fit certain units and applications. See Table 9 and Figures 57, 58, 59, 60 and 61.

1. 21″ - 90,000 & 105,000 BTUH units require removal of a 3½-in. segment of filter and frame to get the proper width for a side filter.
2. 24½″ - 120,000 BTUH unit requires removal of a 7" segment of filter and frame to get the proper width for a side filter.

TABLE 9
FILTER SIZES

UPFLOW FILTER SIZES				
FURNACE WIDTH	INPUT MBTUH	BOTTOM SIZE	SIDE SIZE	QUANTITY
17½"	45, 60, 75	15¾" X 25"	15¾".X 25"	1
21"	90 AND 105	19¼" X 25"	15¾" X 25"	1
24½"	120	22¾" X 25"	15¾" X 25"	1

DOWNFLOW FILTER SIZES			
FURNACE WIDTH	INPUT MBTUH	SIZE	QUANTITY
17½"	45, 60, 75	12" X 20"	2
21"	90, 105	12" X 20"	2
24½"	120	14" X 20"	2

FIGURE 57
RESIZING FILTERS AND FRAME

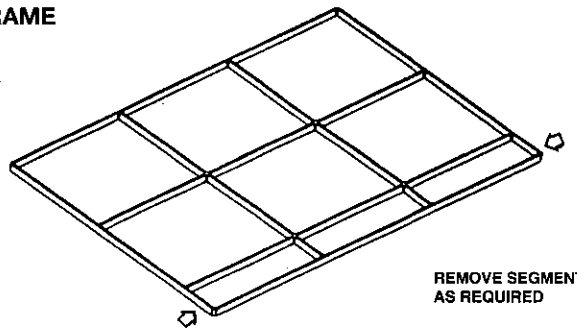

REMOVE SEGMENT TO SIZE AS REQUIRED

FIGURE 58
BOTTOM PANEL REMOVAL

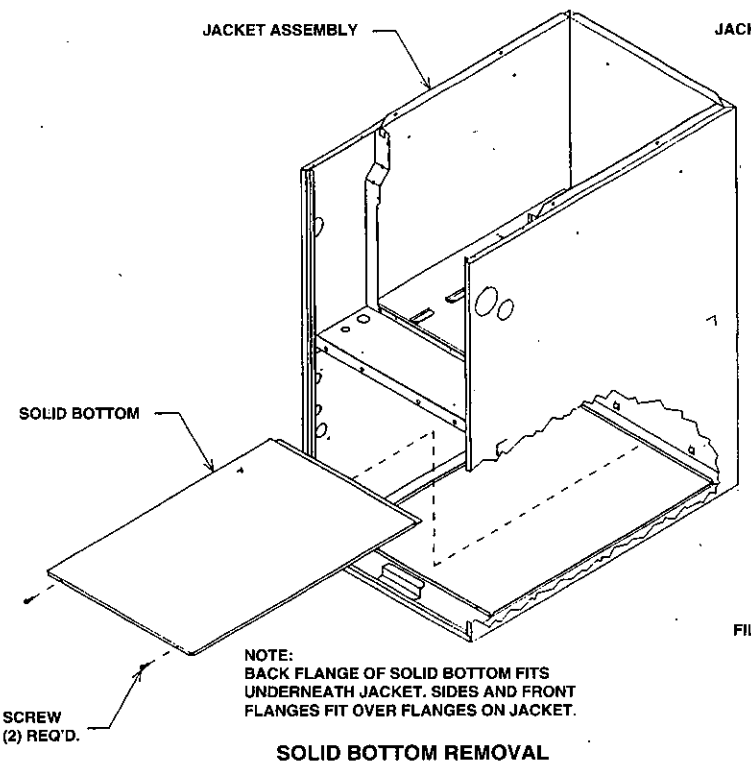

SOLID BOTTOM REMOVAL

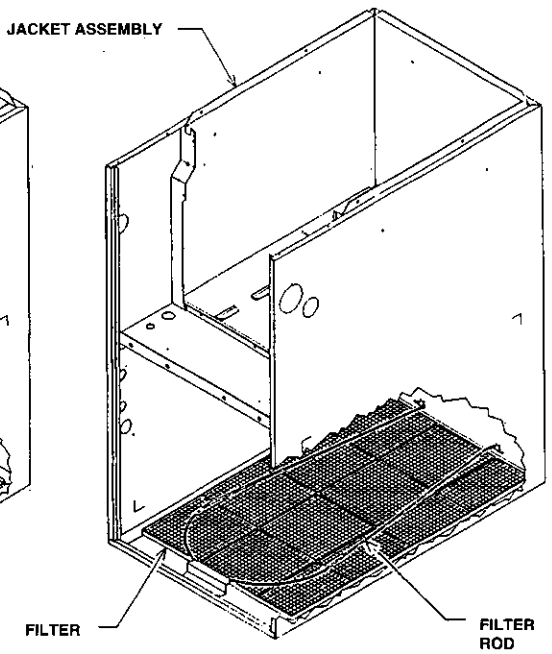

FILTER & ROD LOCATION

FIGURE 59
FILTER LOCATIONS

UPFLOW

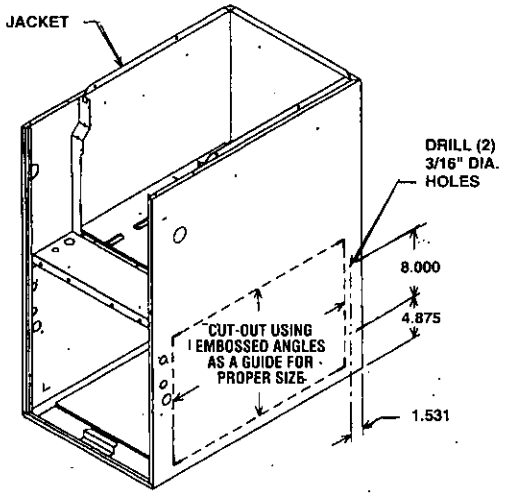

CUT-OUT AND DRILL DETAIL

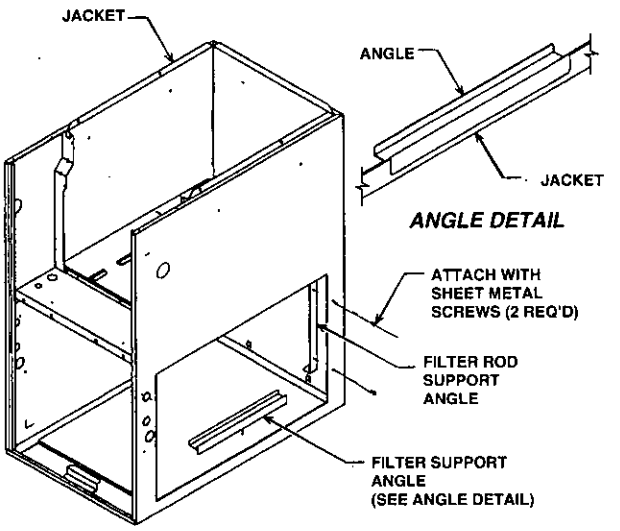

ROD & FILTER SUPPORT ANGLE ASSEMBLY

FIGURE 60
DOWNFLOW

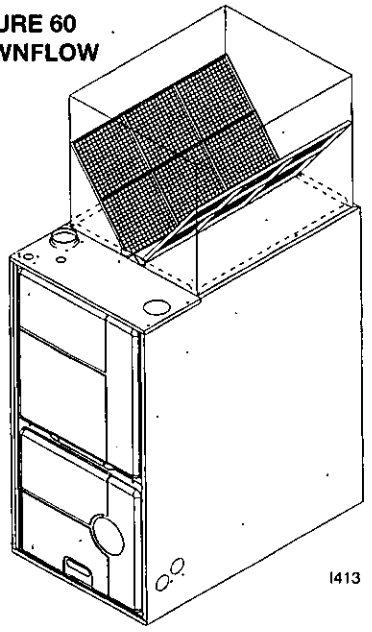

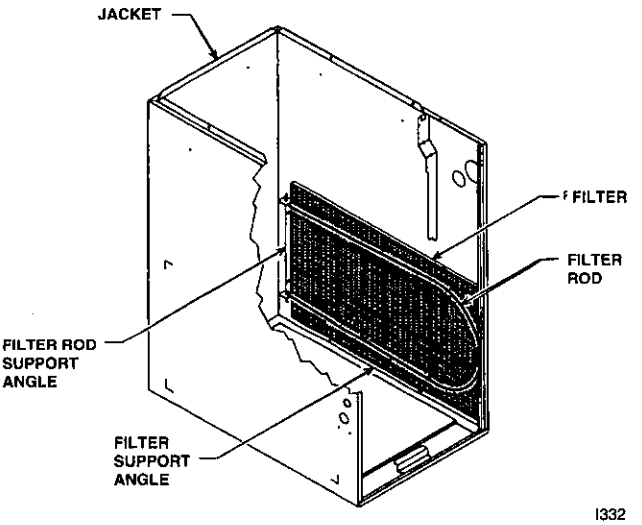

FILTER AND ROD ASSEMBLY

FIGURE 61
HORIZONTAL

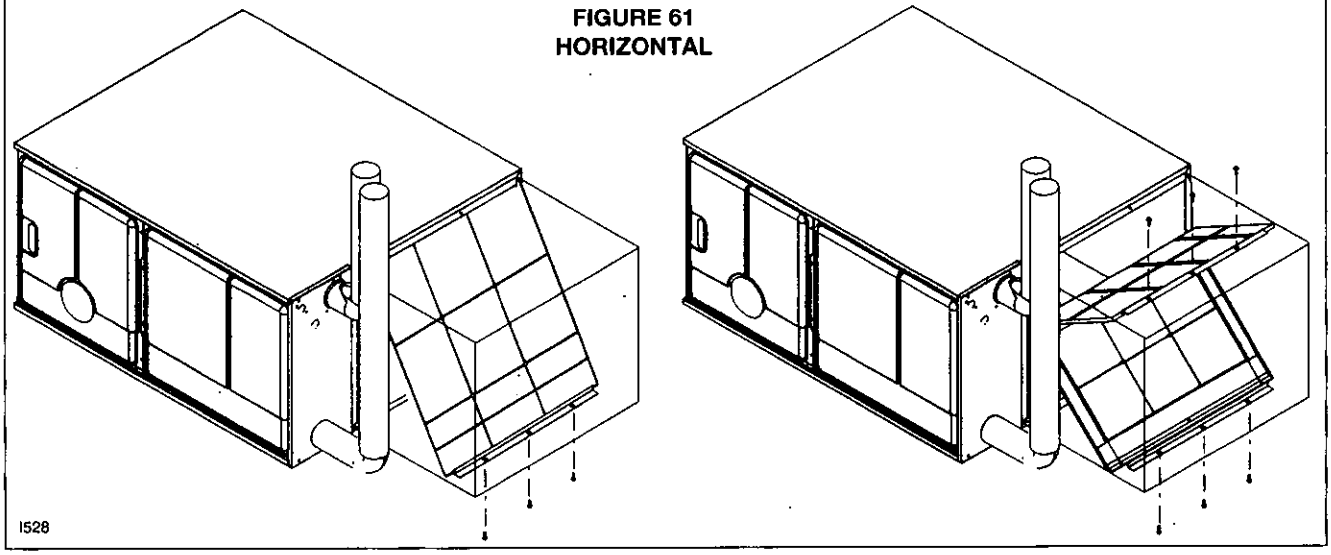

⚠ CAUTION

Do not operate the system for extended periods without filters. A portion of the dust entrained in the air may temporarily lodge in the air duct runs and at the supply registers. Any recirculated dust particles will be heated and charred by contact with the furnace heat exchanger. This residue will soil ceilings, walls, drapes, carpets and other household articles.

LUBRICATION

IMPORTANT: DO NOT attempt to lubricate the bearings on the blower motor or the induced draft blower motor. Addition of lubricants can reduce the motor life and void the warranty.

The blower motor and induced draft blower motor are prelubricated by the manufacturer and do not require further attention.

The blower motor and induced draft blower motor must be cleaned periodically by a qualified installer, service agency, or the gas supplier to prevent the possibility of overheating due to an accumulation of dust and dirt on the windings or on the motor exterior. And, as suggested elsewhere in these instructions, the air filters should be kept clean. Dirty filters can restrict airflow. The motor depends upon sufficient air flowing across and through it to keep from overheating.

SYSTEM OPERATION INFORMATION

Advise The Customer

1. Keep the air filters clean. The heating system will operate better, more efficiently and more economically.
2. Arrange the furniture and drapes so that the supply air registers and the return air grilles are unobstructed.
3. Close doors and windows. This will reduce the heating load on the system.
4. Avoid excessive use of kitchen exhaust fans.
5. Do not permit the heat generated by television, lamps or radios to influence the thermostat operation.
6. Except for the mounting platform, keep all combustible articles 3 feet from the furnace and vent system.
7. ***IMPORTANT:*** *Replace all blower doors and compartment covers after servicing the furnace. Do not operate the unit without all panels and doors securely in place.*
8. Explain proper operation of the system with constant air circulation.

ANNUAL INSPECTION

- The furnace should operate for many years without excessive scale build-up in the flue passageways. However, it is recommended that a qualified installer, service agency, or the gas supplier annually inspect the flue passageways, the vent system and the main burners for continued safe operation. Pay particular attention to deterioration from corrosion or other sources.
- **IMPORTANT:** It is recommended that at the beginning and at approximately half way through the heating season, a visual inspection be made of the main burner flames for the desired flame appearance by a qualified installer, service agency or the gas supplier. If the flames are distorted and/or there is evidence of back pressure, check the vent and inlet air system for blockage. If there is carbon and scale in the heat exchanger tubes, the heat exchanger assembly should be replaced.

⚠ WARNING

HOLES IN THE VENT PIPE OR HEAT EXCHANGER CAN CAUSE TOXIC FUMES TO ENTER THE HOME, RESULTING IN CARBON MONOXIDE POISONING OR DEATH. THE VENT PIPE OR HEAT EXCHANGER MUST BE REPLACED IF THEY LEAK.

- **IMPORTANT:** It is recommended that at the beginning of the heating season, the flame sensor be cleaned with steel wool by a qualified installer, service agency or the gas supplier.
- **IMPORTANT:** It is recommended that at the beginning of the heating season, the condensate trap be inspected for debris or blockage. A blocked condensate trap can cause water to back up into the primary heat exchanger and lead to nuisance tripping of the overtemperature switches.
- **IMPORTANT:** It is recommended that at the beginning of the heating season, the condensate neutralizer if used be replaced by a qualified installer, service agency or the gas supplier.
- **IMPORTANT:** It is recommended that an annual inspection and cleaning of all furnace markings be made to assure legibility. Attach a replacement marking, which can be obtained through the distributor, if any are found to be illegible or missing.

REPLACEMENT PARTS

Contact your local distributor for a complete parts list. See enclosed sheet.

TROUBLESHOOTING

Refer to Figures 62, 63 and 64 for determining cause of unit problems.

WIRING DIAGRAM

Figures 65, 66 and 67 are complete wiring diagrams for the furnace and power sources.

FIGURE 62
MODELS WITH HONEYWELL S9201E2001 OR UTEC 1012-920 CONTROL BOARD
INTEGRATED FURNACE CONTROL (IFC) TROUBLESHOOTING GUIDE
(115 VAC IGNITER)

⚠ WARNING

HAZARDOUS VOLTAGE
LINE VOLTAGE
CONNECTIONS CAN
CAUSE PERSONAL
INJURY OR DEATH

DISCONNECT POWER BEFORE SERVICING.
SERVICE MUST BE BY A TRAINED, QUALIFIED SERVICE TECHNICIAN.

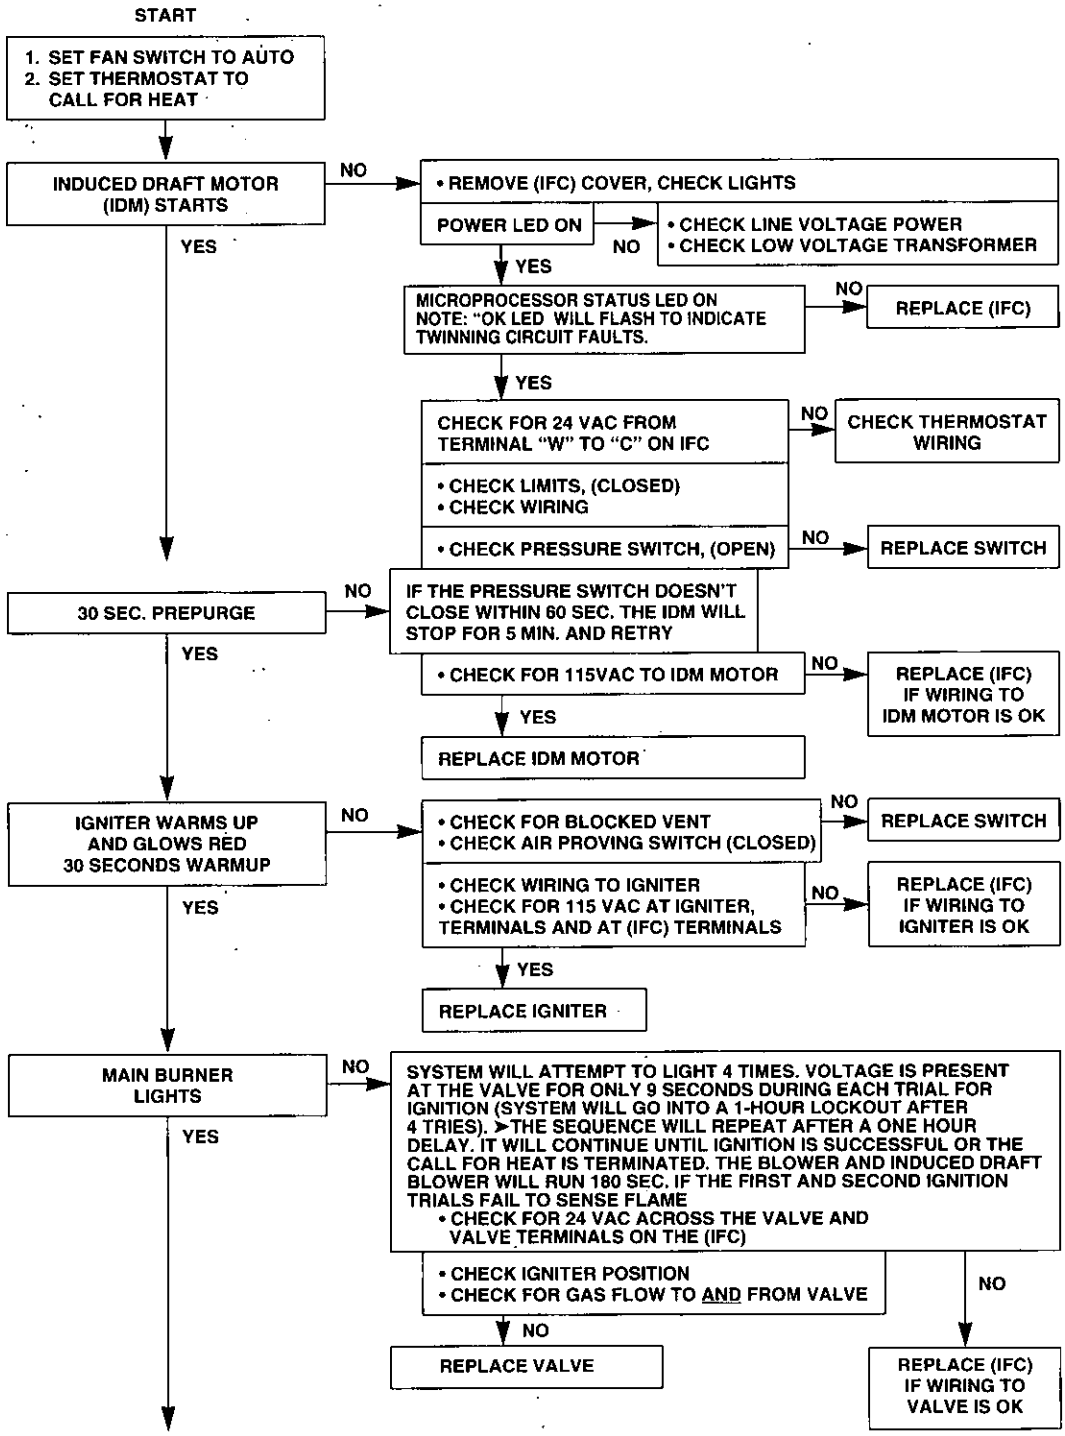

FLOW CHART CONTINUED ON NEXT PAGE

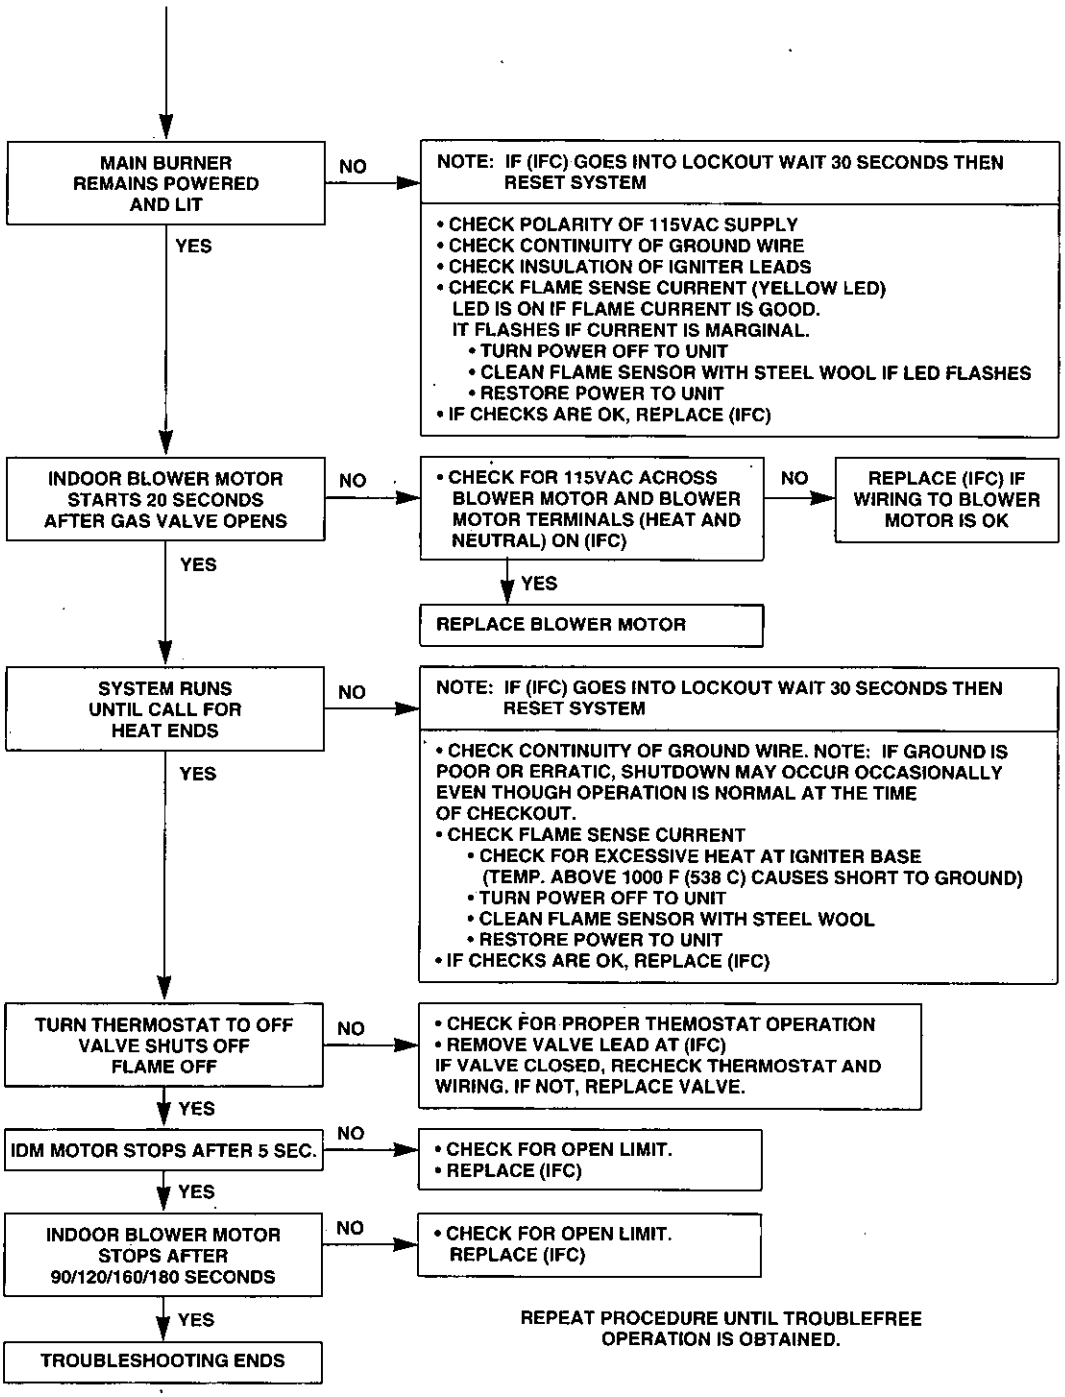

NOTE: STATIC DISCHARGE CAN DAMAGE INTEGRATED FURNACE CONTROL (IFC)

➤ FIGURE 63
INTEGRATED FURNACE CONTROL (IFC) UTEC 1028-927 OR
JOHNSON CONTROLS G961DAJ-2401 (SPARK IGNITION)

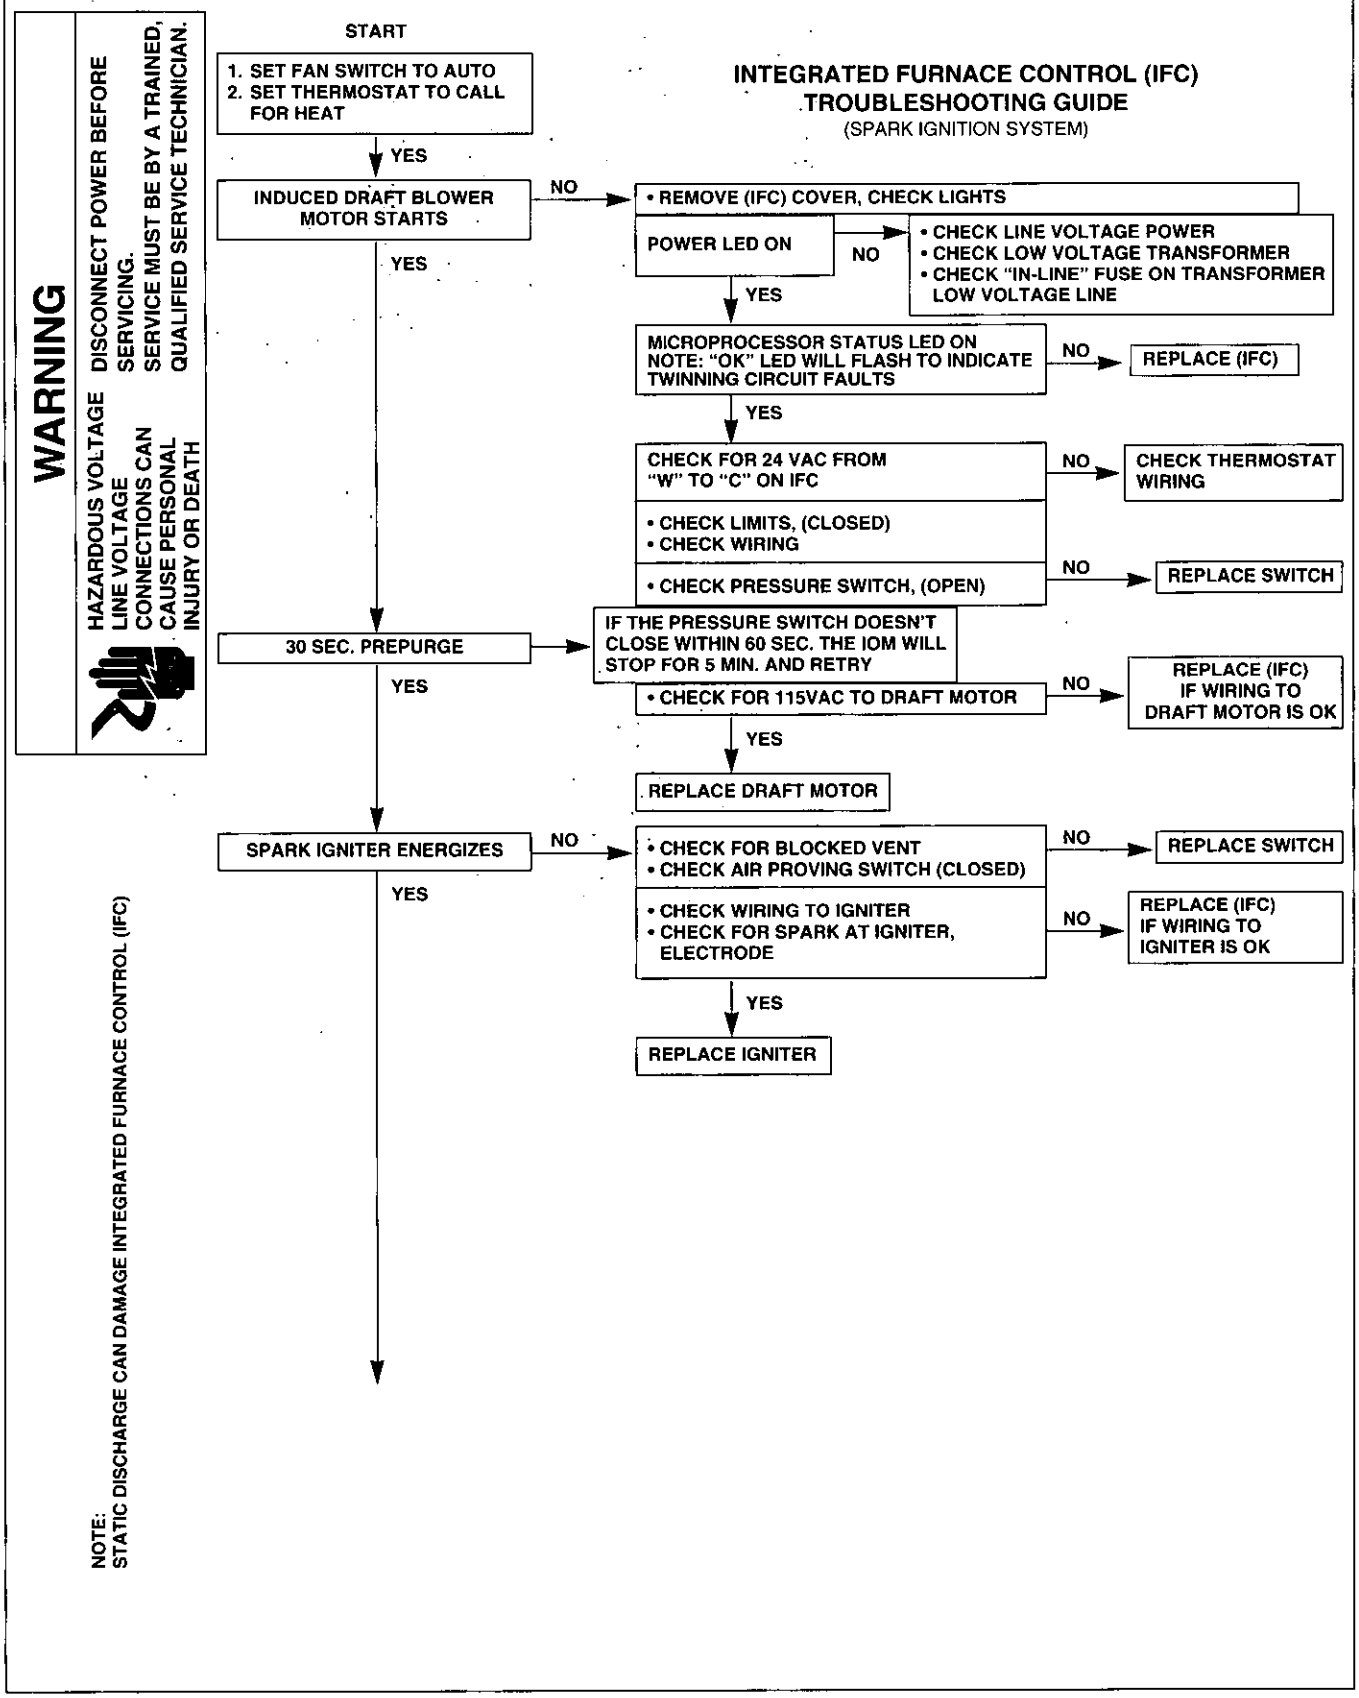

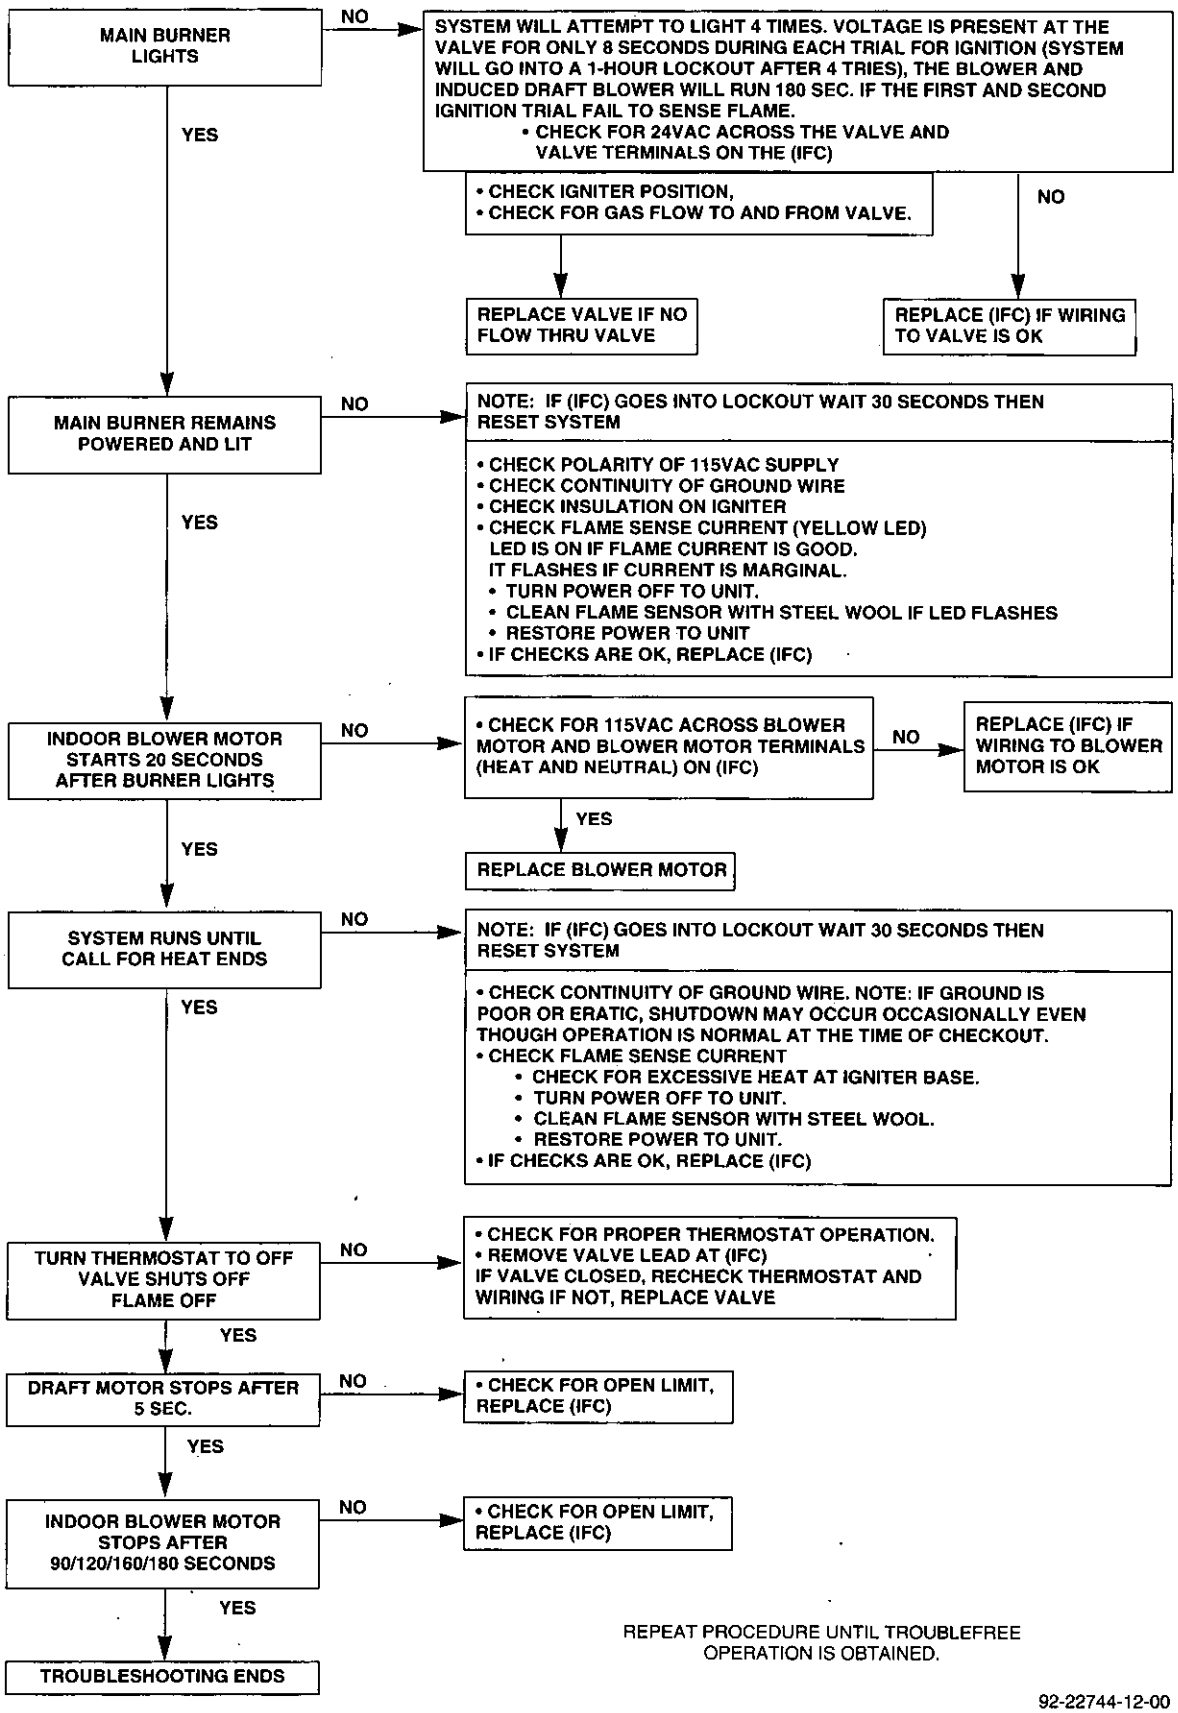
MAIN BURNER LIGHTS
NO
SYSTEM WILL ATTEMPT TO LIGHT 4 TIMES. VOLTAGE IS PRESENT AT THE VALVE FOR ONLY 8 SECONDS DURING EACH TRIAL FOR IGNITION (SYSTEM WILL GO INTO A 1-HOUR LOCKOUT AFTER 4 TRIES), THE BLOWER AND INDUCED DRAFT BLOWER WILL RUN 180 SEC. IF THE FIRST AND SECOND IGNITION TRIAL FAIL TO SENSE FLAME.
• CHECK FOR 24VAC ACROSS THE VALVE AND VALVE TERMINALS ON THE (IFC)
YES
• CHECK IGNITER POSITION,
• CHECK FOR GAS FLOW TO AND FROM VALVE.
NO
REPLACE VALVE IF NO FLOW THRU VALVE
REPLACE (IFC) IF WIRING TO VALVE IS OK
MAIN BURNER REMAINS POWERED AND LIT
NO
NOTE: IF (IFC) GOES INTO LOCKOUT WAIT 30 SECONDS THEN RESET SYSTEM
• CHECK POLARITY OF 115VAC SUPPLY
• CHECK CONTINUITY OF GROUND WIRE
• CHECK INSULATION ON IGNITER
• CHECK FLAME SENSE CURRENT (YELLOW LED)
LED IS ON IF FLAME CURRENT IS GOOD.
IT FLASHES IF CURRENT IS MARGINAL.
• TURN POWER OFF TO UNIT.
• CLEAN FLAME SENSOR WITH STEEL WOOL IF LED FLASHES
• RESTORE POWER TO UNIT
• IF CHECKS ARE OK, REPLACE (IFC)
YES
INDOOR BLOWER MOTOR STARTS 20 SECONDS AFTER BURNER LIGHTS
NO
• CHECK FOR 115VAC ACROSS BLOWER MOTOR AND BLOWER MOTOR TERMINALS (HEAT AND NEUTRAL) ON (IFC)
NO
REPLACE (IFC) IF WIRING TO BLOWER MOTOR IS OK
YES
REPLACE BLOWER MOTOR
YES
SYSTEM RUNS UNTIL CALL FOR HEAT ENDS
NO
NOTE: IF (IFC) GOES INTO LOCKOUT WAIT 30 SECONDS THEN RESET SYSTEM
• CHECK CONTINUITY OF GROUND WIRE. NOTE: IF GROUND IS POOR OR ERATIC, SHUTDOWN MAY OCCUR OCCASIONALLY EVEN THOUGH OPERATION IS NORMAL AT THE TIME OF CHECKOUT.
• CHECK FLAME SENSE CURRENT
• CHECK FOR EXCESSIVE HEAT AT IGNITER BASE.
• TURN POWER OFF TO UNIT.
• CLEAN FLAME SENSOR WITH STEEL WOOL.
• RESTORE POWER TO UNIT.
• IF CHECKS ARE OK, REPLACE (IFC)
YES
TURN THERMOSTAT TO OFF VALVE SHUTS OFF FLAME OFF
NO
• CHECK FOR PROPER THERMOSTAT OPERATION.
• REMOVE VALVE LEAD AT (IFC)
IF VALVE CLOSED, RECHECK THERMOSTAT AND WIRING IF NOT, REPLACE VALVE
YES
DRAFT MOTOR STOPS AFTER 5 SEC.
NO
• CHECK FOR OPEN LIMIT, REPLACE (IFC)
YES
INDOOR BLOWER MOTOR STOPS AFTER 90/120/160/180 SECONDS
NO
• CHECK FOR OPEN LIMIT, REPLACE (IFC)
YES
TROUBLESHOOTING ENDS
REPEAT PROCEDURE UNTIL TROUBLEFREE OPERATION IS OBTAINED.
92-22744-12-00

FIGURE 64
INTEGRATED FURNACE CONTROL (IFC) UTEC 1012-925 (115 VAC IGNITER)

⚠ WARNING

HAZARDOUS VOLTAGE
LINE VOLTAGE
CONNECTIONS CAN
CAUSE PERSONAL
INJURY OR DEATH

DISCONNECT POWER BEFORE SERVICING.
SERVICE MUST BE BY A TRAINED, QUALIFIED SERVICE TECHNICIAN.

NOTE: STATIC DISCHARGE CAN DAMAGE INTEGRATED FURNACE CONTROL (IFC)
• "OK" LED BLINKS TO INDICATE EXTERNAL FAULTS:
(1) BLINK FOLLOWED BY A 2 SEC. PAUSE - 1 HOUR LOCKOUT
(2) BLINKS FOLLOWED BY A 2 SEC. PAUSE - PRESSURE SWITCH IS OPEN
(3) BLINKS FOLLOWED BY A 2 SEC. PAUSE - LIMIT SWITCH IS OPEN
(4) BLINKS FOLLOWED BY A 2 SEC. PAUSE - PRESSURE SWITCH SHORTED

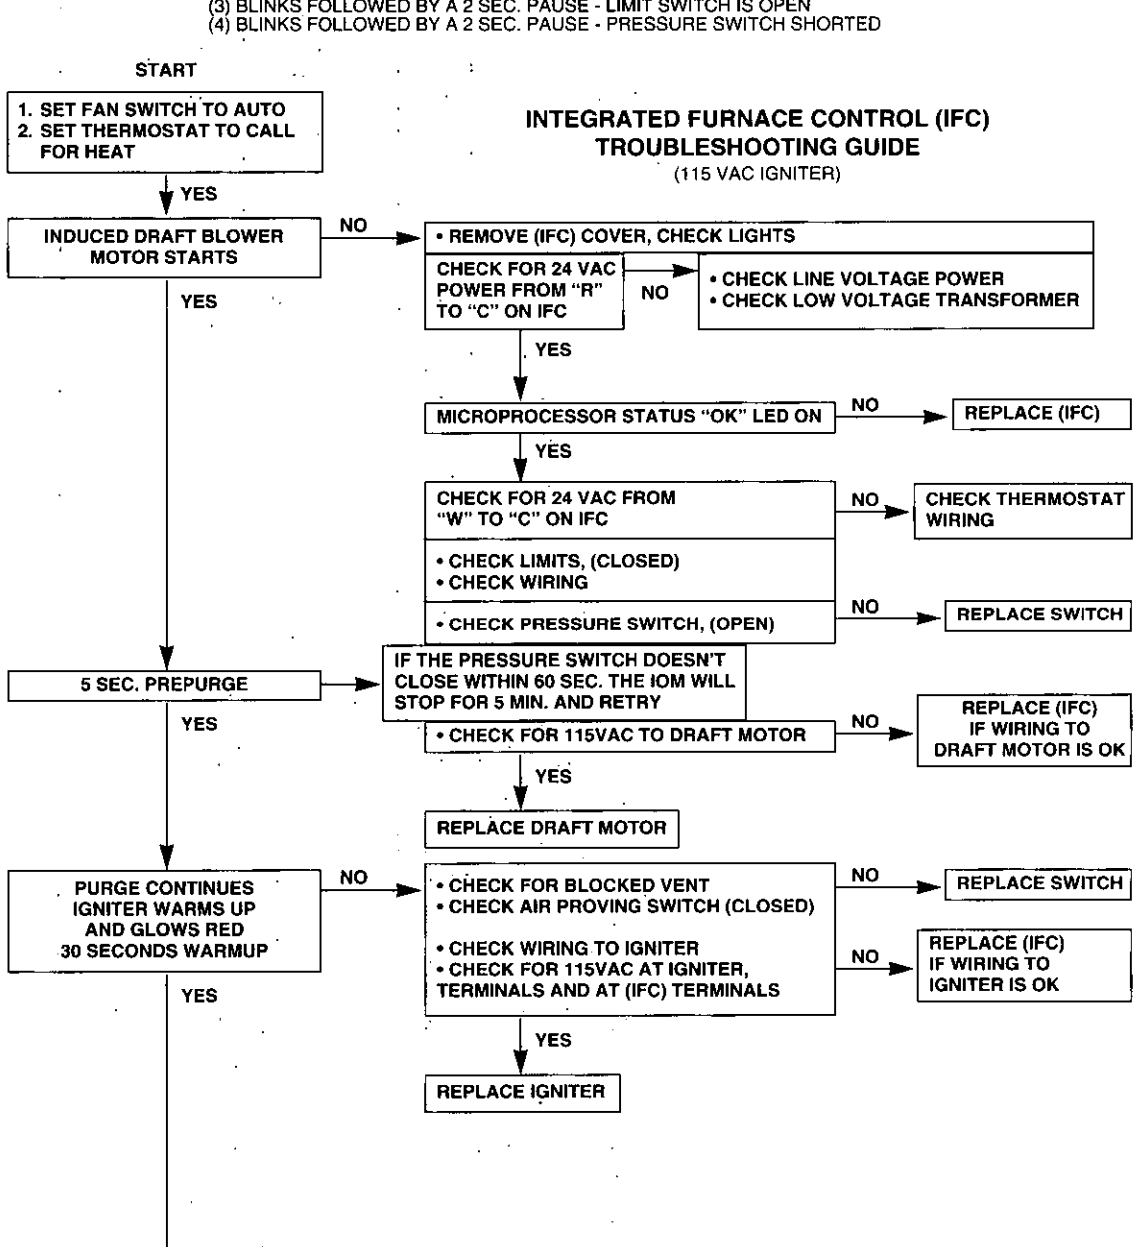

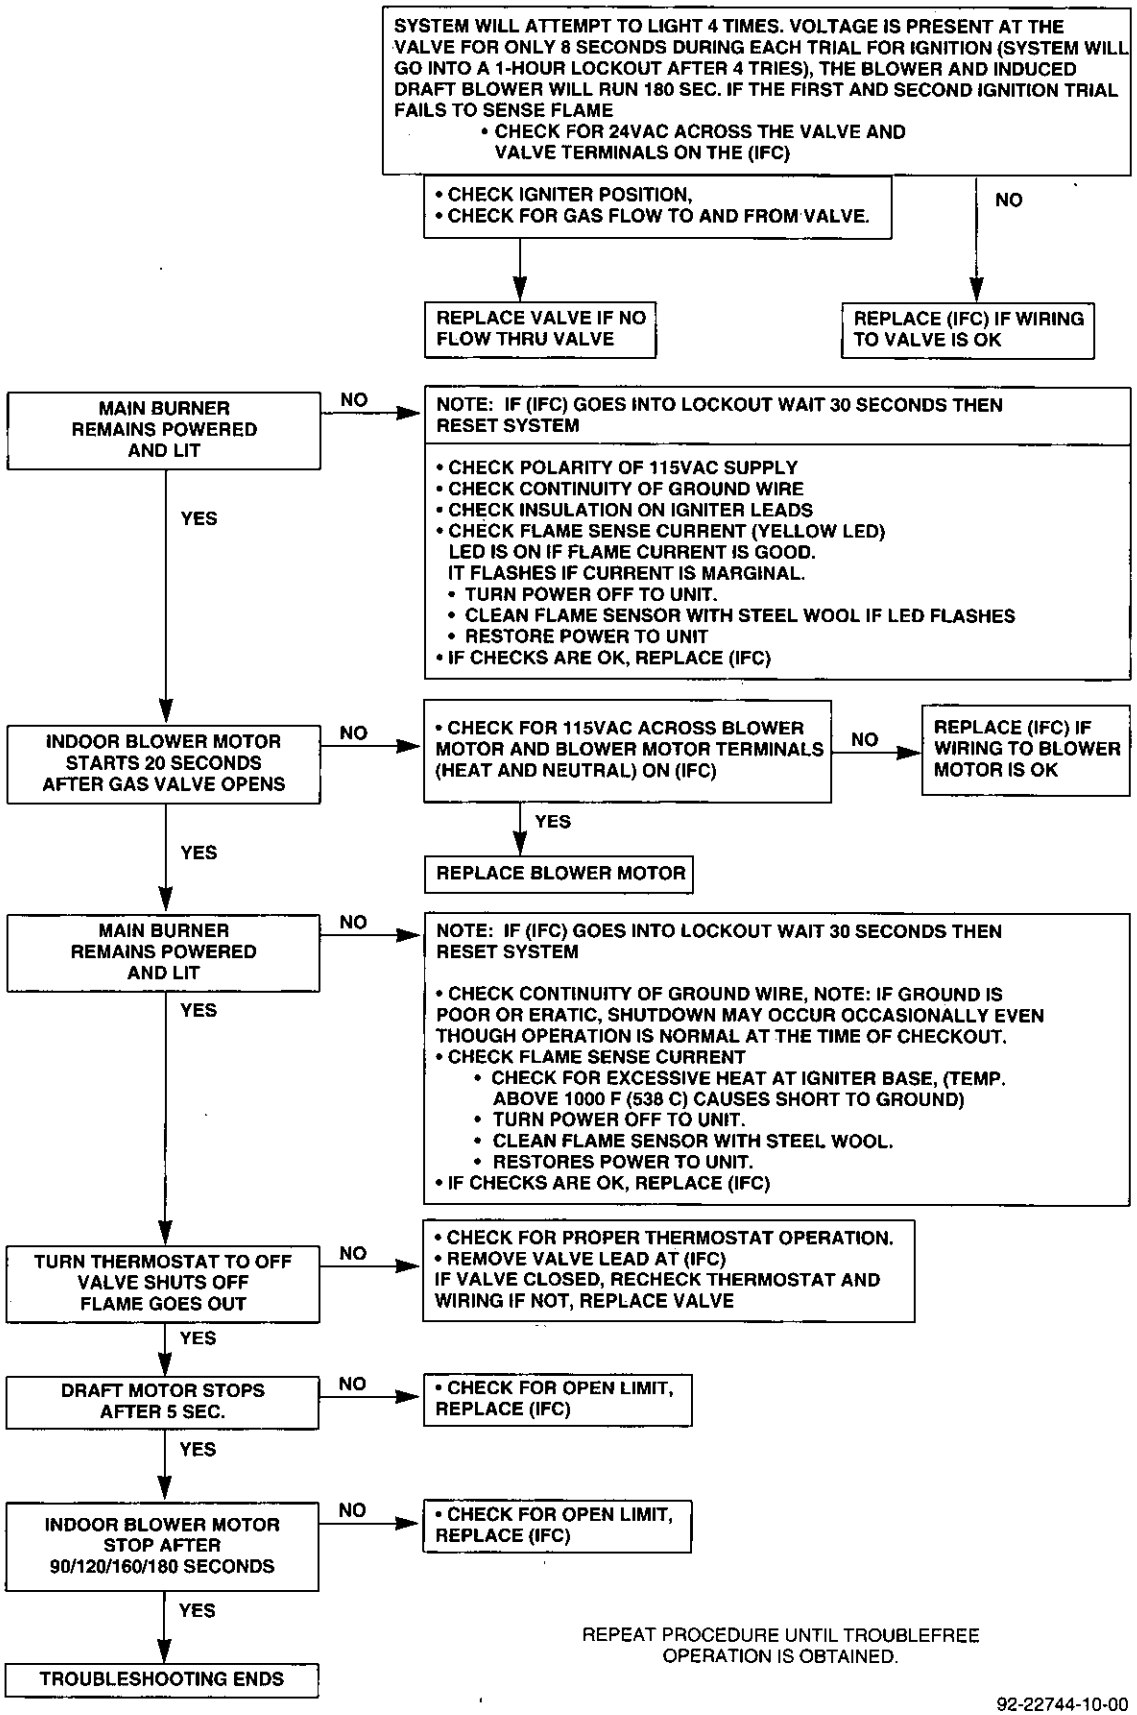
SYSTEM WILL ATTEMPT TO LIGHT 4 TIMES. VOLTAGE IS PRESENT AT THE VALVE FOR ONLY 8 SECONDS DURING EACH TRIAL FOR IGNITION (SYSTEM WILL GO INTO A 1-HOUR LOCKOUT AFTER 4 TRIES), THE BLOWER AND INDUCED DRAFT BLOWER WILL RUN 180 SEC. IF THE FIRST AND SECOND IGNITION TRIAL FAILS TO SENSE FLAME
• CHECK FOR 24VAC ACROSS THE VALVE AND VALVE TERMINALS ON THE (IFC)
• CHECK IGNITER POSITION,
• CHECK FOR GAS FLOW TO AND FROM VALVE.
NO
REPLACE VALVE IF NO FLOW THRU VALVE
REPLACE (IFC) IF WIRING TO VALVE IS OK
MAIN BURNER REMAINS POWERED AND LIT
NO
NOTE: IF (IFC) GOES INTO LOCKOUT WAIT 30 SECONDS THEN RESET SYSTEM
• CHECK POLARITY OF 115VAC SUPPLY
• CHECK CONTINUITY OF GROUND WIRE
• CHECK INSULATION ON IGNITER LEADS
• CHECK FLAME SENSE CURRENT (YELLOW LED)
LED IS ON IF FLAME CURRENT IS GOOD.
IT FLASHES IF CURRENT IS MARGINAL.
• TURN POWER OFF TO UNIT.
• CLEAN FLAME SENSOR WITH STEEL WOOL IF LED FLASHES
• RESTORE POWER TO UNIT
• IF CHECKS ARE OK, REPLACE (IFC)
YES
INDOOR BLOWER MOTOR STARTS 20 SECONDS AFTER GAS VALVE OPENS
NO
• CHECK FOR 115VAC ACROSS BLOWER MOTOR AND BLOWER MOTOR TERMINALS (HEAT AND NEUTRAL) ON (IFC)
NO
REPLACE (IFC) IF WIRING TO BLOWER MOTOR IS OK
YES
REPLACE BLOWER MOTOR
YES
MAIN BURNER REMAINS POWERED AND LIT
NO
NOTE: IF (IFC) GOES INTO LOCKOUT WAIT 30 SECONDS THEN RESET SYSTEM
• CHECK CONTINUITY OF GROUND WIRE, NOTE: IF GROUND IS POOR OR ERATIC, SHUTDOWN MAY OCCUR OCCASIONALLY EVEN THOUGH OPERATION IS NORMAL AT THE TIME OF CHECKOUT.
• CHECK FLAME SENSE CURRENT
• CHECK FOR EXCESSIVE HEAT AT IGNITER BASE, (TEMP. ABOVE 1000 F (538 C) CAUSES SHORT TO GROUND)
• TURN POWER OFF TO UNIT.
• CLEAN FLAME SENSOR WITH STEEL WOOL.
• RESTORES POWER TO UNIT.
• IF CHECKS ARE OK, REPLACE (IFC)
YES
TURN THERMOSTAT TO OFF VALVE SHUTS OFF FLAME GOES OUT
NO
• CHECK FOR PROPER THERMOSTAT OPERATION.
• REMOVE VALVE LEAD AT (IFC)
IF VALVE CLOSED, RECHECK THERMOSTAT AND WIRING IF NOT, REPLACE VALVE
YES
DRAFT MOTOR STOPS AFTER 5 SEC.
NO
• CHECK FOR OPEN LIMIT, REPLACE (IFC)
YES
INDOOR BLOWER MOTOR STOP AFTER 90/120/160/180 SECONDS
NO
• CHECK FOR OPEN LIMIT, REPLACE (IFC)
YES
TROUBLESHOOTING ENDS
REPEAT PROCEDURE UNTIL TROUBLEFREE OPERATION IS OBTAINED.
92-22744-10-00

FIGURE 65
UGRA AND UGTA MODELS WITH HONEYWELL S9201E2001 OR UTEC 1012-920 CONTROL BOARD & HSI 34" 90 PLUS CONDENSING GAS FURNACE WIRING DIAGRAM

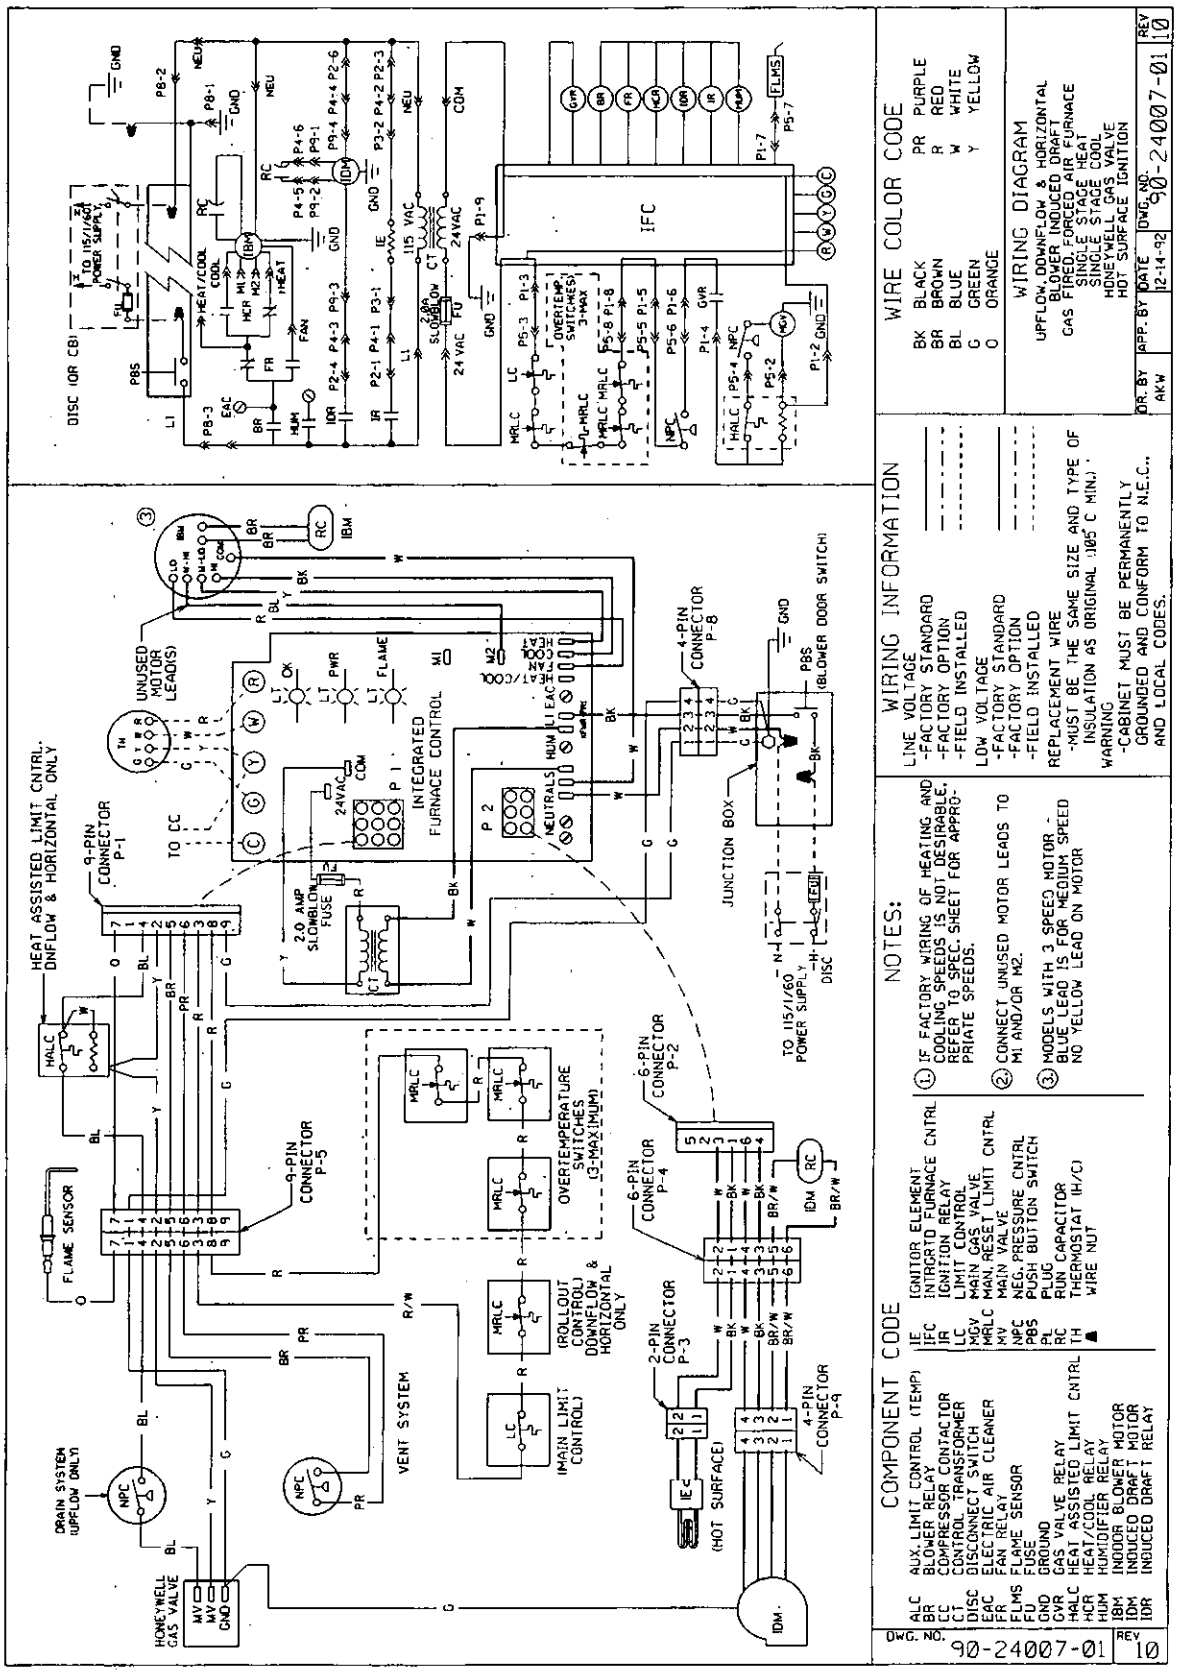

➤ **FIGURE 66**
UGRA AND UGTA MODELS WITH UTEC 1012-928 OR JOHNSON CONTROLS G961DAJ-2401 CONTROL BOARD & SPARK IGNITION
34" 90 PLUS CONDENSING GAS FURNACE WIRING DIAGRAM

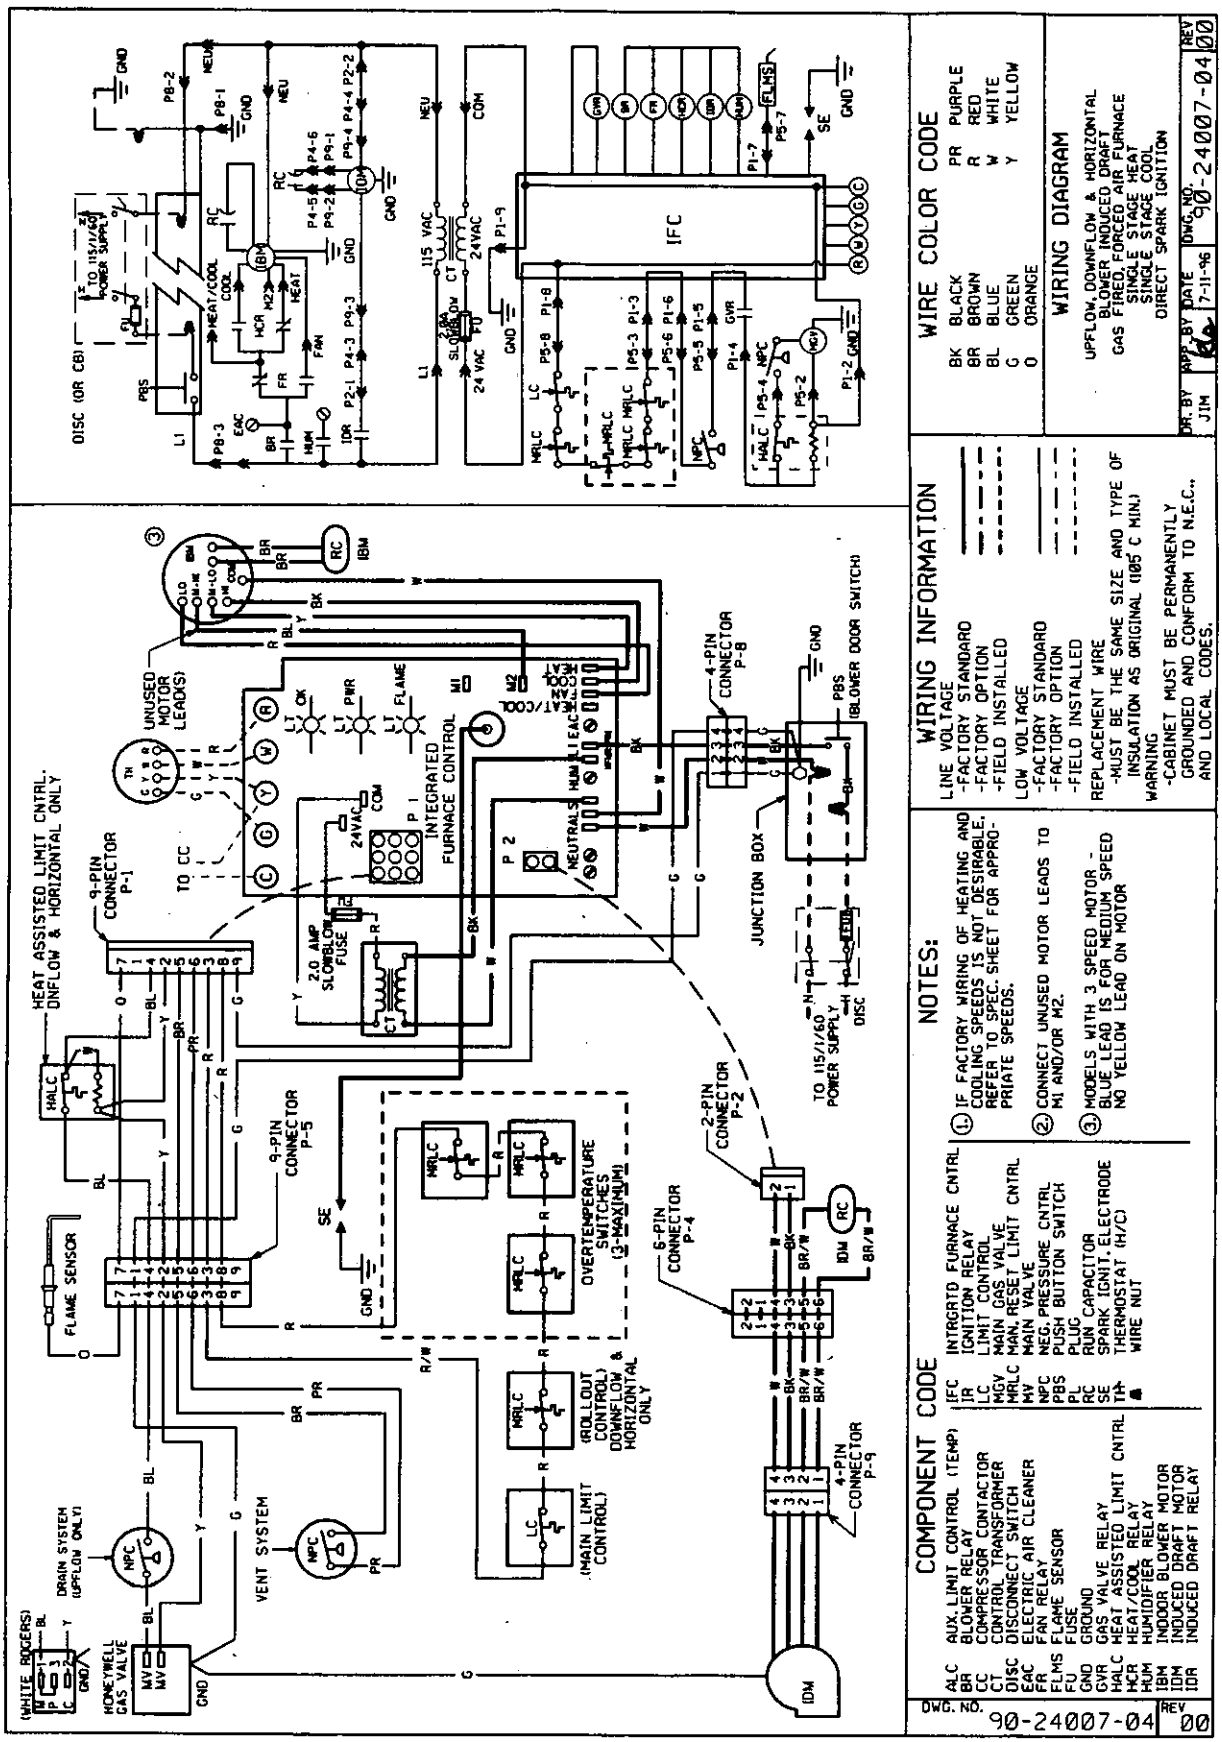
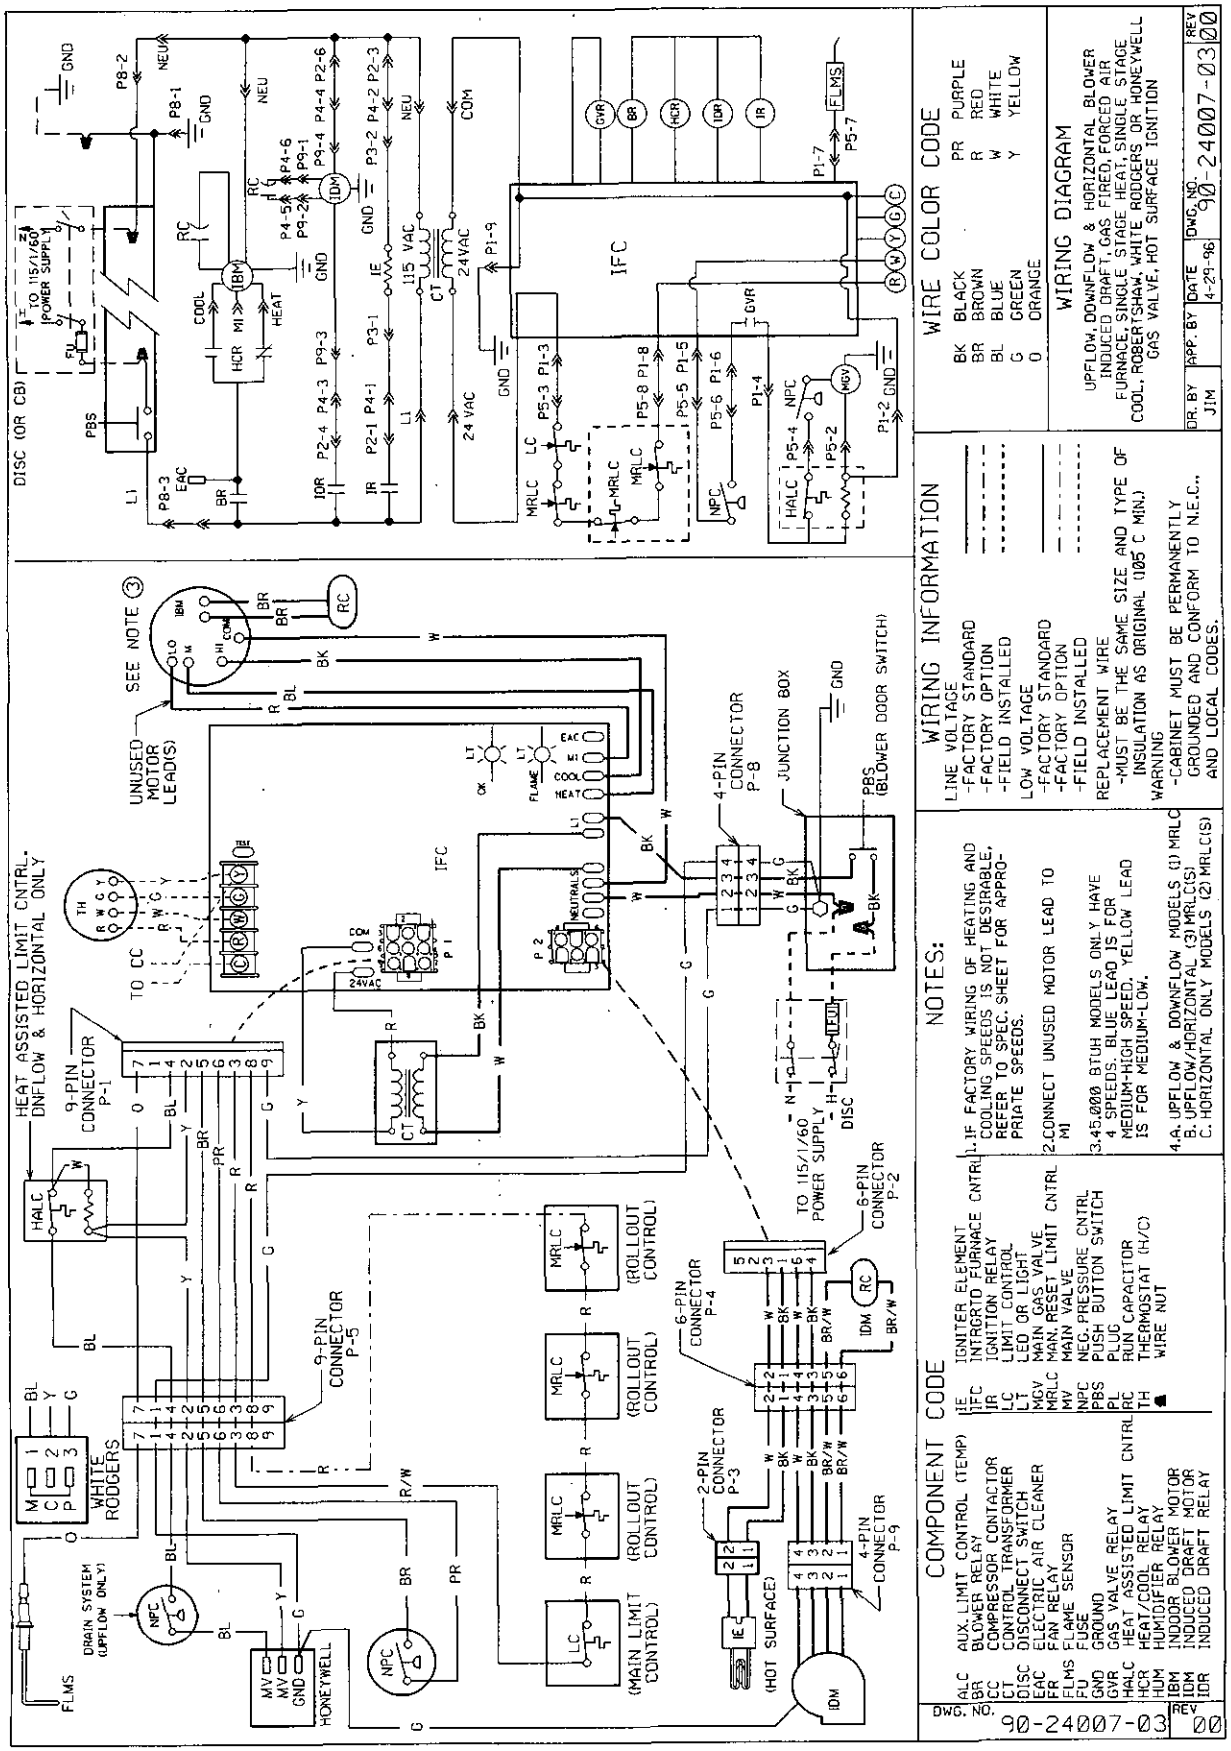
FIGURE 67
UGRJ AND UGTJ MODELS WITH UTECH 1012-925 CONTROL BOARD & HSI
34" 90 PLUS CONDENSING GAS FURNACE WIRING DIAGRAM